

NOKIA

Nokia 105 4G (2021)

User Guide

8 Product and safety information	17
Product information	17
Product features	19
Product specifications	20
Product safety	20
Product use and safety	21
Battery and charger information	21
Battery	22
Charger	23
Charging	23
Protect your device from harmful content	23
Content protection	23
Content protection and parental controls	24
Specific Absorption Rate (SAR)	24
Product safety and other notices	25
Copyrights and other notices	25

1 About this user guide

 


Important: For important information on the safe use of your device and battery, read “Product and safety information” before you take the device into use. To find out how to get started with your new device, read the user guide.

2 Get started

KEYS AND PARTS


Your phone

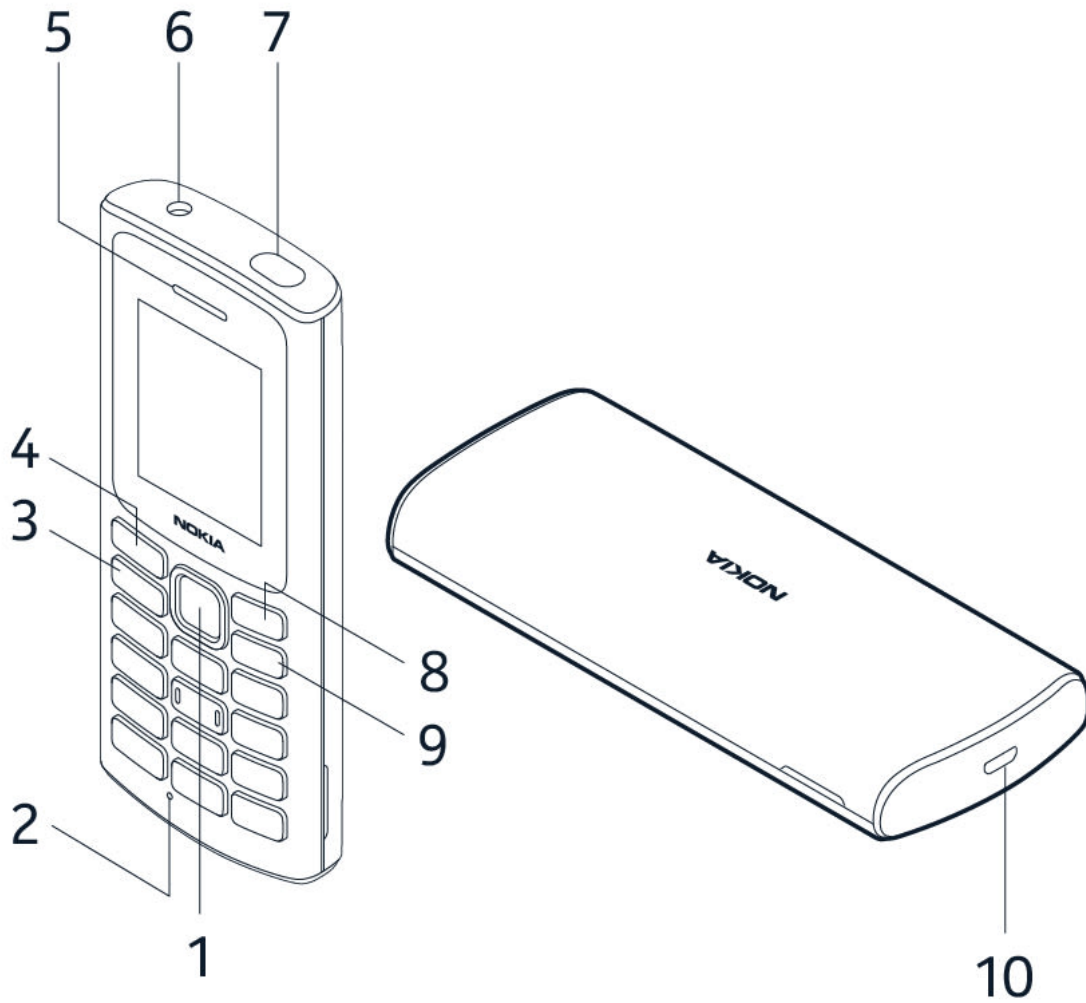

This user guide applies to the following models: TA-1381, TA-1375, TA-1378, TA-1385, TA-1389, TA-1393.


- | | |
|-----------------------|------------------------|
| 1. Scroll key | 6. Headset connector |
| 2. Microphone | 7. Flash |
| 3. Call key | 8. Right selection key |
| 4. Left selection key | 9. Power/End key |
| 5. Earpiece | 10. USB connector |

 Open the back cover

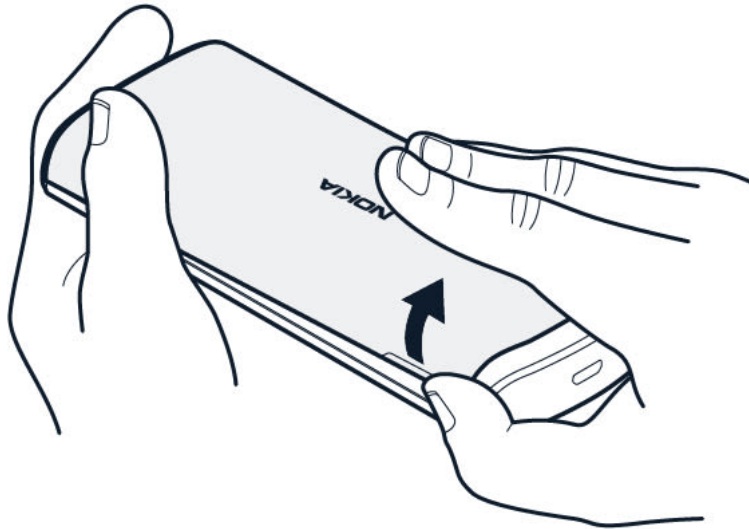


1. Put your fingernail in the small slot at the bottom of the phone, lift and remove the cover.
2. If the battery is in the phone, lift it out.

 Insert the SIM card

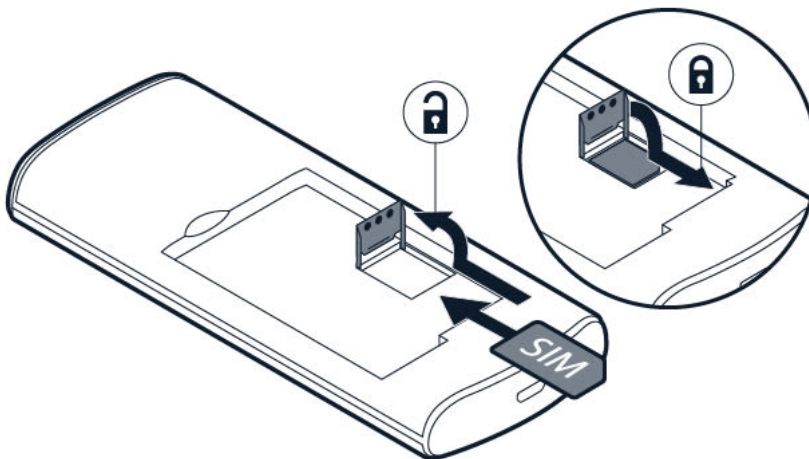

1. Slide the SIM card holder to the left and open it up.
2. Place the nano-SIM in the SIM slot face down.
3. Close down the holder, and slide it to the right to lock it in place.

 Insert the second SIM

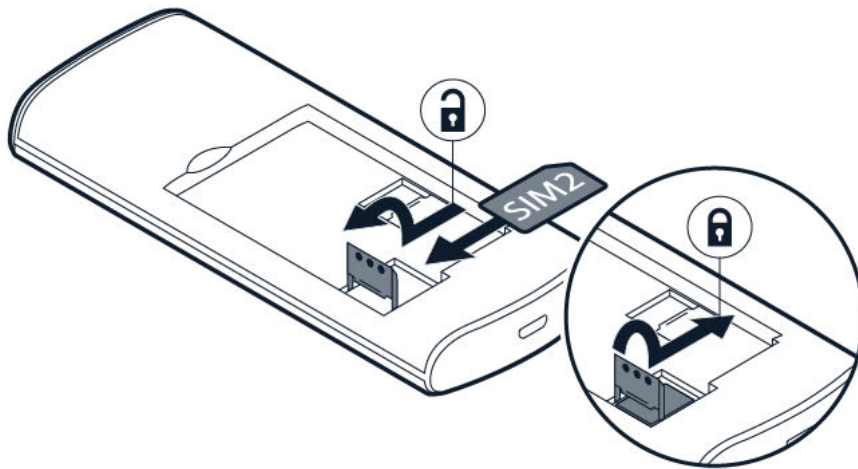

1. Slide the SIM card holder of the SIM2 slot to the right and open it up.
2. Place the nano-SIM in the SIM2 slot face down.
3. Close down the holder, and slide it to the left to lock it in place. Both SIM cards are available at the same time when the device is not being used, but while one SIM card is active, for example, making a call, the other may be unavailable.



Tip: To find out if your phone can use 2 SIM cards, see the label on the sales box. If there are 2 IMEI codes on the label, you have a dual-SIM phone.

000000 000 000000

📶 00 00000 000 000000!

000000 0000 000000 0000

000000 000000 00000000000 000000000000 0000000 000000 00000 00000, 00000000 000000 0000 0000000000 00000 0000 00000000 00000 0000 000000!

0000000000 000000 00000

1. 00000000000000000000 00000 0000000000 00000000000 0000000 000000!
2. 0000000 00000 0000000000 0000000 0000000 00000 0000, 0000000000000000 0000 00000 00000, 0000000 0000000000 0000000000 00000 0000000000 000000!

Enabling USB tethering allows you to share your phone's internet connection with a computer or another phone. To enable USB tethering, go to Settings > Network & internet > USB tethering. For more information, see the USB tethering section.





 
USB tethering: This feature allows you to share your phone's internet connection with a computer or another phone. To enable USB tethering, go to Settings > Network & internet > USB tethering. For more information, see the USB tethering section.

KEYPAD

Use the phone keys

- To see the apps and features of your phone, on the home screen, select **Menu**.
- To go to an app or feature, press the scroll key up, down, left, or right. To open the app or feature, press the scroll key.
- If you have selected the zoomed menu view, press the scroll key up or down to go to an app or feature. To open the app or feature, press the scroll key.

Lock the keypad

To avoid accidentally pressing the keys, lock the keypad: press  > . To unlock the keypad, press the scroll key, and select **Unlock** > .

Write with the keypad

Press a key repeatedly until the letter is shown.

To type in a space press **0**.

To type in a special character or punctuation mark, select  > **Insert options** > **Insert symbol**.

To switch between character cases, press **#** repeatedly.

To type in a number, press and hold a number key.

3 𐀀, 𐀀𐀀𐀀𐀀𐀀𐀀 𐀀𐀀 𐀀𐀀𐀀𐀀𐀀

CALLS

𐀀𐀀 𐀀𐀀

𐀀𐀀𐀀𐀀𐀀 𐀀𐀀𐀀𐀀 𐀀𐀀𐀀𐀀 𐀀𐀀 𐀀𐀀𐀀𐀀 𐀀𐀀 𐀀𐀀𐀀𐀀𐀀 𐀀𐀀 𐀀𐀀𐀀𐀀𐀀





1. 𐀀𐀀 𐀀𐀀𐀀𐀀 𐀀𐀀𐀀 𐀀𐀀𐀀𐀀 𐀀𐀀𐀀𐀀𐀀𐀀𐀀𐀀𐀀 𐀀𐀀𐀀 𐀀𐀀𐀀 𐀀𐀀𐀀𐀀𐀀𐀀 + 𐀀𐀀𐀀𐀀 𐀀𐀀𐀀 𐀀𐀀𐀀 𐀀𐀀𐀀 * 𐀀𐀀'𐀀𐀀𐀀 𐀀𐀀𐀀𐀀𐀀
2. 𐀀𐀀𐀀𐀀𐀀 𐀀𐀀𐀀𐀀𐀀𐀀𐀀 𐀀𐀀 𐀀𐀀 𐀀𐀀 𐀀𐀀 𐀀𐀀𐀀𐀀𐀀𐀀 𐀀𐀀𐀀 𐀀𐀀 𐀀𐀀 𐀀𐀀𐀀𐀀𐀀
3. 𐀀𐀀 𐀀𐀀 𐀀𐀀𐀀, 𐀀𐀀 𐀀𐀀𐀀𐀀

𐀀𐀀𐀀 𐀀𐀀𐀀 𐀀𐀀𐀀𐀀 𐀀𐀀



𐀀𐀀 𐀀𐀀𐀀𐀀

CONTACTS

Add a contact

1. Select **Menu** > **Contacts** >  > **New**.
2. Select where to save the contact.
3. Select **Name**, write the name, and select .
4. Select **Mobile** or **Home number**, type in the number, and select .
5. Select .

Save a contact from call log

1. Select **Menu** > **Call logs**, and select the call type.
2. Scroll to the number you want to save, select  > **Add to contacts** > **Add to new contact**.
3. Select where to save the contact.
4. Add the contact's name and select .

Call a contact

You can call a contact directly from the contacts list.

Select **Menu** > **Contacts**, scroll to the contact you want to call, and press the call key.

SEND MESSAGES

Write and send messages

1. Select **Menu** > **Messages** > **Create message**.
2. Write your message.
3. To insert numbers or symbols to the message, select **≡** > **Insert options** > **Insert number** or **Insert symbol**.
4. Select **≡** > **Send**. If asked, select which SIM to use.
5. Type in a phone number, or select **Search** and a recipient from your contacts list.
6. Select **OK**.

4 壁紙をカスタマイズしてホーム画面をカスタマイズする

CHANGE THE LOOK OF YOUR HOME SCREEN

Choose a new wallpaper

1. Select **Menu** > **Settings** > **Display** > **Wallpaper settings**.
2. Select **Static wallpaper** to select from pre-defined wallpapers, or **More pictures** to select a picture from your phone or memory card.
3. Scroll to the wallpaper you want, and select **Select**.

PROFILES

Set a profile


There are several profiles that you can use in different situations. There is, for example, a silent profile for when you cannot have sounds on, and an outdoor profile with loud tones.

1. Select **Menu** > **Settings** > **Profiles**.
2. To adjust a profile, scroll to it, and select **≡** > **Settings**. Change the settings you want.
3. To set on a profile, scroll to it, and select **Select**.

ADD SHORTCUTS

You can add shortcuts to different apps and settings on your home screen.

Edit Go to settings

On the bottom left of your home screen is , which contains shortcuts to various apps and settings. Select the shortcuts that are the handiest for you.

1. Select **Menu** > **Settings** > **Phone settings** > **Go to settings**.
2. Select **Select options**.
3. Scroll to each shortcut you want to have on the list and select **Mark**.
4. Select **✓** > **Yes** to save the changes.

You can also reorganize your list.

1. Select **Organise**.
2. Scroll to the item you want to move, select **Move** and where you want to move it.
3. Select **← >** **Yes** to save the changes.

ACCESSIBILITY

You can change various settings to make using your phone easier.

Change the menu view

You can select to see several apps in the apps menu at the same time, or only one app.

1. Select **Menu > Settings > Display > Menu display**.
2. Select **Zoomed** to see only one app at a time. Scroll up or down to move between the apps in the menu.
3. To go back to the standard view, select **Standard**.

Increase the text size

If you have trouble reading the text on the phone display, change the text size.

Select **Menu > Settings > Display > Text size > Large**.

Use text to speech

You can set the phone to read items on the display out loud.



Select **Menu > Extras > Readout > Speech > On**, and select the items you want the phone to read out loud, such as the menu or messages, for example.

Readout is not available in all languages. For the available languages, see [your phone's website](#).

5

LISTEN TO RADIO

Listen to your favorite radio stations

Select **Menu** > **FM radio**. Your phone searches for stations automatically when you turn the radio on. To change the volume, scroll up or down. To save a station, select  > **Save**. To switch to a saved station, select  > **Channel list**, and select the station. To close the radio, select X.

6 時間, 日付を手動で設定する



SET THE TIME AND DATE MANUALLY

Change the time and date

1. Select **Menu** > **Settings** > **Phone settings** > **Time & date**.
2. Select **Update time settings** and switch **Auto update time** off.
3. To set the time, select **Set time** and enter the time.
4. To set the date, select **Set date** and enter the date.

 

ALARM CLOCK

Set an alarm

1. Select **Menu** > **Alarm**.
2. Select  and enter the alarm time and other details.
3. Select .

CALENDAR


Add a calendar event

1. Select **Menu** > **Extras** > **Calendar**.
2. Scroll to a date and select  > **Add new schedule**.
3. Enter the event details, and select .

CALCULATOR

Use the calculator

1. Select **Menu** > **Extras** > **Calculator**.
2. Enter the first factor of your calculation, use the scroll key to select the operation, and enter the second factor.
3. Press the scroll key to get the result of the calculation.

Select  to empty the number fields.

7 Empty your phone

REMOVE PRIVATE CONTENT FROM YOUR PHONE

If you buy a new phone, or otherwise want to dispose of or recycle your phone, here's how you can remove your personal info and content. Note that it is your responsibility to remove all private content.

Restore factory settings

1. To reset your phone to its original settings, select **Menu** > **Settings** > **Phone settings** > **Restore factory settings**.
2. Enter your security code, or if you haven't changed the code, enter the pre-set code 12345.
3. Select **OK** > **Yes**.

If you want to reset your phone to its original settings and remove all your data from the phone, on the home screen, type in ***#7370#**.

Certain features, functionality and product specifications may be network dependent and subject to additional terms, conditions, and charges.

All specifications, features and other product information provided are subject to change without notice.

HMD Global Privacy Policy, available at <http://www.hmd.com/privacy>, applies to your use of the device.

HMD Global Oy is the exclusive licensee of the Nokia brand for phones & tablets. Nokia is a registered trademark of Nokia Corporation.

This product includes open source software. For applicable copyright and other notices, permissions, and acknowledgements, select `*#6774#` on the home screen.