


HMD

Nokia 110 (2019)

User Guide

8 Empty your phone	18
Restore factory settings	18
9 Product and safety information	19
Safety information	19
Warranty	22
Safety information	22
Safety information	23
Safety information	24
Safety information	24
Safety information	25
Safety information	25
Safety information	25
Safety information	26
Safety information	26
Safety information	27
Safety information	27
Safety information (SAR)	27
Safety information	28
Copyrights and other notices	29

 
1 About this user guide

-  **Important:** For important information on the safe use of your device and battery, read “Product and safety information” before you take the device into use. To find out how to get started with your new device, read the user guide.

2 ■■■■■■■■■■

KEYS AND PARTS

Your phone

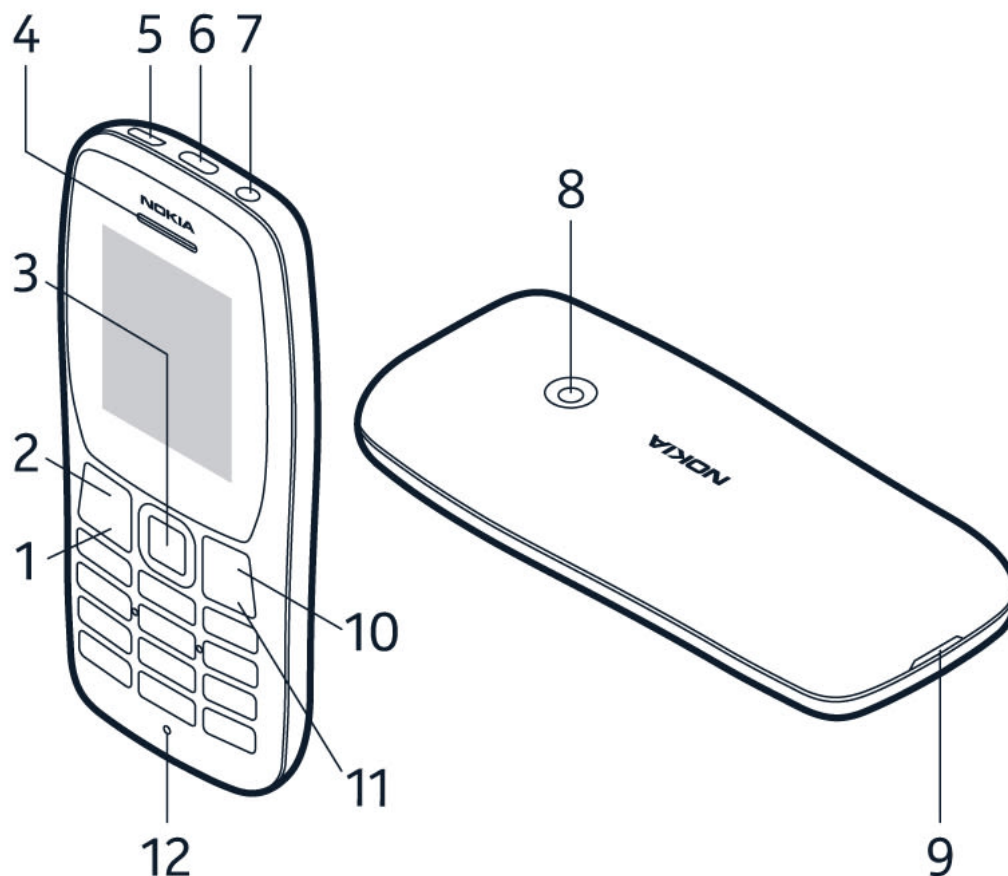

This user guide applies to the following model: TA-1192

- | | |
|--|----------------------------|
| 1. Call key | 7. Headset connector |
| 2. Left selection key | 8. Camera |
| 3. Scroll key. Press to access your apps and select items. | 9. Back cover opening slot |
| 4. Earpiece/Loudspeaker | 10. Right selection key |
| 5. USB connector | 11. End/Power key |
| 6. Flashlight | 12. Microphone |

Avoid touching the antenna area while the antenna is in use. Contact with antennas affects the communication quality and may reduce battery life due to higher power level during

2. [REDACTED], [REDACTED]
[REDACTED]

[REDACTED], [REDACTED]
[REDACTED]

[REDACTED]: [REDACTED] USB [REDACTED]
[REDACTED] USB
[REDACTED]
[REDACTED]
[REDACTED]

KEYPAD

Use the phone keys

- To see the apps and features of your phone, on the home screen, select **Menu**.
- To go to an app or feature, press the scroll key up, down, left, or right. To open the app or feature, press the scroll key.

Lock the keypad

To avoid accidentally pressing the keys, lock the keypad: select **Go to** > **Lock keypad**. To unlock the keypad, select **Unlock**.

Switch on the flashlight

On the home screen, quickly scroll up twice to switch on the flashlight.

To switch off the flashlight, scroll up once.

Do not shine the light in anyone's eyes.

Write with the keypad

Press a key repeatedly until the letter is shown.

To type in a space press **0**.


To type in a special character or punctuation mark, select **Opt.** > **Insert options** > **Insert symbol**.

To switch between character cases, press **#** repeatedly.

 
To type in a number, press and hold a number key.

Call a contact

You can call a contact directly from the contacts list.

1. Select **Menu** >  > **Names**.
2. Scroll to a contact and press the call key.

SEND MESSAGES





1. **Menu** > `<fp>messaging-alternative-s30-n</fp>` > **Messages** > **Compose**
2. **Phone number**
3. **Phone number** > **Send**, **Phone number** > **Send**
4. **Phone number**

Writing options


You can find different options for writing a message under **Opt.** when you are in the message field. You can, for example, insert symbols and save messages.

  To switch on predictive text, select **Opt.** > **Dictionary**.



1. > >

 2.



SETTINGS FOR GO TO

You can add quick links to different applications and settings to **Go to**.

Edit Go to settings

On the bottom left of the home screen, you have **Go to**, and when you select it, you can quickly access different applications and settings. You can change the applications and settings to your liking.


1. Select **Menu** > > **Go to settings**.
2. Select **Select options**.
3. Scroll to a shortcut you want to add on the **Go to** list on the home screen and **Mark** them.
4. Select **Done** to exit the list, and **Yes** to save changes.

You can also reorganize your **Go to** list.

1. Select **Organise**.
2. Scroll to an item you want to move and select **Move**.
3. Select if you want to move it up, down, to top, or to bottom of the list.
4. Select **Back** to exit the list, and **OK** to save changes.

PERSONALIZE YOUR SIM CARDS

Edit the SIM card settings

1. Select **Menu** >  > **Dual SIM settings**.
2. Select **SIM name**, and enter a name for your SIM card.
3. Select an icon for the SIM card.

5 Camera




PHOTOS AND VIDEOS

Take a photo

1. Select **Menu** > .
2. To take a photo, press the scroll key.

To see the photo you just took, select **Opt.** > **View photos**.

Record a video

1. To switch the video camera on, select **Menu** >  and scroll right.
2. To start recording, select .
3. To stop recording, select .


To see the video you just recorded, select  > **View videos**.

6

FIND AND SAVE RADIO STATIONS


Connect a compatible headset. It acts as an antenna.

Find your favorite radio stations

1. Select **Menu** > .
2. When the phone asks if you want to search all available channels, select **OK**.
3. To switch between stations, scroll up or down.
4. To save a found channel, select **Opt.** > **Save channel**.

LISTEN TO THE RADIO


 
Listen to your favorite radio stations

Select **Menu** > . To change the volume, scroll left or right. To listen to the radio using the loudspeaker, select **Opt.** > **Loudspeaker**. Keep the headset connected. To close the radio, select **Stop**.



1.  >  

2.    , 
    

3.     



COPYRIGHTS AND OTHER NOTICES

Copyrights

The availability of products, features, apps and services may vary by region. For more info, contact your dealer or your service provider. This device may contain commodities, technology or software subject to export laws and regulations from the US and other countries. Diversion contrary to law is prohibited.

The contents of this document are provided "as is". Except as required by applicable law, no warranties of any kind, either express or implied, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose, are made in relation to the accuracy, reliability or contents of this document. HMD Global reserves the right to revise this document or withdraw it at any time without prior notice.

To the maximum extent permitted by applicable law, under no circumstances shall HMD Global or any of its licensors be responsible for any loss of data or income or any special, incidental, consequential or indirect damages howsoever caused.

Reproduction, transfer or distribution of part or all of the contents in this document in any form without the prior written permission of HMD Global is prohibited. HMD Global operates a policy of continuous development. HMD Global reserves the right to make changes and improvements to any of the products described in this document without prior notice.

HMD Global does not make any representations, provide a warranty, or take any responsibility for the functionality, content, or end-user support of third-party apps provided with your device. By using an app, you acknowledge that the app is provided as is.

Downloading of maps, games, music and videos and uploading of images and videos may involve transferring large amounts of data. Your service provider may charge for the data transmission. The availability of particular products, services and features may vary by region. Please check with your local dealer for further details and availability of language options.

Certain features, functionality and product specifications may be network dependent and subject to additional terms, conditions, and charges.

All specifications, features and other product information provided are subject to change without notice.

HMD Global Privacy Policy, available at <http://www.hmd.com/privacy>, applies to your use of the device.

HMD Global Oy is the exclusive licensee of the Nokia brand for phones & tablets. Nokia is a registered trademark of Nokia Corporation.

The Bluetooth word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by HMD Global is under license.