

NOKIA

Nokia 130 (2017)

Korisnički vodič

Sadržaj

1	O ovom korisničkom vodiču	5
2	Prvi koraci	6
	Keys and parts	6
	Set up and switch on your phone	7
	Charge your phone	10
	Lock or unlock the keys	10
3	Osnove	11
	Get the most out of the two SIM cards	11
	Explore your phone	11
	Change the volume	15
	Change your ring or message tone	15
	Change the wallpaper	16
	Write text	16
4	Calls, contacts, and messages	17
	Calls	17
	Contacts	17
	Send and receive messages	18
5	Personalize your phone	19
	Change your ring or message tone	19
	Change the look of your home screen	19
	Profiles	20
	Settings for Go to	20
6	Kamera	22
	Photos	22
	Videos	22

7 Muzika i video zapisi	23
Music player	23
Video player	23
8 Radio	24
Find and save radio stations	24
Listen to radio	24
9 Clock, calendar, and calculator	25
Set the time and date manually	25
Alarm clock	25
Calendar	25
Calculator	26
10 Bluetooth	27
Activate Bluetooth	27
Use Slam	27
11 Copy and remove content	28
Copy content	28
Remove private content from your phone	28
Restore factory settings	29
12 Settings	30
Call settings	30
Phone settings	30
Enhancements	30
Security settings	30
Message settings	31

13 Informacije o proizvodu i sigurnosne informacije	32
For your safety	32
Network services and costs	34
Emergency calls	34
Vodite računa o svom uređaju	35
Recikliranje	36
Simbol precrtane kante na točkovima	36
Battery and charger information	37
Mala djeca	37
Medicinski uređaji	38
Implantirani medicinski uređaji	38
Sluh	38
Zaštitite uređaj od štetnog sadržaja	38
Vozila	39
Potencijalno eksplozivna okruženja	39
Informacije o certificiranju (SAR)	39
Copyrights and other notices	40
O upravljanju digitalnim pravima	41

1 O ovom korisničkom vodiču



 
Važno: Pročitajte važne informacije o sigurnom korištenju vašeg uređaja i baterije u odlomku "Informacije o proizvodu i sigurnosti" prije nego što počnete koristiti uređaj. Da biste saznali kako započeti s novim uređajem, pročitajte korisnički vodič.

2 Prvi koraci

KEYS AND PARTS

Explore the keys and parts of your new phone.

Your phone

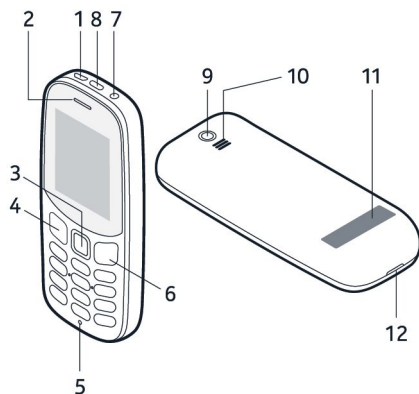

The keys and parts of your phone are:

- | | |
|-------------------------------------|-----------------------------|
| 1. Charger connector | 7. Headphone connector |
| 2. Earpiece | 8. Flash light |
| 3. Selection key | 9. Camera |
| 4. Function key, call key | 10. Loudspeaker |
| 5. Microphone | 11. Antenna area |
| 6. Function key, end call/power key | 12. Back cover opening slot |

To lock the keys, select **Go to** > **Lock keypad**.

To unlock the keys, quickly press **Ⓜ**, and select **Unlock**.

To quickly switch the flash light on, in the idle screen, press the scroll key up twice. To switch the light off, press the scroll key up once more. Do not shine the light in anyone's eyes.

Avoid touching the antenna area while the antenna is in use. Contact with antennas affects the communication quality and may reduce battery life due to higher power level during operation.

Do not connect to products that create an output signal, as this may damage the device. Do not connect any voltage source to the audio connector. If you connect an external device or headset, other than those approved for use with this device, to the audio connector, pay special attention to volume levels.

Parts of the device are magnetic. Metallic materials may be attracted to the device. Do not place credit cards or other magnetic storage media near the device, because info stored on them may be erased.

Some of the accessories mentioned in this user guide, such as charger, headset, or data cable, may be sold separately.

- ⓘ **Note:** You can set the phone to ask for a security code. The pre-set code is 12345. Change it to protect your privacy and personal data. Note, however, that when you change the code, you need to remember the new code, as HMD Global is not able to open or bypass it.

SET UP AND SWITCH ON YOUR PHONE

Learn how to insert the SIM card, memory card, and battery, and how to switch on your phone.

 
 
Mini SIM



Important: This device is designed to be used with a mini SIM card only. Use of incompatible SIM cards may damage the card or the device, and may corrupt data stored on the card.



- ⓘ **Note:** Switch the device off and disconnect the charger and any other device before removing any covers. Avoid touching electronic components while changing any covers. Always store and use the device with any covers attached.

Set up your phone (single SIM)

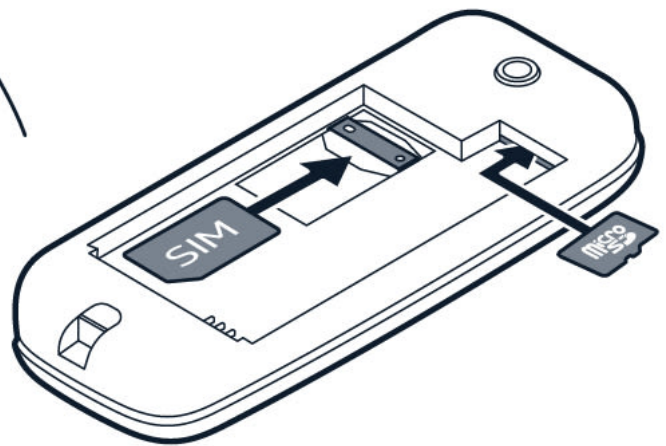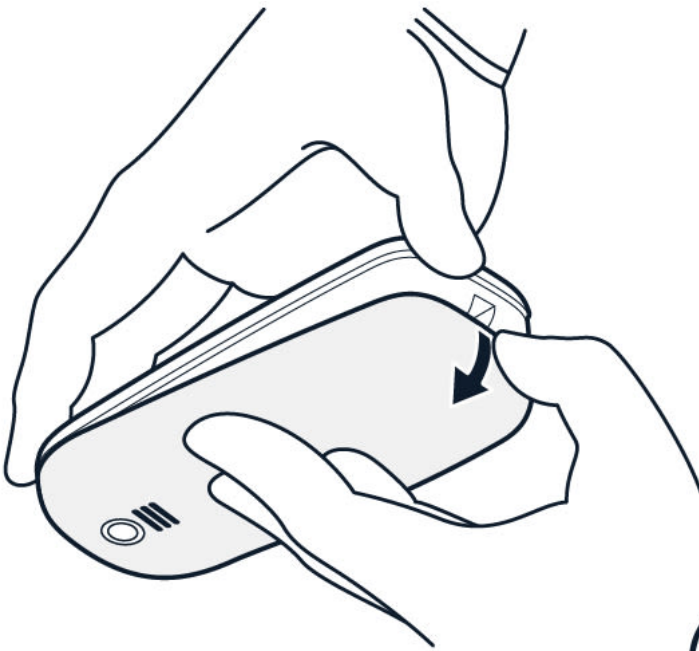

1. Place your fingernail in the small slot at the bottom of the phone, lift and remove the cover.
2. If the battery is in the phone, lift it out.
3. Slide the SIM into the SIM slot with the contact area face down.
4. If you have a memory card, slide the memory card into the memory card slot.
5. Line up the battery contacts, and put the battery in.
6. Replace the back cover.

  Set up your phone (dual SIM)

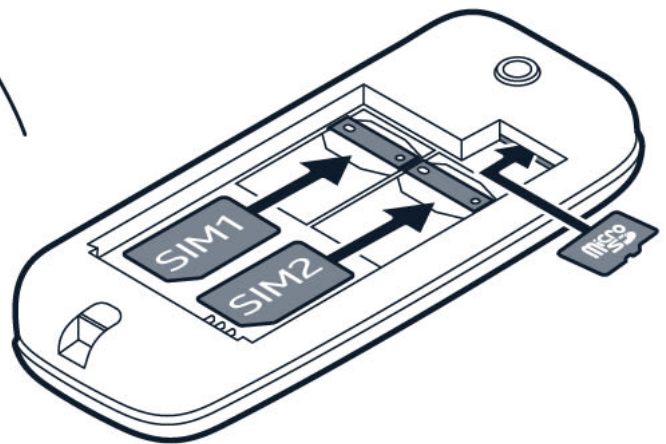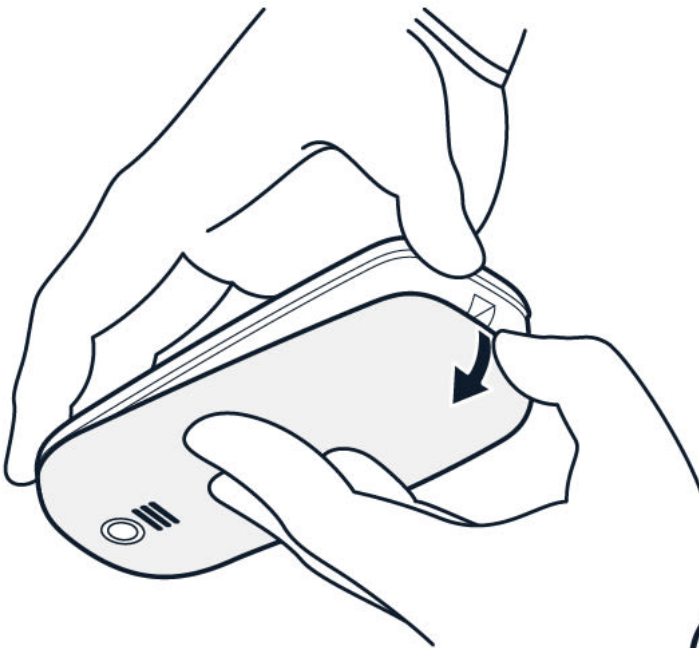

1. Place your fingernail in the small slot at the bottom of the phone, lift and remove the cover.
2. If the battery is in the phone, lift it out.
3. Slide the first SIM into SIM slot 1 with the contact area face down. Slide the second SIM into SIM slot 2. Both SIM cards are available at the same time when the device is not being used, but while one SIM card is active, for example, making a call, the other may be unavailable.
4. If you have a memory card, slide the memory card into the memory card slot.
5. Line up the battery contacts, and put the battery in.
6. Replace the back cover.

Switch on your phone

Press and hold .

Remove the SIM card

Open the back cover, remove the battery, and slide the SIM out.

Remove the memory card

Open the back cover, remove the battery, and pull the memory card out.

CHARGE YOUR PHONE

Your battery has been partially charged at the factory, but you may need to recharge it before you can use your phone.

Charge the battery

1. Plug the charger into a wall outlet.
2. Connect the charger to the phone. When done, unplug the charger from the phone, then from the wall outlet.

If the battery is completely discharged, it may take several minutes before the charging indicator is displayed.




Tip: You can use USB charging when a wall outlet is not available. Data can be transferred while charging the device. The efficiency of USB charging power varies significantly, and it may take a long time for charging to start and the device to start functioning. Make sure your computer is switched on.

LOCK OR UNLOCK THE KEYS

Lock the keypad

To avoid accidentally pressing the keys, use keypad lock. Select **Go to** > **Lock keypad**.

Unlock the keypad


Press , and select **Unlock**.

3 Osnove

GET THE MOST OUT OF THE TWO SIM CARDS

Your phone can use two SIM cards, and you can use them for different purposes.

Select which SIM card to use

1. Select **Menu** >  > **Dual SIM settings**.
2. To choose which SIM to use for calls, select **Default SIM for calls**, and select **Ask every time**, or **SIM1**, or **SIM2**.
3. To choose which SIM to use for messages, select **Default SIM for msgs**, and select **Ask every time**, or **SIM1**, or **SIM2**.

You can set which SIM you want to use in standby mode, too, and assign a name to both SIMs.

EXPLORE YOUR PHONE

See the apps and features of your phone



Select **Menu**.

Go to an app or feature



Press the scroll key up, down, left, or right.

Open an app or select a feature



Select **Choose**.

Go back to the previous view



Select **Back**.

Go back to the home screen



Press the end key.

Switch on the flashlight



 
On the idle screen, quickly scroll up twice to switch on the flashlight.

To switch off the flashlight, scroll up once.

Do not shine the light in anyone's eyes.

CHANGE THE VOLUME

Turn the volume up or down

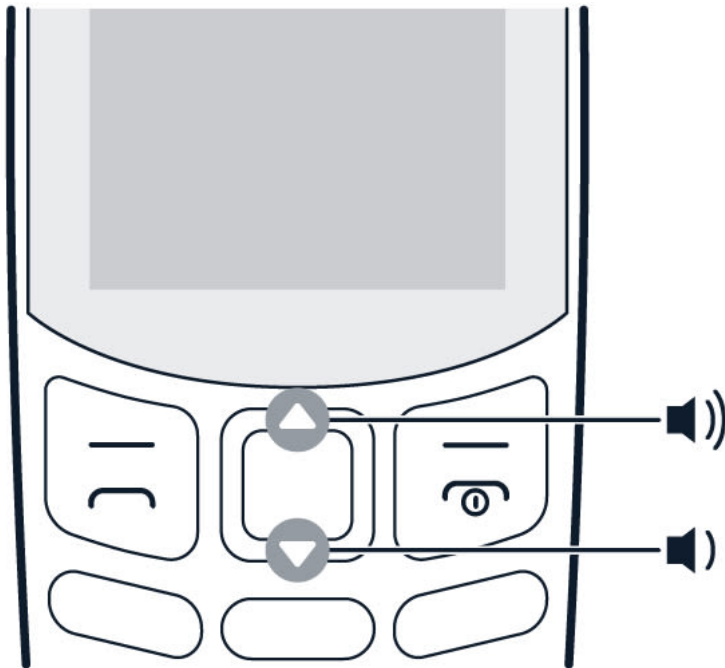

Trouble hearing your phone ringing in noisy environments, or calls too loud? You can change the volume to your liking.

Scroll up or down to change the volume during a call or when listening to the radio.

CHANGE YOUR RING OR MESSAGE TONE

You can choose a new ringtone or message tone.


Change your ringtone

1. Select **Menu** > **Settings** > **Tone settings**.
2. Choose **Ringtone**.
3. Scroll to a ringtone.
4. Press **OK**.



Tip: Is your ringtone too loud or too silent? Select **Ringtone volume** and scroll left or right.


Change your message tones

1. Select **Menu** >  > **Tone settings**.
2. Scroll to a **Message alert tone**.
3. Select the tone you want to use and select **OK**.

CHANGE THE WALLPAPER

Choose a new wallpaper

You can change the background of your home screen with **Wallpaper** setting.

1. Select **Menu** >  > **Display settings** > **Wallpaper**.
2. Select the wallpaper, and then the option to position the wallpaper on the screen.

WRITE TEXT

Write using the keypad

Writing with the keypad is easy and fun.

Press a key repeatedly until the letter is shown.

To type in a space press **0**.

To type in a special character or punctuation mark, press *****.

To switch between character cases, press **#** repeatedly.

To type in a number, press and hold a number key.

4 Calls, contacts, and messages

CALLS

Make a call

Learn how to make a call with your new phone.

1. Type in the phone number. To type in the + character, used for international calls, press * twice.
2. Press the call key. If asked, select which SIM to use.
3. To end the call, press the end key.

Answer a call

Press .




Tip: If you are in a situation where you cannot answer the phone and you need to silence it quickly, select **Silence**.

CONTACTS

Add a contact

Save and organize your friends' phone numbers.


1. Select **Menu** >  > **Add contact**.
2. Select where you want to save it, on **Phone** or **SIM card**.
3. Write the name, and type in the number.
4. Select **OK**.



Tip: To save a phone number in the dialer, type in the number, and select **Opt.** > **Save**.


Save a contact from call log

You can save contacts from call log.

1. Select **Menu** >  > **Received** or **Missed**, depending on from where you want to save the contact.
2. Highlight the number you want to save, and select **Options** > **Save**.
3. Add the contact's name and **Save**.


Call a contact

You can call a contact directly from the contacts list.

1. Select **Menu** >  > **Names** and scroll to a contact you want to call.
2. Select the contact and press the call key.

SEND AND RECEIVE MESSAGES

Write and send messages

1. Select **Menu** >  > **Create message**.
2. Write a message on the message field.
3. Select **Opt.** > **Send**, to add a recipient. You can enter a phone number or add a recipient by selecting **Search** to open **Contacts**.
4. Select **Send**.

Writing options

You can find different options for writing a message, in **Options** when you are in the message field. You can, for example, insert symbols, and save or discard messages.

You can also turn on the predictive text (dictionary) from **Options**.

Message options


When you have received messages in your phone, open a message and select **Options**. Scroll to **Use number**, and select **Opt.** > **Call** to call the sender. You can delete conversations, and add the sender to a screened list.

5 Personalize your phone

CHANGE YOUR RING OR MESSAGE TONE

You can choose a new ringtone or message tone.


Change your ringtone

1. Select **Menu** >  > **Tone settings**.
2. Choose **Ringtone**.
3. Scroll to a ringtone.
4. Press **OK**.



Tip: Is your ringtone too loud or too silent? Select **Ringtone volume** and scroll left or right.

Change your message tones


1. Select **Menu** >  > **Tone settings**.
2. Scroll to a **Message alert tone**.
3. Select the tone you want to use and select **OK**.

CHANGE THE LOOK OF YOUR HOME SCREEN

Change the look of your home screen with display settings.


Choose a new wallpaper

You can change the background of your home screen with **Wallpaper** setting.

1. Select **Menu** >  > **Display settings** > **Wallpaper**.
2. Select the wallpaper, and then the option to position the wallpaper on the screen.

Show date and time

You can choose if you want to see date and time on the home screen of your phone.

1. Select **Menu** >  > **Time settings** > **Display of time and date**.
2. Select **Show clock** to have them visible on the home screen.

If you want your phone to have time updated automatically, set **Auto-update of date and time** to **On**.


PROFILES

Your phone has different profiles for different situations. You can edit the profiles to your liking.

Personalize profiles

There are several profiles that you can use in different situations. There is, for example, a silent profile for when you cannot have sounds on, and an outdoor profile with loud tones.

You can personalize profiles further.

1. Select **Menu** >  > **Profiles**.
2. Select a profile and **Personalise**.

For each profile you can set a specific ringtone, ringtone volume, message sounds and so on.




Tip: You can add different profiles to **Go to** menu for quick access.

SETTINGS FOR GO TO

You can add quick links to different applications and settings to **Go to**.

Edit Go to settings

On the bottom left-hand corner you have **Go to**, and when you select it, you can access different applications and settings. You can change the applications and settings to your liking.

1. Select **Menu** >  > **Go to settings**.
2. Select **Choose options**.
3. Scroll to a shortcut you want to add on the **Go to** list on the home screen and **Mark** them.
4. Select **Done** to exit the list, and **Yes** to save changes.

You can also reorganize your **Go to** list.

1. Select **Organise**.
2. Scroll to an item you want to move and select **Move**.
3. Select if you want to move it up, down, to top, or to bottom of the list.
4. Select **Back** to exit the list, and **Yes** to save changes.


6 Kamera

PHOTOS


You don't need a separate camera when your phone has all you need for capturing memories.

Take a photo

Capture the best moments with your phone camera. You need a memory card to take photos.

1. To switch the camera on, select **Menu** > .
2. To zoom in or out, scroll up or down.
3. To take a photo, select **Capture**.

View a photo you have taken





To view the photo you have taken, select **Menu** >  > **Captured**.

VIDEOS

You don't need a separate video camera - record video memories with your phone.


Record a video

Besides taking photos, you can also record videos with your phone. You need a memory card to record videos.

1. To switch the camera on select **Menu** > .
2. To switch the video camera on, scroll right to .
3. To start recording, select .
4. To stop recording, select .

To view your videos, select  > **View videos**.




Tip: To view the video later, select **Menu** >  > **Recorded**.

7 Muzika i video zapisi


MUSIC PLAYER

You can listen to your MP3 music files with the music player. To play music, you need to store the music files on a memory card.

Listen to music

1. Select **Menu** >  > **Music player**.
2. Select **Options** > **All songs**.
3. Select a song and select **Play**.




Tip: To listen to music using wireless headphones, pair your phone with a compatible Bluetooth headset (sold separately). To switch Bluetooth on, select **Menu** > , and switch **Bluetooth** to **On**.

VIDEO PLAYER

Watch your favorite videos wherever you are.

Play a video

1. Select **Menu** > .
2. Select the folder containing the video you want to watch, and then the video.



Tip: Not all video formats are supported.

Pause and resume playback


Press the scroll key, and select **Pause** or **Play**.

8 Radio

FIND AND SAVE RADIO STATIONS

Connect a compatible headset. It acts as an antenna. Note that radio does not work without an antenna.

Search for your favorite radio stations

1. Select **Menu** > .
2. To search for all available stations select **Opt.** > **Auto tuning**.
3. To switch to a saved station, scroll up or down.



Tip: To switch to a saved station, you can also press a number key.



Tip: To rename station, select the station and **Opt.** > **Rename**.

LISTEN TO RADIO

Did you find a good radio station? Next, start listening to it!

Listen to your favorite radio stations on your phone


Select **Menu** > . To change the volume, scroll left or right. To close the radio, select **Stop**.

9 Clock, calendar, and calculator

SET THE TIME AND DATE MANUALLY

You can set your phone clock manually.

Change the time and date


1. Select **Menu** >  > **Time settings**.
2. Switch **Auto-update of date and time** to **Off**.
3. To set the time, scroll down, and select **Clock**. Use the scroll key to set the time, and select **OK**.
4. To set the date, scroll down, and select **Date setting**. Use the scroll key to set the date, and select **OK**.

ALARM CLOCK

Learn how to use the alarm clock to wake up and get to places on time.

Set an alarm


No clock around? Use your phone as an alarm clock.

1. Select **Menu** >  > **Set alarms**.
2. Select an alarm.
3. To set the hour, scroll up or down. To set the minutes, scroll right and then up or down.
4. Select **OK**.

CALENDAR

Need to remember an event? Add it to your calendar.


Add a calendar reminder

1. Select **Menu** > .
2. Select a date and **Opt.** > **Add reminder**.
3. Type in a name for the event, and select **OK**.
4. To set an alarm, select **Alarm on**. To set the hour, scroll up or down. To set the minutes, scroll right and then up or down.
5. Select **OK**.

CALCULATOR

Learn how to add, subtract, multiply and divide with your phone calculator.

How to calculate

1. Select **Menu** > .
2. Enter the first factor of your calculation, use the scroll key to select the operation, and enter the second factor.
3. Select **Equals** to get the result of the calculation.


Select **Clear** to empty the number fields.

10 Bluetooth

ACTIVATE BLUETOOTH

Connect your phone with Bluetooth to other devices.

Switch on Bluetooth

1. Select **Menu** >  > **Bluetooth** > **On**.
2. Make sure that you have made your phone visible to connect with another device. Select **Visibility** > **Shown to all**. Remember to change status when you stop using Bluetooth.
3. Select **Paired devices** > **Add new device**, and let the phone search for other Bluetooth devices. When they are found, connect as instructed.

USE SLAM

Share your content using Slam

Just move your phone close to another phone and your content is transferred using Bluetooth.

1. Switch Bluetooth on in the receiving phone, and make sure the phone is visible to other phones.
2. Select, for example, a photo. Press the options key, and select **Share photo** > **Slam via Bluetooth**.
3. Move your phone close to the other phone.



Tip: Slam searches for the nearest phone, and sends the item to it.

Operating the device in hidden mode is a safer way to avoid malicious software. Do not accept Bluetooth connection requests from sources you do not trust. You can also switch the Bluetooth function off when you are not using it.

11 Copy and remove content

COPY CONTENT

Copy photos, videos, and music, stored on the memory card, between your phone and computer.

Copy content between your phone and computer

To copy content from the phone memory, you need to have a memory card inserted in your phone.




1. Connect your phone to a compatible computer with a compatible USB cable.
2. Select **Mass storage**.
3. On your computer, open a file manager, such as Windows Explorer, and browse to your phone. You can see the content stored on the memory card.
4. Drag and drop items between your phone and computer.

REMOVE PRIVATE CONTENT FROM YOUR PHONE

If you buy a new phone, or otherwise want to dispose of or recycle your phone, here's how you can remove your personal info and content. Note that it is your responsibility to remove all private content.

Remove content from your phone

When removing private content from your phone, pay attention to whether you are removing content from the phone memory or the SIM card.

1. To remove messages, select **Menu** >  > **Delete messages**. Select from the available options the messages you want to delete.
2. To remove contacts, select **Menu** >  > **Delete**, and select if you want to delete contacts **One by one** or **Delete all**.
3. To remove your call info, select **Menu** >  > **Delete recent call lists**, and select **All**.
4. Check that all your personal content has been removed.

RESTORE FACTORY SETTINGS


You can restore factory settings in this setting. Be careful, however, since you lose all personalization and all data you have added on the phone.

Reset your phone

Accidents may happen and your phone may stop responding. You can restore the original factory settings, but be careful, since this reset removes all data you have saved in the phone memory and all your personalization.

If you are disposing your phone, note that you are responsible of removing all private content.

You need to have the security code to restore the original settings. To reset your phone to its original settings and to remove all your data, on the home screen, type in `*#7370#`.

1. Select **Menu** >  > **Restore factory set.** .
2. Enter the security code. There is no more confirmation after you select **OK**, but the phone is reset and all data is removed.


12 Settings

CALL SETTINGS

You can change the call settings of your phone.

Available call settings

You can edit call settings depending on a setting. You can set them to be either on or off, and check the status of the setting. You can add phone numbers to lists to be screened or blocked in call settings.

1. Select **Menu** >  > **Call settings**.
2. Select a setting you want to change.

PHONE SETTINGS

You can change your phone settings.

Available phone settings

You can edit phone settings depending on a setting. You can change the language of your phone, set keyguard to be on or off, and add a welcome note.

ENHANCEMENTS

You can edit the enhancement settings.

Enhancement settings

Select the available accessory and edit its available settings.


SECURITY SETTINGS

You can edit the available security settings.

Available security settings

You can edit the security settings depending on a setting. You can set them to be either on or off, and check the status of the setting.

You can add phone numbers to a list to be blocked and create a closed user group.


1. Select **Menu** >  > **Security settings** > **Change access codes** .
2. Select the code you want to change, for example, **Change security code** or **Change PIN code** .

You need to have the current codes in hand to be able to change them.

MESSAGE SETTINGS

You can edit the message settings.

Message settings

Select **Menu** >  > **Message settings** .

You can switch on or off settings, such as info service and delivery reports.

13 Informacije o proizvodu i sigurnosne informacije

FOR YOUR SAFETY

Read these simple guidelines. Not following them may be dangerous or against local laws and regulations. For further info, read the complete user guide.

ISKLUČIVANJE U OGRANIČENIM PODRUČJIMA



Isključite uređaj kada uporaba mobilnog uređaja nije dopuštena ili kada može uzrokovati smetnje ili opasnost, na primjer, u avionu, u bolnicama ili u blizini medicinske opreme, goriva, kemikalija ili područja miniranja. Poštujte sva uputstva u ograničenim područjima.

SIGURNOST NA PUTU JE NA PRVOM MJESTU



Poštujte sve lokalne zakone. Uvijek držite ruke slobodnim za upravljanje vozilom. Vaša osnovna briga dok vozite je sigurnost na putu.

SMETNJE



Svi bežični uređaji mogu biti osjetljivi na smetnje što bi moglo uticati na performanse.

OVLAŠTENI SERVIS



Samo ovlašteno osoblje smije instalirati ili popravljati ovaj proizvod.

BATERIJE, PUNJAČI I DRUGI DODACI



Za upotrebu s ovim uređajem, koristite baterije, punjače i druge dodatke koje je odobrila kompanija HMD Global Oy. Nemojte povezivati nekompatibilne proizvode.

DRŽITE UREĐAJ NA SUHOM



Ako je vaš uređaj vodootporan, pogledajte njegovu IP ocjenu u tehničkim specifikacijama uređaja za detaljnija uputstva.

ZAŠTITITE SLUH



Da biste spriječili moguće oštećenje sluha, nemojte slušati sadržaj velike glasnoće tokom dužeg perioda. Budite oprezni kada držite uređaj u blizini uha dok koristite zvučnik.

Specifična stopa apsorpcije (SAR)



Ovaj uređaj zadovoljava smjernice o izlaganju radiofrekventnim valovima kada se koristi u normalnom položaju naspram uha ili kada se drži najmanje 1,5 cm (5/8 inča) od tijela. Maksimalne vrijednosti specifične stope apsorpcije datog uređaja se nalaze u odjeljku Informacija o certifikaciji (SAR) ovog korisničkog vodiča. Za više informacija, pogledajte odjeljak Informacije o certifikaciji (SAR) ovog korisničkog vodiča ili posjetite web lokaciju www.sar-tick.com.

NETWORK SERVICES AND COSTS

Using some features and services, or downloading content, including free items, require a network connection. This may cause the transfer of large amounts of data, which may result in data costs. You may also need to subscribe to some features.

You can only use your device on the GSM 900/1800 networks. You need a subscription with a service provider.

EMERGENCY CALLS



Važno: Ne mogu se garantovati veze u svim uslovima. Nikada se ne oslanjajte isključivo na bežični telefon za osnovnu komunikaciju kao što je komunikacija u hitnim slučajevima.

Before making the call:

- Switch the phone on.
 - If the phone screen and keys are locked, unlock them.
 - Move to a place with adequate signal strength.
1. Press the end key repeatedly, until the home screen is shown.
 2. Type in the official emergency number for your present location. Emergency call numbers vary by location.
 3. Press the call key.
 4. Give the necessary info as accurately as possible. Do not end the call until given permission to do so.

You may also need to do the following:

- Put a SIM card in the phone.
- If your phone asks for a PIN code, type in the official emergency number for your present location, and press the call key.
- Switch the call restrictions off in your phone, such as call barring, fixed dialling, or closed user group.

VODITE RAČUNA O SVOM UREĐAJU

Rukujte uređajem, baterijom, punjačem i dodacima s pažnjom. Sljedeći prijedlozi vam pomažu da uređaj održavate u radnom stanju.

- Držite uređaj na suhom. Padavine, vlažnost i sve vrste tečnosti ili vlage mogu sadržavati minerale koji uzrokuju korodiranje elektroničkih spojeva.
- Nemojte koristiti ili skladištiti uređaj na prašnjavim ili prljavim područjima.
- Nemojte skladištiti uređaj na visokim temperaturama. Visoke temperature mogu oštetiti uređaj ili bateriju.
- Nemojte skladištiti uređaj na niskim temperaturama. Kada se uređaj zagrije na uobičajenu temperaturu, može se formirati vlaga unutar uređaja i oštetiti ga.
- Ne otvarajte uređaj osim na način predviđen uputstvima korisničkog vodiča.
- Neovlaštene izmjene mogu oštetiti uređaj i kršiti propise mjerodavne za radio uređaje.
- Ne ispuštajte, ne udarajte i ne tresite uređaj i bateriju. Grubim rukovanjem je moguće slomiti uređaj.
- Koristite mekanu, čistu i suhu krpu za čišćenje površine uređaja.
- Nemojte bojiti uređaj. Boja može spriječiti pravilan rad uređaja.
- Uređaj čuvajte dalje od magneta ili magnetnih polja.
- Da bi važni podaci bili sigurni, pohranite ih na najmanje dva odvojena mjesta, kao što su uređaj, memorijska kartica ili računar ili zapišite bitne informacije.

Uređaj se može zagrijati tokom dužeg rada. U većini slučajeva je to normalno. Da bi se izbjeglo preveliko zagrijavanje, uređaj može automatski usporiti, zatvoriti aplikacije, isključiti punjenje i, po potrebi, sam se isključiti. Ako uređaj ne funkcioniše ispravno, odnesite ga do najbližeg ovlaštenog servisa.

RECIKLIRANJE



Iskorištene elektroničke proizvode, baterije i materijale za pakovanje uvijek vratite na predviđena mjesta prikupljanja. Na taj način pomažete u sprječavanju nekontroliranog odlaganja otpada i promovirate recikliranje materijala. Električni i elektronički proizvodi sadrže mnogo vrijednih materijala, uključujući metale (poput bakra, aluminijuma, čelika, magnezijuma) i dragocjene metale (poput zlata, srebra ili paladijuma). Svi materijali u uređaju se mogu obnoviti u vidu materijala i energije.

SIMBOL PRECRTANE KANTE NA TOČKOVIMA

Simbol precrtane kante na točkovima



Simbol precrtane kante na točkovima na vašem proizvodu, bateriji, literaturi ili pakovanju podsjeća vas da se svi električni i elektronički proizvodi i baterije moraju odnijeti na posebno mjesto za sakupljanje na kraju svog radnog vijeka. Ne zaboravite prvo ukloniti lične podatke s uređaja. Nemojte odlagati ove proizvode kao nesortirani komunalni otpad: predajte ih na recikliranje. Za informacije o najbližem mjestu za reciklažu, obratite se svom lokalnom tijelu nadležnom za otpad ili pročitajte o HMD-ovom programu povrata i njegovoj dostupnosti u vašoj zemlji na www.hmd.com/support/topics/recycle.

BATTERY AND CHARGER INFORMATION

Battery and charger

Use your device only with an original BL-5CB rechargeable battery.

Charge your device with AC-18 charger. Charger plug type may vary.

HMD Global may make additional battery or charger models available for this device.

Battery and charger safety info

To unplug a charger or an accessory, hold and pull the plug, not the cord.

When your charger is not in use, unplug it. If left unused, a fully charged battery will lose its charge over time.

Always keep the battery between 59°F and 77°F (15°C and 25°C) for optimal performance. Extreme temperatures reduce the capacity and lifetime of the battery. A device with a hot or cold battery may not work temporarily. Accidental short-circuiting can happen when a metallic object touches the metal strips on the battery. This may damage the battery or the other object.

Do not dispose of batteries in a fire as they may explode. Obey local regulations. Recycle when possible. Do not dispose as household waste.

Do not dismantle, cut, crush, bend, puncture, or otherwise damage the battery in any way. If a battery leaks, do not let liquid touch skin or eyes. If this happens, immediately flush the affected areas with water, or seek medical help. Do not modify, attempt to insert foreign objects into the battery, or immerse or expose it to water or other liquids. Batteries may explode if damaged.

Use the battery and charger for their intended purposes only. Improper use, or use of unapproved or incompatible batteries or chargers may present a risk of fire, explosion, or other hazard, and may invalidate any approval or warranty. If you believe the battery or charger is damaged, take it to a service centre or your phone dealer before continuing to use it. Never use a damaged battery or charger. Only use the charger indoors. Do not charge your device during a lightning storm.

MALA DJECA

Vaš uređaj i njegovi pribori nisu igračke. Oni mogu sadržavati male dijelove. Držite ih van dohvata male djece.

MEDICINSKI UREĐAJI

Funkcioniranje radio prijenosne opreme, uključujući bežične telefone, može ometati funkcije neadekvatno zaštićenih medicinskih uređaja. Posavjetujte se s liječnikom ili proizvođačem medicinskih uređaja da utvrdite da li je medicinski uređaj adekvatno zaštićen od vanjske radio energije.

IMPLANTIRANI MEDICINSKI UREĐAJI

Da biste izbjegli potencijalne smetnje, proizvođači implantiranih medicinskih uređaja (kao što su srčani pejsmejkeri, insulinske pumpe i neurostimulatori) preporučuju minimalnu udaljenost od 15,3 centimetra (6 inča) između bežičnog uređaja i medicinskog uređaja. Osobe koje imaju takve uređaje trebaju:

- Uvijek držite bežični uređaj na udaljenosti većoj od 15,3 centimetra (6 inča) od medicinskog uređaja.
- Ne nosite bežični uređaj u džepu na grudima.
- Držite bežični uređaj na uhu nasuprot medicinskom uređaju.
- Isključite bežični uređaj ako postoji bilo koji razlog za sumnju da dolazi do smetnji.
- Slijedite upute proizvođača za implantirani medicinski uređaj.

Ako imate bilo kakva pitanja u vezi s korištenjem bežičnog uređaja s implantiranim medicinskim uređajem, posavjetujte se sa zdravstvenim radnikom.

SLUH



Upozorenje: Kada koristite slušalice, to može uticati na vašu sposobnost da čujete spoljašnje zvukove. Nemojte koristiti slušalice s mikrofonom tamo gdje to može ugroziti vašu sigurnost.

Neki bežični uređaji mogu ometati neka slušna pomagala.

ZAŠTITITE UREĐAJ OD ŠTETNOG SADRŽAJA

Uređaj može biti izložen virusima i drugom štetnom sadržaju. Poduzmite sljedeće mjere predostrožnosti:

- Budite oprezni kada otvarate poruke. One mogu sadržavati zlonamjernim softver ili na drugi način biti štetne za uređaj ili računar.
- Budite oprezni kada prihvatate zahtjeve za povezivanje, pretražujete internet ili preuzimate sadržaj. Nemojte prihvatati Bluetooth veze od izvora kojima ne vjerujete.
- Instalirajte i koristite samo usluge i softver iz izvora u koje imate povjerenja i koji nude adekvatnu sigurnost i zaštitu.

- Instalirajte antivirusni i drugi sigurnosni softver na svoj uređaj i bilo koji povezani računar. Koristite samo jednu antivirusnu aplikaciju istovremeno. Korištenje više njih može uticati na performanse i rad uređaja i/ili računara.
- Ako pristupate unaprijed instaliranim oznakama i vezama na internet stranice trećih strana, preduzmite odgovarajuće mjere predostrožnosti. HMD Global ne prihvata niti preuzima odgovornost za takve stranice.

VOZILA

Radio signali mogu uticati na neispravno instalirane ili neadekvatno zaštićene elektroničke sisteme u vozilima. Za više informacija, raspitajte se kod proizvođača vozila ili opreme. Samo ovlašteno osoblje smije instalirati uređaj u vozilo. Pogrešno instaliranje može biti opasno i poništiti garanciju. Redovno provjeravajte da li je sva bežična oprema u vašem vozilu montirana i da li ispravno funkcionira. Nemojte skladištiti ili nositi zapaljive ili eksplozivne materije u istom odjeljku kao i uređaj, njegove dijelove ili dodatke. Nemojte stavljati uređaj ili dodatke u područje angažiranosti zračnog jastuka.

POTENCIJALNO EKSPLOZIVNA OKRUŽENJA

Isključite uređaj u potencijalno eksplozivnim okruženjima, kao npr. u blizini benzinskih pumpi. Iskre mogu izazvati eksploziju ili požar koji dovodi do povrede ili smrti. Imajte na umu ograničenja u područjima s gorivom, hemijskim pogonima i na mjestima na kojima se provodi miniranje. Područja s potencijalnim eksplozivnim okruženjima nekada nisu jasno označena. To su obično područja u kojima se preporučuje da isključite motor, u potpalublju broda, objektima za prevoz i skladištenje hemikalija te područjima gdje zrak sadrži hemikalije ili čestice. Provjerite s proizvođačem vozila koje koriste ukapljeni naftni plin (kao što je propan ili butan) da li se ovaj uređaj može sigurno koristiti u njegovoj blizini.

INFORMACIJE O CERTIFICIRANJU (SAR)

Ovaj mobilni uređaj zadovoljava smjernice za izloženost radio valovima.

Vaš mobilni uređaj je radio odašiljač i prijemnik. Napravljen je da ne prekoračuje ograničenja za izloženost radio valovima (radio frekvencija elektromagnetnih polja), koju preporučuju međunarodne smjernice nezavisne naučne organizacije ICNIRP. Ove smjernice obuhvataju značajne sigurnosne granice namijenjene da osiguraju zaštitu svih osoba bez obzira na dob i zdravlje. Smjernice za izloženost su zasnovane na Specifičnoj stopi apsorpcije (SAR) koja predstavlja izraz količine energije radio frekvencije (RF) koja se odlaže u glavi i tijelu dok uređaj izvršava prijenos. ICNIRP SAR granica za mobilne uređaje iznosi u prosjeku 2,0 W/kg na 10 grama tkiva.

SAR testiranja se provode s uređajem u standardnim radnim položajima pri prijenosu najvišeg certificiranog nivoa energije u svim frekvencijskim opsezima.

Ovaj uređaj zadovoljava smjernice o izlaganju radiofrekventnim valovima kada se koristi na glavi ili najmanje 5/8 inča (1,5 centimetara) od tijela. Kada koristite futrolu, pojas ili drugu vrstu

držača uređaja radi njegovog nošenja uz tijelo, on ne bi trebao sadržavati metal i trebao bi osigurati minimalno gore navedenu udaljenost od tijela.

Za prijenos podataka ili slanje poruka potrebna je kvalitetna mrežna veza. Slanje može kasniti dok takva veza ne bude dostupna. Pridržavajte se uputstava o držanju rastojanja tokom slanja.

Tokom opće upotrebe, SAR vrijednosti su obično dosta niže od gore navedenih vrijednosti. To je zbog toga što se u svrhe sistemske efikasnosti i minimiziranja smetnji na mreži radna energija mobilnog uređaja automatski smanjuje kada nije potrebna puna energija za pozivanje. Što je manja izlazna energija, to je manja SAR vrijednost.

Modeli uređaja mogu imati različite verzije i više od jedne vrijednosti. Tokom vremena se mogu pojaviti promjene na komponentama i dizajnu, a neke od njih mogu uticati na SAR vrijednosti.

Za više informacije, idite na www.sar-tick.com. Zapamtite da mobilni uređaji vrše prijenos čak i kada ne upućujete glasovni poziv.

Svjetska zdravstvena organizacija (WHO) navodi da trenutne naučne informacije ne ukazuju na potrebu za bilo kakvim posebnim mjerama opreza pri korištenju mobilnih uređaja. Ako želite smanjiti izloženost, oni preporučuju da ograničite upotrebu uređaja ili da koristite opremu za upravljanje uređajem bez dodira da biste udaljili uređaj od glave i tijela. Dodatne informacije, objašnjenja i rasprave o izlaganju radijskoj frekvenciji potražite na web-lokaciji SZO www.who.int/health-topics/electromagnetic-fields#tab=tab_1.

Posjetite web lokaciju www.hmd.com/sar za informacije o maksimalnoj vrijednosti specifične stope apsorpcije (SAR) uređaja.

COPYRIGHTS AND OTHER NOTICES

Declaration of Conformity

Hereby, HMD Global Oy (Ltd.) declares that this product is in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EC. A copy of the Declaration of Conformity can be found at www.hmd.com/declaration-of-conformity.

The availability of products, features, apps and services may vary by region. For more info, contact your dealer or your service provider.

This device may contain commodities, technology or software subject to export laws and regulations from the US and other countries. Diversion contrary to law is prohibited.

The contents of this document are provided "as is". Except as required by applicable law, no warranties of any kind, either express or implied, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose, are made in relation to the accuracy, reliability or contents of this document. HMD Global reserves the right to revise this document or withdraw it at any time without prior notice.

To the maximum extent permitted by applicable law, under no circumstances shall HMD Global or any of its licensors be responsible for any loss of data or income or any special, incidental, consequential or indirect damages howsoever caused.

Reproduction, transfer or distribution of part or all of the contents in this document in any form without the prior written permission of HMD Global is prohibited. HMD Global operates a policy of continuous development. HMD Global reserves the right to make changes and improvements to any of the products described in this document without prior notice.

HMD Global does not make any representations, provide a warranty, or take any responsibility for the functionality, content, or end-user support of third-party apps provided with your device. By using an app, you acknowledge that the app is provided as is.

Downloading of maps, games, music and videos and uploading of images and videos may involve transferring large amounts of data. Your service provider may charge for the data transmission. The availability of particular products, services and features may vary by region. Please check with your local dealer for further details and availability of language options.

Certain features, functionality and product specifications may be network dependent and subject to additional terms, conditions, and charges. All are subject to change without notice.

Manufacturer and/or importer in EU: HMD Global Oy, Bertel Jungin aukio 9, 02600 Espoo, Finland.

HMD Global Privacy Policy, available at www.hmd.com/privacy, applies to your use of the device.

© 2017 HMD Global. All rights reserved. HMD Global Oy is the exclusive licensee of the Nokia brand for phones & tablets. Nokia is a registered trademark of Nokia Corporation.

The Bluetooth word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by HMD Global is under license.

This product includes open source software. For applicable copyright and other notices, permissions, and acknowledgements, select `*#6774#` on the home screen.

O UPRAVLJANJU DIGITALNIM PRAVIMA

Kada koristite ovaj uređaj, uvijek poštujujte zakone te lokalne običaje, privatnost i legitimna prava drugih, uključujući i autorska prava. Zaštita autorskih prava vas može spriječiti da kopirate, mijenjate ili prenosite fotografije, muziku i drugi sadržaj.