

NOKIA

Nokia 2

Udhëzuesi i përdorimit

Tabela e përmbajtjes

1 Mbi këtë udhëzues përdorimi	5
2 Fillimi	6
Keys and parts	6
Insert or remove SIM and memory card	7
Charge your phone	8
Switch on and set up your phone	8
Dual SIM settings	9
Lock or unlock your phone	10
Use the touch screen	10
3 Bazat	14
Personalize your phone	14
Open and close an app	14
Notifications	15
Control volume	15
Screenshots	16
Battery life	16
Save on data roaming costs	17
Write text	18
Date and time	19
Clock and alarm	20
Calculator	21
Accessibility	21
4 Connect with your friends and family	22
Calls	22
Contacts	22
Send and receive messages	23
Mail	24
Get social	25

5 Kamera	26
Camera basics	26
Use your camera like a pro	26
Save your photos and videos to a memory card	27
Your photos and videos	27
6 Interneti dhe lidhjet	29
Activate Wi-Fi	29
Use a cellular data connection	29
Browse the web	30
Close a connection	32
Bluetooth	32
VPN	34
7 Music and videos	36
Music	36
Videos	36
FM Radio	37
8 Organizimi i ditës tuaj	39
Calendar	39
Notes	40
9 Maps	41
Find places and get directions	41
Download and update maps	42
Use location services	42
10 Apps and services	44
Google Play	44

11 Software updates and backups	46
Update your phone software	46
Back up your data	46
Restore original settings and remove private content from your phone	46
Storage	47
12 Protect your phone	49
Protect your phone with a screen lock	49
Change your SIM PIN code	49
Access codes	49
13 Informacionet për produktin dhe sigurinë	52
Për sigurinë tuaj	52
Network services and costs	55
Emergency calls	55
Kujdesuni për pajisjen tuaj	56
Riciklimi	56
Simboli i koshit me rrota shënuar me kryq	57
Informacionet për baterinë dhe karikuesin	57
Fëmijët e vegjël	58
Pajisjet mjekësore	59
Pajisjet mjekësore të transplantuara	59
Dëgjimi	59
Mbroni pajisjen tuaj nga përmbajtjet e dëmshme	59
Mjetet	60
Mjedise të mundshme shpërthyes	60
Informacionet për certifikimin (SAR)	60
Mbi Menaxhimin e të drejtave dixhitale	61
Copyrights and notices	61

1 Mbi këtë udhëzues përdorimi



 
E rëndësishme: Për informacione të rëndësishme mbi përdorimin e sigurt të pajisjes dhe baterisë, lexoni "Informacionet për produktin dhe sigurinë" para se ta përdorni pajisjen. Për të mësuar se si të filloni me pajisjen tuaj të re, lexoni udhëzuesin e përdorimit.

2 Fillimi

KEYS AND PARTS

Explore the keys and parts of your new phone.

Your phone

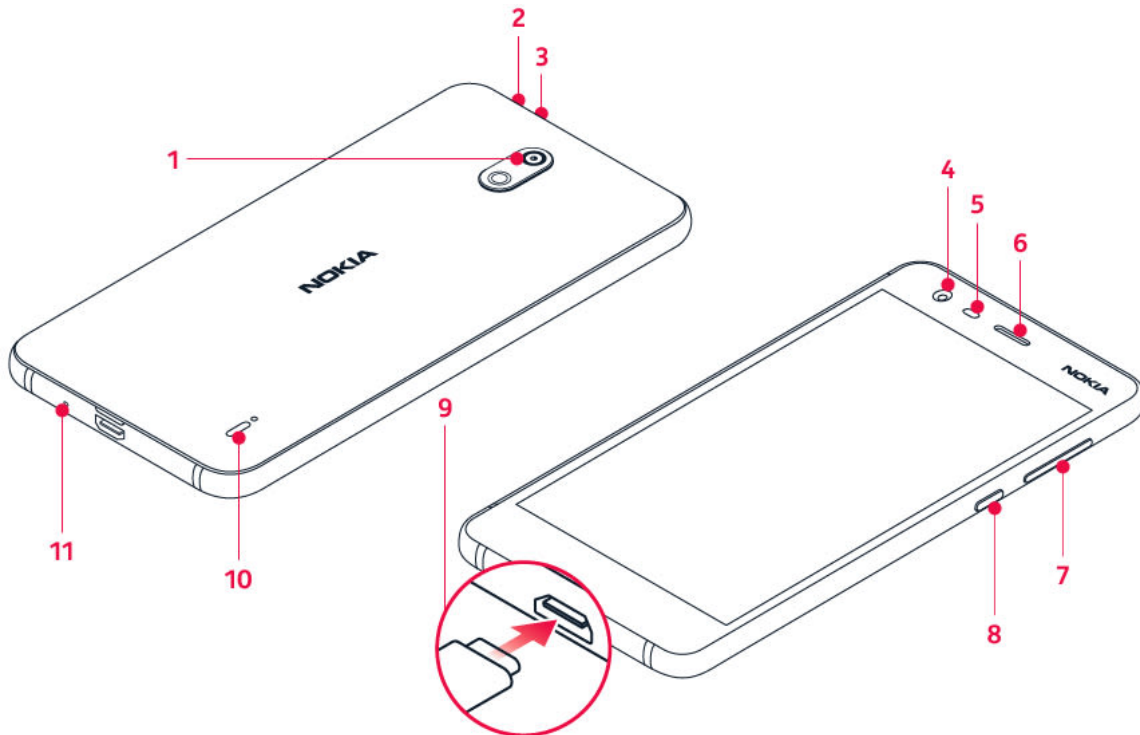

- | | |
|---------------------|----------------------|
| 1. Main camera | 7. Volume keys |
| 2. Audio connector | 8. Power/Lock key |
| 3. Microphone | 9. Charger connector |
| 4. Front camera | 10. Loudspeaker |
| 5. Proximity sensor | 11. Microphone |
| 6. Earpiece | |

 
Pjesët dhe lidhësit, magnetizmi

Mos e lidhni me produkte që krijojnë sinjal daljeje, pasi kjo mund ta dëmtojë pajisjen. Mos lidhni burim rryme elektrike në lidhësin e audios. Nëse në lidhësin e audios lidhni pajisje të jashtme ose kufje, përveç atyre të miratuara për përdorim me këtë pajisje, kini kujdes të veçantë për nivelet e zërit.

Disa pjesë të pajisjes janë magnetike. Pajisja mund të tërheqë materiale metalike. Mos vendosni afër pajisjes karta krediti ose karta të tjera me shirita magnetikë për periudha kohore të zgjatura, pasi kartat mund të dëmtohen.

INSERT OR REMOVE SIM AND MEMORY CARD

Insert SIM and memory card

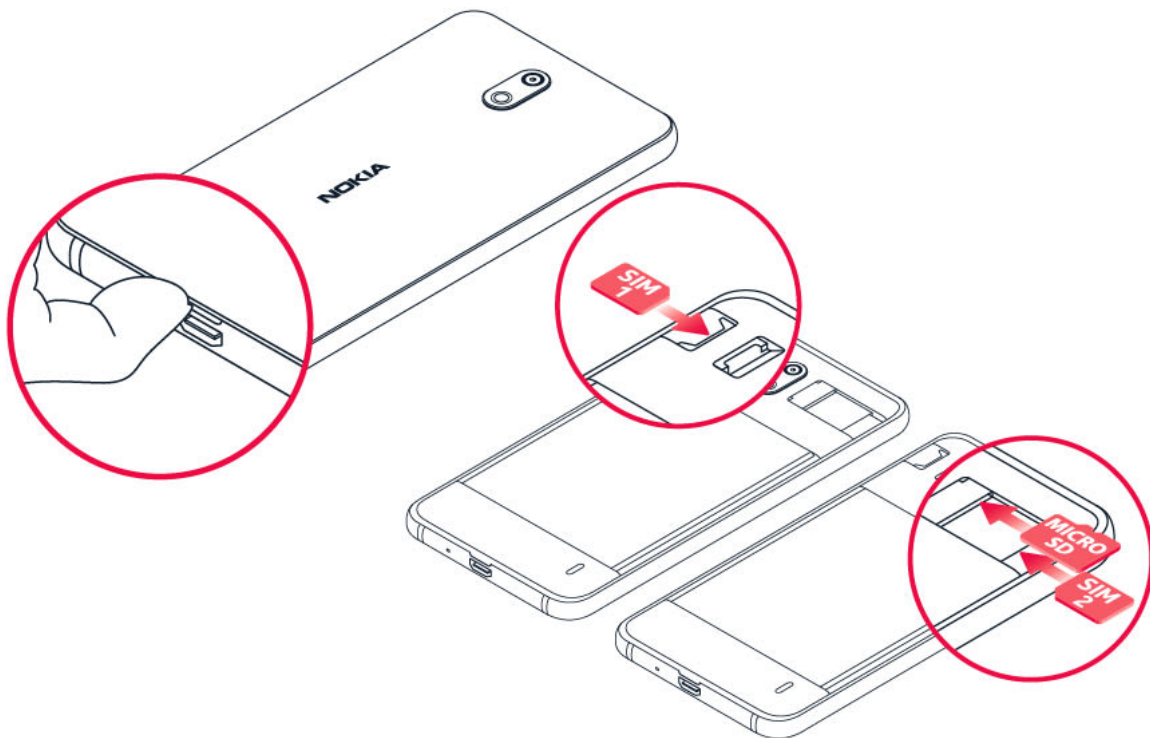

1. With the phone facing down, put your fingernail in the small recess located on the bottom edge.
2. Bend the cover open and remove it.
3. Slide the nano-SIM card into the SIM slot with the metal contact area down until it locks into place. If you have a dual-SIM variant, insert the second SIM into the other SIM slot.
4. If you have a microSD memory card, slide the card into the memory card slot.
5. Press the top edge of the back cover against the top edge of your phone, and then snap the cover into place, locking all the hooks around the edges of the cover.¹



Warning: Do not open the battery cover, it may harm your device.



Shënim: Fikni pajisjen dhe shkëpusni karikuesin dhe çdo pajisje tjetër para se të hiqni ndonjë nga kapakët. Gjatë ndërrimit të ndonjë kapaku, përpiquni që të mos prekni elementet elektronike. Pajisjen mbajeni dhe përdoreni gjithmonë me kapakë të bashkëngjitur.

Remove SIM and memory card

1. Remove the back cover from the phone. With the phone facing down, put your fingernail in the small recess located on the bottom edge.
2. Bend the cover open and remove it.
3. Remove the cards. To remove the SIM card from SIM2 slot, you need to push it lightly to release it from its place.

¹ Use only original nano-SIM cards. Use of incompatible SIM cards may damage the card or the device, and may corrupt data stored on the card.

CHARGE YOUR PHONE

Charge the battery



1. Plug a compatible charger into a wall outlet.
2. Connect the cable to your phone.

Your phone supports the USB micro-B cable. You can also charge your phone from a computer with a USB cable, but it may take a longer time.

If the battery is completely discharged, it may take several minutes before the charging indicator is displayed.

SWITCH ON AND SET UP YOUR PHONE

When you switch your phone on for the first time, your phone guides you to set up your network connections and phone settings.

Switch on your phone

1. To switch on your phone, press and hold the power key until the phone vibrates.
2. When the phone is switched on, choose your language and region.
3. Follow the instructions shown on your phone.

Transfer data from your previous phone

You can transfer data from a previous device to your device via your **Google** account.

To back up data on your old phone to **Google account**, refer to your old phone's user guide.

1. Tap **Settings** > **Accounts** > **Add account** > **Google**.
2. Select which data you want to be restored on your phone. The sync will start automatically once your phone is connected to the internet.

Restore app settings from your previous Android phone

If your previous device was an **Android**, and back up to **Google** account is enabled on it, you can restore app settings and Wi-Fi passwords.

1. Tap **Settings** > **Backup & reset**.
2. Switch **Automatic restore** to **On**.

DUAL SIM SETTINGS

If you have a dual SIM variant, you can have 2 SIMs in your phone, for example, one for your work and one for your personal use.



Note: On dual SIM capable devices, both SIM1 and SIM2 slots support 4G networks. However, if your SIM1 and SIM2 are both LTE SIM cards, the primary SIM supports 4G/3G/2G networks, while the secondary SIM can only support 3G/2G. For more information on your SIM cards, contact your service provider.

Choose which SIM to use

When, for example, making a call, you can choose which SIM to use by tapping the corresponding SIM 1 or SIM 2 button after you dial the number.

Your phone shows the network status for both SIMs separately. Both SIM cards are available at the same time when the device is not being used, but while one SIM card is active, when, for example, making a call, the other may be unavailable.

Manage your SIMs

Don't want work to interfere with your free time? Or do you have a cheaper data connection on one SIM? You can decide which SIM you want to use.

Tap **Settings** > **SIM Cards**.

Rename a SIM card

Tap the SIM you want to rename, and type in the name you want.

Select which SIM to use for calls or data connection

Under **Preferred SIM for**, tap the setting you want to change and select the SIM.

LOCK OR UNLOCK YOUR PHONE

Lock your phone

If you want to avoid accidentally making a call when your phone is in your pocket or bag, you can lock your keys and screen.

To lock your keys and screen, press the power key.

 
Unlock the keys and screen

Press the power key, and swipe up across the screen. If asked, provide additional credentials.

USE THE TOUCH SCREEN

Important: Avoid scratching the touch screen. Never use an actual pen, pencil, or other sharp object on the touch screen.

Tap and hold to drag an item

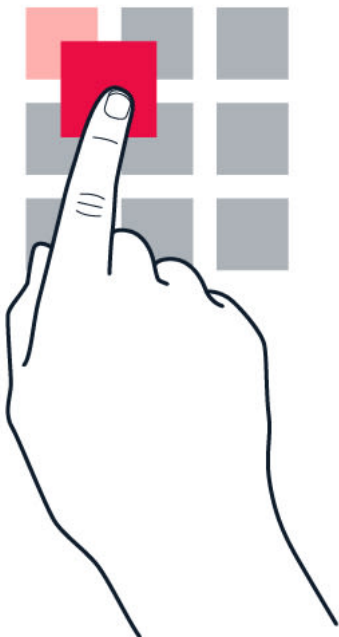


Place your finger on the item for a couple of seconds, and slide your finger across the screen.

Swipe



Place your finger on the screen, and slide your finger in the direction you want.

 Scroll through a long list or menu

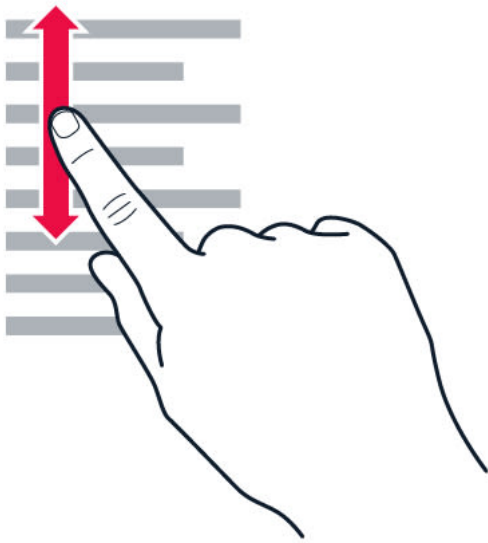

Slide your finger quickly in a flicking motion up or down the screen, and lift your finger. To stop the scrolling, tap the screen.

Zoom in or out




Place 2 fingers on an item, such as a map, photo, or web page, and slide your fingers apart or together.

Lock the screen orientation


The screen rotates automatically when you turn the phone 90 degrees.


To lock the screen in portrait mode, swipe down from the top of the screen, and tap **Auto-rotate** to switch to **Portrait**.

Use the navigation keys

To see which apps you have open, tap the overview key .

To switch to another app, tap the app you want. To close an app, tap the **×** icon next to it.

To go back to the previous screen you were in, tap the back key . Your phone remembers all the apps and websites you've visited since the last time your screen was locked.

To go to the home screen, tap the home key . The app you were in stays open in the background.

3 Bazat

PERSONALIZE YOUR PHONE

Learn how to personalize the home screen and how to change ringtones.

Change your wallpaper

Tap **Settings** > **Display** > **Wallpaper**.

Change your phone ringtone


1. Tap **Settings** > **Sound**.
2. Tap **SIM1 Phone ringtone** or **SIM2 Phone ringtone** to select the ringtone for respective SIMs.

Change your message notification ringtone


Tap **Settings** > **Sound** > **Default notification ringtone**.

OPEN AND CLOSE AN APP

Open an app

On the home screen, tap an app icon to open it. To open one of the apps running in the background, tap , and select the app.


Close an app

Tap , and tap  on the app you want to close.

Find your apps

On the home screen, swipe up from the bottom of the screen to see all your apps.

Close all running apps

Press , swipe up through all apps, and tap **CLEAR ALL**.

NOTIFICATIONS

Stay in touch with what's happening on your phone with notifications.

 
Use the notification panel

When you receive new notifications, such as messages or missed calls, indicator icons appear on the status bar at the top of the screen. To see more information about the notifications, drag the status bar down. To close the view, swipe up on the screen.


To open the notification panel, drag the status bar down. To close the notification panel, swipe up on the screen.

To change the notification settings of an app, tap **Settings** > **Notifications** and tap the app name to open the app settings.

Use the quick setting icons

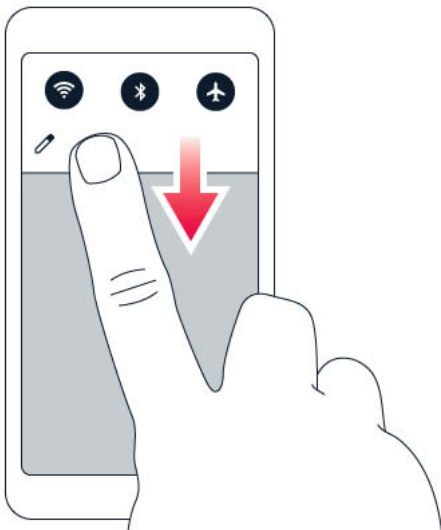

To activate features, tap the quick settings icons on the notification panel. To see more icons, drag the menu down.

To rearrange the icons, tap , tap and hold an icon, and then drag it to another location.

CONTROL VOLUME

Change the volume


If you have trouble hearing your phone ringing in noisy environments, or calls are too loud, you can change the volume to your liking by using the volume keys on the side of your phone.

Do not connect to products that create an output signal, as this may damage the device. Do not connect any voltage source to the audio connector. If you connect an external device or headset, other than those approved for use with this device, to the audio connector, pay special attention to volume levels.

Change the volume for media and apps

Press a volume key on the side of your phone to see the volume status bar, tap \sphericalangle , and drag the slider on the volume bar for media and apps left or right.

Set the phone to silent

Press a volume key on the side of your phone, and tap  to switch to silent.



Tip: Don't want to keep your phone in silent mode, but can't answer right now? To silence an incoming call, press the volume down key. You can also set your phone to mute the ringing when you pick the phone up: tap **Settings** > **Motion** > **Mute on pickup**. If you want to be able to quickly reject a call, tap **Settings** > **Motion** > **Turn over to reject call**. When there is an incoming call, turn the phone over to reject the call.

SCREENSHOTS

Take a screenshot

To take a screenshot, open the notification panel, and drag the status bar downwards. Tap **Screen capture**. You can view captured images in **Photos**.


It is not possible to capture a screenshot while using some apps and features.

BATTERY LIFE

Extend battery life

To save power:

1. Charge wisely: Always charge the battery fully.
2. Select only the sounds that you need: Mute unnecessary sounds, such as key press sounds. Tap **Settings** > **Sound**, and under **Other sounds**, select which sounds to keep.
3. Use wired headphones, rather than the loudspeaker.
4. Change the phone screen settings: Set the phone screen to switch off after a short time. Tap **Settings** > **Display** > **Sleep** and select the time.

5. Lower the screen brightness: Tap **Settings** > **Display** > **Brightness level**. Make sure that **Adaptive brightness** is disabled. To adjust the brightness, drag the **Brightness level** slider.
6. Stop apps from running in the background: Press , and close the apps you don't need.
7. Enable the Background activity manager. The notifications of some apps or emails may not be able to be retrieved instantly. You can manage the battery life by adding or removing the apps to or from the whitelist. Tap **Settings** > **Battery** > **Background activity manager**.
8. Enable **Battery saver**. Tap **Settings** > **Battery** > **Battery saver**, and switch to **On**.
9. Use location services selectively: Switch location services off when you don't need them. Tap **Settings** > **Location**, and switch to **Off**.
10. Use network connections selectively: Switch Bluetooth on only when needed. Use a Wi-Fi connection to connect to the internet, rather than a cellular data connection. Stop your phone scanning for available wireless networks. Tap **Settings** > **Wi-Fi**, and switch to **Off**. If you're listening to music or otherwise using your phone, but don't want to make or receive calls, switch Airplane mode on. Tap **Settings** > **More** > **Airplane mode**.

Airplane mode closes connections to the cellular network and switches your device's wireless features off.


SAVE ON DATA ROAMING COSTS

You can cut data roaming costs and save on your phone bills by changing cellular data settings. To use the optimal connection method, change the Wi-Fi and cellular networks settings. Data roaming means using your phone to receive data over networks that your network service provider doesn't own or operate. Connecting to the internet when roaming, especially when abroad, can raise data costs substantially. Using a Wi-Fi connection is generally faster and less expensive than using a cellular data connection. If both Wi-Fi and cellular data connections are available, your phone uses the Wi-Fi connection.

Connect to a Wi-Fi network

1. Tap **Settings** > **Wi-Fi**.
2. Make sure Wi-Fi networking is switched to **On**.
3. Select the connection you want to use.

Close the cellular data connection

Swipe down from the top of the screen, tap  and switch **Cellular data** to **Off**.



To follow your data usage, tap **Settings** > **Data usage**.

Stop data roaming

Tap **Settings** > **More** > **Cellular networks**, and switch **Data roaming** off.

WRITE TEXT

Learn how to write text quickly and efficiently using your phone's keyboard.

Use the on-screen keyboard

Writing with the on-screen keyboard is easy. You can use the keyboard when holding your phone in portrait or landscape mode. The keyboard layout can vary in different apps and languages.

To open the on-screen keyboard, tap a text box.

Switch between upper and lower case characters

Tap the shift key. To switch caps lock mode on, double-tap the key. To return to normal mode, tap the shift key again.

Type in a number or special character

Tap the numbers and symbols key. Some special character keys bring up more symbols. To see more symbols, tap and hold a symbol or special character.

Insert emojis

Tap the emoji key, and select the emoji.

Copy or paste text

Tap and hold a word, drag the markers before and after the word to highlight the section you want to copy, and tap **COPY**. To paste the text, tap where you want to paste the text and select **PASTE**.

Add an accent to a character

Tap and hold the character, and tap the accent or the accented character, if supported by your keyboard.

Delete a character

Tap the backspace key.

Move the cursor

To edit a word you just wrote, tap the word, and drag the cursor to the place you want.

Use keyboard word suggestions

Your phone suggests words as you write, to help you write quickly and more accurately. Word suggestions may not be available in all languages.

When you start writing a word, your phone suggests possible words. When the word you want is shown in the suggestion bar, select the word. To see more suggestions, tap and hold the suggestion.



Tip: If the suggested word is marked in bold, your phone automatically uses it to replace the word you wrote. If the word is wrong, tap and hold it to see a few other suggestions. If you do not want the keyboard to suggest words while typing, turn off the text corrections. Tap **Settings** > **Languages & input** > **Virtual keyboard**. Select the keyboard you normally use. Tap **Text correction** and switch off the text correction methods you do not want to use.

Correct a word

If you notice that you have misspelled a word, tap it to see suggestions for correcting the word.

Switch spell checker off

Tap **Settings** > **Languages & input** > **Spell checker**, and switch **Spell checker** to **Off**.

DATE AND TIME

Keep track of time – learn how to use your phone as a clock, as well as an alarm clock, and how to keep your appointments, tasks, and schedules up to date.

Set date and time

Tap **Settings** > **Date & time**.

Update the time and date automatically

You can set your phone to update the time, date, and time zone automatically. Automatic update is a network service and may not be available depending on your region or network service provider.

1. Tap **Settings** > **Date & time**.
2. Tap **Automatic date & time** > **Use network-provided time**.
3. Switch **Automatic time zone on**.

Change the clock to the 24-hour format


Tap **Settings** > **Date & time**, and switch **Use 24-hour format** on.

CLOCK AND ALARM

Your clock is not just for alarms – learn what else you can do.

Use the countdown timer

No more overcooking – use the countdown timer to measure your cooking times.

1. Tap **Clock** >  **TIMER**.
2. Set the duration of the timer.



Use the stopwatch

Use the stopwatch to see how you improve on the running track.

Tap **Clock** >  **STOPWATCH**.

Set an alarm

You can use your phone as an alarm clock.

1. Tap **Clock** >  **ALARM**.
2. To add an alarm, tap .
3. To modify an alarm, tap it. To set the alarm to repeat on specific dates, check **Repeat** and highlight the days of the week.


Snooze an alarm

If you don't want to get up just yet, when the alarm sounds, swipe the alarm left. To adjust the snooze length, tap **Clock** > ⋮ > **Settings** > **Snooze length** and select the length to your liking.

Switch an alarm off

When the alarm sounds, swipe the alarm right.

Delete an alarm

Tap **Clock** > ⌚ **ALARM**. Select the alarm, and tap  **Delete**.

CALCULATOR

Forget your pocket calculator – there's a calculator in your phone.

Use the calculator

Tap **Calculator**.

To use the advanced calculator, swipe the bar from the right edge of the screen to the left.

ACCESSIBILITY

You can change various settings to make using your phone easier.

Increase or decrease the font size

Do you want to have larger fonts on your phone?

1. Tap **Settings** > **Accessibility**.
2. Tap **Font size**. To increase or decrease the font size, drag the font size level slider.

Increase or decrease the display size




Do you want to make the items on your screen smaller or larger?

1. Tap **Settings** > **Accessibility**.
2. Tap **Display size** and to adjust the display size, drag the display size level slider.

4 Connect with your friends and family

CALLS

Make a call

1. Tap .
2. Type in a number, or tap  and select a contact you want to call.
3. Tap . If you have a second SIM inserted, tap the corresponding icon to make a call from a specific SIM.

Answer a call

When the phone rings, swipe up to answer.



Tip: Don't want to keep your phone in silent mode, but can't answer right now? To silence an incoming call, press the volume down key. You can also set your phone to mute the ringing when you pick the phone up: tap **Settings** > **Motion** > **Mute on pickup**.

If you want to be able to quickly reject a call, tap **Settings** > **Motion** > **Turn over to reject call**. When there is an incoming call, turn the phone over to reject the call.


Reject a call

To reject a call, swipe down.

CONTACTS

Save and organize your friends' and family members' phone numbers.


Save a contact from call history

1. In **Phone**, tap  to see call history.
2. Tap the number you want to save.
3. Select if you want to **Create new contact** or **Add to a contact**.
4. Type in the contact information, and tap **Save**.


Add a contact

1. Tap **Contacts** > **+**.
2. Fill out the information.
3. Tap **Save**.


Edit a contact

1. Tap **Contacts** and tap the contact you want to edit.
2. Tap .
3. Edit the information.
4. Tap **Save**.


Search for a contact

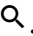1. Tap **Contacts**.
2. Tap .

Filter your contacts list

1. Tap **Contacts**.
2. Tap .
3. Tap **Settings** > **Contacts to display**.

Import or export contacts

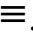1. Tap **Contacts**.
2. Tap .
3. Tap **Settings** > **Import/export**.

SEND AND RECEIVE MESSAGES

Keep in touch with your friends and family members through text messages.

Send a message

Nokia 2 Udhëzuesi i përdorimit

1. Tap **Messages** . typing their name and tap the contact.
2. Tap **+** . 4. After choosing all the recipients, tap **✓** .
3. To add a recipient, type their number in a recipients box. To add a contact, start 5. Write your message in the text box.
6. Tap **➤** .



Tip: If you want to send a photo in a message, tap **Photos** , tap the photo you want to share, and tap **↩** . Select **Messages** .

Read a message

1. Tap **Messages** .
2. Tap the message you want to read. You can also read a message from the notification panel. Slide down from the top of the screen and tap the message.

Reply to a message

1. Tap **Messages** .
2. Tap the message you want to reply to.
3. Write your reply in the text box below the message and tap **➤** .

MAIL

You can use your phone to read and reply to mail when you're on the go.

Add a mail account




When you use the Gmail app for the first time, you are asked to set up your email account.

1. Tap **Gmail** .
2. You can select the address connected with your Google account or tap **Add an email address** .
3. After adding all the accounts, tap **TAKE ME TO GMAIL** .



Delete a mail account

1. Tap **Settings** .
2. Tap **Accounts** .
3. Tap the account you want to delete and **⋮** > **Remove account** .



Send mail

1. Tap **Gmail**.
2. Tap .
3. In the **To** box, type in an address, or tap  > **Add from Contacts**.
4. Type in the message subject and the mail.
5. Tap .

Read and reply to mail

1. Tap **Gmail**.
2. Tap the message you want to read.
3. To reply the message, tap , or tap  > **Reply all**.

Delete mail

1. Tap **Gmail**.
2. Tap the message you want to delete and tap .
3. To delete multiple messages, tap the circle with the recipient's initial to select messages and tap .

GET SOCIAL

Want to connect and share stuff with the people in your life? With social apps, you can stay up to date with what's happening with your friends.

Social apps

To keep in touch with your friends and family, sign in to your instant messaging, sharing, and social networking services. Select the service you want to use from your Home screen. Social apps are available in the **Google Play Store**. The available services may vary.


5 Kamera

CAMERA BASICS


Why carry a separate camera if your phone has all you need for capturing memories? With your phone's camera, you can easily take photos or record videos.

Take a photo

Shoot sharp and vibrant photos – capture the best moments in your photo album.


1. Tap **Camera**.
2. Take aim and focus.
3. Tap the shutter button .

Record a video

To switch to the video recording mode, tap  in the camera viewfinder.

Take a selfie


Need that perfect selfie? Use the phone's front camera to take one.

1. Tap **Camera**.
2. Switch to the front camera.
3. Take aim and focus.
4. Tap the shutter button .


USE YOUR CAMERA LIKE A PRO

With your phone's camera, you can take panoramas. You can also use the other camera settings to enhance the quality of your photos.

Learn about your camera settings


In Camera app, tap  > tap  to learn more about each setting.

Take panoramas


1. Tap **Camera**.
2. Tap the shutter button .
3. Tap **Panorama** and follow the instructions on your phone.

Take photos with a timer

Want to have time to get in the shot too? Try out the timer.

1. Tap **Camera**.
2. Tap . The button shows the timer setting. To change it, tap it again.

Take high quality photos

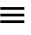In Camera app, tap  > **Resolution**, and set the resolution that you want to.



SAVE YOUR PHOTOS AND VIDEOS TO A MEMORY CARD

If there is a memory card in your phone, and your phone memory is filling up, save the photos you take and videos you record to the memory card.



Tip: For the best video quality, record videos to your phone memory. If you record videos to the memory card, it is recommended that the microSD card you use is a fast 4–128GB card by a well-known manufacturer.

Change the location of saved photos and videos

1. Tap **Camera**.
2. Tap  >  **Settings** > **Data storage**.

YOUR PHOTOS AND VIDEOS

View photos and videos on your phone

Want to relive those important moments? View photos and videos on your phone.

Tap **Photos**.

Copy your photos and videos to your computer


Do you want to view your photos or videos on a larger screen? Move them to your computer.

You can use your computer's file manager to copy or move your photos and videos to the computer.

Connect your phone to the computer with a compatible USB cable. To set the USB connection type, open the notification panel, and tap the USB notification.

Share your photos and videos

You can share your photos and videos quickly and easily for your friends and family to see.

1. In **Photos**, tap the photo you want to share and tap .
2. Select how you want to share the photo or video.

6 Interneti dhe lidhjet

ACTIVATE WI-FI

Using a Wi-Fi connection is generally faster and less expensive than using a mobile data connection. If both Wi-Fi and mobile data connections are available, your phone uses the Wi-Fi connection.

Turn on Wi-Fi

1. Tap **Settings** > **Wi-Fi**.
2. Switch Wi-Fi to **On**.
3. Select the connection you want to use.

Your Wi-Fi connection is active when  is shown on the status bar at the top of the screen. ¹




Tip: If you want to track locations when satellite signals are not available, for example when you're indoors or between tall buildings, switch Wi-Fi on to improve positioning accuracy.

¹ Note: Using Wi-Fi may be restricted in some countries. For example, in the EU, you are only allowed to use 5150–5350 MHz Wi-Fi indoors, and in the USA and Canada, you are only allowed to use 5.15–5.25 GHz Wi-Fi indoors. For more info, contact your local authorities.

Important: Use encryption to increase the security of your Wi-Fi connection. Using encryption reduces the risk of others accessing your data.

USE A CELLULAR DATA CONNECTION

Turn on a cellular data connection

Swipe down from the top of the screen, tap  and switch **Cellular data** to **On**.

Use a cellular data connection when roaming

Tap **Settings** > **More** > **Cellular networks**, and switch **Data roaming** to **On**.¹



Tip: To follow your data usage, tap **Settings** > **Data usage**.

¹

Connecting to the internet when roaming, especially when abroad, can raise data costs substantially.

BROWSE THE WEB

Use your phone to connect your computer to the web

It's simple to use the internet on your laptop on the go. Turn your phone into a Wi-Fi hotspot, and use your mobile data connection to access the internet with your laptop or other device.

1. Tap **Settings** > **More** > **Tethering & portable hotspot**.
2. Switch on the **Portable Wi-Fi hotspot** to share your mobile data connection over Wi-Fi, or Bluetooth tethering to use Bluetooth.

The other device uses data from your data plan, which may result in data traffic costs. For info on availability and costs, contact your network service provider.

Launch the browser

Catch up on the news, and visit your favorite websites. You can use **Google Chrome** on your phone to view web pages on the internet. **Chrome** can also help warn you against security threats.

To browse the web, you must be connected to the internet.

Tap **Chrome**.

Start browsing

No need for a computer - you can easily browse the internet on your phone.

1. Tap **Chrome**.
2. Type a web address and tap →.



Tip: If your network service provider doesn't charge you a fixed fee for data transfer, to save on data costs, use a Wi-Fi network to connect to the internet.

Open a new tab

When you want to visit several websites at the same time, you can open new browser tabs and switch between them.

In Chrome,

1. Tap the box next to the address bar.
2. Tap **+**.

Switch between tabs

In Chrome,

1. Tap the box next to the address bar.
2. Tap the tab you want.

Close a tab

In Chrome,

1. Tap the box next to the address bar.
2. Tap **X** on the tab you want to close.

Search the web

Explore the web and the outside world with Google Search. You can use the keyboard to write your search words.

In Chrome,

1. Tap the search bar.
2. Write your search word in the search box.
3. Tap →.

You can also select a search word from the proposed matches.

Use your data plan efficiently

If you're worried about your data usage costs, your phone helps you prevent some apps from sending or receiving data when running in the background.

1. Tap **Settings** > **Data usage** > **Data saver**.
2. Switch **Data saver** to **On**.


CLOSE A CONNECTION

Close internet connections

Save your battery by closing internet connections that are open in the background. You can do it without closing any apps.

1. Tap **Settings** > **Wi-Fi**.
2. Switch Wi-Fi to **Off**.

Close a cellular data connection

1. Swipe down from the top of the screen.
2. Tap .
3. Switch **Cellular data** to **Off**.

Turn on airplane mode

1. Tap **Settings** > **More**.
2. Switch on **Airplane mode**.

Airplane mode closes connections to the cellular network and switches your device's wireless features off. Comply with the instructions and safety requirements given by, for example, an airline, and any applicable laws and regulations. Where allowed, you can connect to a Wi-Fi network to, for example, browse the internet or switch Bluetooth sharing on in airplane mode.

BLUETOOTH

You can connect wirelessly to other compatible devices, such as phones, computers, headsets, and car kits. You can also send your photos to compatible phones or to your computer.

Connect to a Bluetooth accessory

You can connect your phone with many useful Bluetooth devices. For example, with a wireless headset (sold separately), you can speak on the phone hands-free – you can continue what you're doing, such as working at your computer, during a call. Connecting a phone to a Bluetooth device is called pairing.

Nokia 2 Udhëzuesi i përdorimit

1. Tap **Settings** > **Bluetooth**.
2. Switch **Bluetooth** to **On**.
3. Make sure the other device is switched on. You may need to start the pairing process from the other device. For details, see the user guide for the other device.
4. To pair your phone and the device, tap the device on the list of discovered Bluetooth devices.
5. You may need to type in a passcode. For details, see the user guide for the other device.

Since devices with Bluetooth wireless technology communicate using radio waves, they do not need to be in direct line-of-sight. Bluetooth devices must, however, be within 10 meters (33 feet) of each other, although the connection may be subject to interference from obstructions such as walls or from other electronic devices.

Paired devices can connect to your phone when Bluetooth is switched on. Other devices can detect your phone only if the Bluetooth settings view is open.

Do not pair with or accept connection requests from an unknown device. This helps to protect your phone from harmful content.

Disconnect a paired Bluetooth device


If you don't need to keep your phone connected to the other device anymore, you can disconnect them.

1. Tap **Settings** > **Bluetooth**.
2. Tap the name of the paired device.
3. Tap **OK** to confirm.

When you switch the other device on again, the connection reopens automatically.

Remove a pairing

If you no longer have the device with which you paired your phone, you can remove the pairing.

1. Tap **Settings** > **Bluetooth**.
2. Tap  next to a device name.
3. Tap **FORGET**.

Connect to your friend's phone with Bluetooth

You can use Bluetooth to wirelessly connect to your friend's phone, to share photos, and much more.

Nokia 2 Udhëzuesi i përdorimit


1. Tap **Settings** > **Bluetooth**.
2. Make sure Bluetooth is switched on in both phones.
3. Make sure the phones are visible to each other. You need to be in the Bluetooth settings view for your phone to be visible to other phones.
4. You can see the Bluetooth phones within range. Tap the phone you want to connect to.
5. If the other phone needs a passcode, type in or accept the passcode, and tap **Pair**.

The passcode is only used when you connect to something for the first time.

Send your content using Bluetooth

When you want to share your content or send photos you've taken to a friend, use Bluetooth to send them to compatible devices.

You can use more than one Bluetooth connection at a time. For example, while using a Bluetooth headset, you can still send things to another device.

1. Tap **Settings** > **Bluetooth**.
2. Switch **Bluetooth** to **On**.
3. Go to the content you want to send, and tap  > **Bluetooth**.
4. Tap the device to connect to. You can see the Bluetooth devices within range.
5. If the other device needs a passcode, type in the passcode. The passcode, which you can make up, must be typed in on both devices. The passcode in some devices is fixed. For details, see the user guide of the other device.

The location of the received files depends on the other device. For details, see the user guide for the other device.

VPN


You may need a virtual private network (VPN) connection to access your company resources, such as intranet or corporate mail, or you may use a VPN service for personal purposes.

Contact your company IT administrator for details of your VPN configuration, or check your VPN service's website for additional info.


Use a secure VPN connection

1. Tap **Settings** > **More** > **VPN**.
2. To add a VPN profile, tap **+**.
3. Type in the profile info as instructed by your company IT administrator or VPN service.

Edit a VPN profile

1. Tap  next to a profile name.
2. Change the info as required.

Delete a VPN profile

1. Tap  next to a profile name.
2. Tap **FORGET VPN**.

7 Music and videos

MUSIC

Listen to your favorite music wherever you are.

Play music

1. Tap **Play Music** > ≡ > **Music library**.
2. Tap the artist, album, song, genre, or playlist you want to play.

Pause or resume playback

1. Tap the Now Playing bar at the bottom of the screen to open **Now Playing**.
2. Tap ▶ or ||.



Tip: To play songs in random order, tap ⌘.

Create a playlist

Organise your songs into playlists, so you can listen to music that fits your mood.

1. When playing a song, tap ⋮ > **Add to playlist**.
2. To add a song to your new playlist, tap **NEW PLAYLIST**, or, to add a song to an existing playlist, select the playlist from the list.

Add songs to your phone

If you have music or videos stored on your computer, but want to access them on your phone, use a USB cable to sync the media between your phone and computer.

1. Connect your phone to a compatible computer with a USB cable.
2. In your computer's file manager, drag and drop your songs and videos to your phone.

VIDEOS

Have your favourite media with you while on the move – watch videos wherever you are.

Play a video

Tap **Photos** and tap the video you want to play.



Tip: To pause playback, tap **⏸**. To resume, tap **▶**.

Fast forward or rewind a video

To fast forward or rewind a video, drag the slider at the bottom of the screen right or left.

FM RADIO

Listen to FM Radio

Enjoy your favourite FM radio stations on the go.

1. To listen to the radio, you need to connect a compatible headset to the phone. The headset acts as an antenna.¹
2. After you have connected the headset, tap **FM Radio**.
3. To turn on or off the FM Radio, tap **ON** or **OFF**.



Troubleshooting tip: If the radio doesn't work, make sure the headset is connected properly.

Go to the next or previous station

Tap **▶▶** or **◀◀**.

Save a radio station

Want to listen to a radio station later? Save the station.

To save the station that you are listening to, tap **☆**.

View your saved stations list

Tap **∨ >** **Favorite List**.

Remove a station from favorites

Tap ☆ when listening to a station.



Tip: To listen to a radio station using the phone's speakers, tap **Speaker on**. Keep the headset connected.

1

The headset may be sold separately.

8 Organizimi i ditës tuaj

CALENDAR

Keep track of time – learn how to keep your appointments, tasks, and schedules up to date.

Manage calendars

1. Tap **Calendar**.
2. Tap **☰**.
3. Check the calendars you want to see. Customize your calendar to suit your needs. Tap **Settings** to find more alternatives.

Calendars are added automatically when you add an account to your phone. To add a new account with a calendar, tap **Settings** > **Accounts** > **Add account**.

Add an event

To remember an appointment or an event, add it to your calendar.

1. In **Calendar**, tap **+** and select an entry type.
2. Type in the details you want, and set the time.
3. To make an event repeat on certain days, tap **More options** > **Does not repeat**, and select how often the event should repeat.
4. To edit the reminder time, tap the reminder time, and select the time you need.



Tip: To edit an event, tap the event and **✎**, and edit the details.

Delete an appointment

1. Tap the event.
2. Tap **⋮** > **Delete**.

NOTES

Make a note

Notes on paper are easy to lose. Instead, jot them down with **Keep** app. This way, you always have your notes with you.

1. Tap **Keep** > **Take a note** .
2. Write a note.


Your notes are automatically saved.

9 Maps

FIND PLACES AND GET DIRECTIONS

Find a spot

Google Maps helps you find specific locations and businesses.

1. Tap **Maps**.
2. Write search words, such as a street address or place name, in the search bar.
3. Select an item from the list of proposed matches as you write, or tap  to search.

The location is shown on the map. If no search results are found, make sure the spelling of your search words is correct.

See your current location


Tap **Maps** > .

Look for restaurants and other interesting places near you

Tap **Maps** and the search bar, and select a category.

Get directions to a place

Get directions for walking, driving, or using public transit – use your current location or any other place as the start point.

1. Tap **Maps**. Enter the location you want to get directions to in the search bar.
2. Tap **Directions**. The icon in the circle represents the mode of transportation. The default direction mode is car . If you need walking or public transit directions, select the mode from under the search bar.
3. If you don't want the start point to be your current location, tap **Your location**, and search for a start point.
4. Tap **START** to start the navigation.

The route is shown on the map, along with an estimate of how long it takes to get there. To see detailed directions, swipe up from the bottom of the screen for the info.

DOWNLOAD AND UPDATE MAPS

Download a map

Save new maps to your phone before a journey, so you can browse the maps without an internet connection when traveling.

1. Tap **Maps** > ≡ > **Offline areas** > select your own map.
2. Select the area on the map and tap **DOWNLOAD**.

Update an existing map

1. Tap **Maps** > ≡ > **Offline maps** and the map name.
2. Tap **UPDATE**.



Tip: You can also set your phone to update the maps automatically. Tap **Maps** > ≡ > **Offline maps** > ⚙️ and switch **Automatically update offline maps** and **Automatically download offline maps** to **On**.

Delete a map

1. Tap **Maps** > ≡ > **Offline maps** and the map name.
2. Tap **DELETE**.

USE LOCATION SERVICES

Use Maps to find out where you are, attach your location to the photos you take. Location info can be attached to a photo or video, if your location can be determined using satellite or network technology. If you share a photo or video that contains location info, the location info may be shown to those who view the photo or video. Some apps can use your location info to offer you a wider variety of services.

Switch on location services

Your phone shows your location on the map using a satellite positioning system, Wi-Fi, or network (Cell ID) based positioning. The availability, accuracy and completeness of the location info depend on, for example, your location, surroundings, and third party sources, and may be limited. Location info may not be available, for example, inside buildings or underground. The Assisted GPS (A-GPS) network service and other similar enhancements to GPS and GLONASS retrieve location info using the mobile network, and assist in calculating your current location. Some satellite positioning systems may require transferring small amounts of data over the

Nokia 2 Udhëzuesi i përdorimit

mobile network. If you want to avoid data costs, for example when traveling, you can switch the mobile data connection off in your phone settings. Wi-Fi positioning improves positioning accuracy when satellite signals are not available, especially when you are indoors or between tall buildings. If you're in a place where the use of Wi-Fi is restricted, you can switch Wi-Fi off in your phone settings.

Tap **Settings** > tap **Location** and switch **Location On**.

10 Apps and services

GOOGLE PLAY

Your Android phone can live up to its full potential with Google Play – apps, music, movies and books are all readily available for your entertainment. All you need is a Google account.

Add a Google account to your phone

1. Tap **Settings** > **Accounts** > **Add account** > **Google**. If asked, confirm your device lock method.
2. Type in your Google account credentials and tap **Next**, or tap **Or create a new account**.
3. Follow the instructions on your phone.

Download apps

Unleash your phone's potential – there are thousands of apps waiting in the Google Play Store to help you with this.¹

1. Tap **Play Store**.
2. Tap the search bar to look for apps, or select apps from your recommendations.
3. In the app description, tap **INSTALL** to download and install the app.

To see your apps, go to the home screen and swipe up from the bottom of the screen.

Update apps

Update your **Play Store** apps to get all the latest features and bug fixes.

1. Tap **Play store** > ≡ > **My apps & games** to see available updates.
2. Tap the app with an update available and **UPDATE**.

You can also update all apps at once. In **My apps & games**, tap **UPDATE ALL**.

Remove downloaded apps

Tap **Play Store** > ≡ > **My apps & games**, choose an app you want to remove, and tap **UNINSTALL**.

Get music, movies, or books with Google Play

With Google Play, you can gain access to songs, movies, and books.

Tap **Music**, **Movies**, or **Books** to learn more.

¹ You need to have a Google account added to your phone to use Google Play services. Charges may apply to some of the content available in Google Play. To add a payment method, tap **Play Store** > **Menu** > **Account** > **Payment methods**. Always be sure to have a permission from the payment method owner when buying content from Google Play.

11 Software updates and backups

UPDATE YOUR PHONE SOFTWARE

Stay in step with the beat – update your phone software and apps wirelessly to get new and enhanced features for your phone. Updating the software may also improve your phone performance.

Install available updates

Tap **Settings** > **About phone** > **System updates** > **Check for update** to check if updates are available.

When your phone notifies you that an update is available, just follow the instructions shown on your phone. If your phone is low on memory, you may need to move your apps, photos, and other stuff to the memory card.

Warning: If you install a software update, you cannot use the device, even to make emergency calls, until the installation is completed and the device is restarted.

Before starting the update, connect a charger or make sure the device battery has enough power, and connect to Wi-Fi, as the update packages may use up a lot of mobile data.

BACK UP YOUR DATA

To ensure your data is safe, use the backup feature in your phone. Your device data (such as Wi-Fi passwords and call history) and app data (such as settings and files stored by apps) will be backed up remotely.

Switch on automatic backup

1. Tap **Settings** > **Backup & reset**, and switch **Back up my data** to **On**.
2. Tap **Backup account** to select to which account your data will be backed up.

RESTORE ORIGINAL SETTINGS AND REMOVE PRIVATE CONTENT FROM YOUR PHONE

Accidents can happen – if your phone is not working properly, you can restore its settings. Or, if you buy a new phone, or otherwise want to dispose of or recycle your phone, here's how you can remove your personal info and content. Note that it is your responsibility to remove all private content.

Reset your phone

1. Tap **Settings** > **Backup & reset** > **Factory data reset**.
2. Follow the instructions shown on your phone.

STORAGE

Use the Storage menu to check how much memory you have available.

Check available memory on your phone

If the phone memory is getting full, first check for and remove things you no longer need:

- Text, multimedia, and mail messages
- Contact entries and details
- Apps
- Music, photos, or videos

Instead of removing, you can also move the files to the memory card.

The quality of your memory card may affect the performance of your phone greatly. To get the best out of your phone, use a fast 4–128GB card by a well-known manufacturer.

Use only compatible memory cards approved for use with this device. Incompatible cards may damage the card and the device and corrupt data stored on the card.

To check how much memory you have available and how it's being used, tap **Settings** > **Storage**.

Remove downloaded apps

Tap **Play Store** > **≡** > **My apps & games**, choose an app you want to remove, and tap **UNINSTALL**.

Disable an app

You can't delete some apps that were pre-installed on your device. But you can disable them and they will be hidden from the list of apps on your device. If you disable an app, you can add it back to your device.

1. Tap **Settings** > **Apps**.

Nokia 2 Udhëzuesi i përdorimit

2. Tap the app name.
3. Tap **DISABLE**. You may not be able to disable all apps.

If an installed app depends on a removed app, the installed app may stop working. For details, see the user documentation of the installed app.

Add back a disabled app

You can add a disabled app back to the list of apps.

1. Tap **Settings** > **Apps**.
2. Tap **All apps** > **Disabled**.
3. Tap the app name.
4. Tap **ENABLE**.

Copy content between your phone and computer

You can copy photos, videos, and other content created by you between your phone and computer to show or store them.

1. Connect your phone to a compatible computer with a compatible USB cable.
2. On your computer, open a file manager, and browse to your phone.
3. Drag and drop items from your phone to the computer, or from your computer to the phone.

Make sure you put the files in the right folders on your phone, or you may not be able to see them.

12 Protect your phone

PROTECT YOUR PHONE WITH A SCREEN LOCK

You can set your phone to require authentication when unlocking the screen.

Set a screen lock

1. Tap **Settings** > **Security** > **Screen lock**.
2. Tap **Screen lock** to choose the type of lock and follow the instructions on your phone.

CHANGE YOUR SIM PIN CODE

If your SIM card came with a default SIM PIN code, you can change it to something more secure. Not all network service providers support this.

Select your SIM PIN

You can choose which digits to use for the SIM PIN. The SIM PIN code can be 4-8 digits.

1. Tap **Settings** > **Security** > **Set up SIM card lock**.
2. Under the selected SIM card, tap **Change SIM PIN**.



Tip: If you don't want to protect your SIM with a PIN code, in **Set up SIM card lock**, switch **Lock SIM card** to **Off**, and type in your current PIN.

ACCESS CODES

Learn what the different codes on your phone are for.

PIN or PIN2 code

PIN or PIN2 codes have 4-8 digits.

These codes protect your SIM card against unauthorized use or are required to access some features. You can set your phone to ask for the PIN code when you switch it on.

If you forget the codes or they aren't supplied with your card, contact your network service provider.

If you type in the code incorrectly 3 times in a row, you need to unblock the code with the PUK or PUK2 code.

PUK or PUK2 codes

PUK or PUK2 codes are required to unblock a PIN or PIN2 code.

If the codes are not supplied with your SIM card, contact your network service provider.

Lock code

Lock code is also known as security code or password.

The lock code helps you protect your phone against unauthorized use. You can set your phone to ask for the lock code that you define. Keep the code secret and in a safe place, separate from your phone.

If you forget the code and your phone is locked, your phone will require service. Additional charges may apply, and all the personal data on your phone may be deleted. For more info, contact the nearest authorized service facility for your phone, or your phone dealer.

IMEI code

The IMEI code is used to identify phones in the network. You may also need to give the number to your authorized service facility services or phone dealer.

To view your IMEI number, dial ***#06#**.

Your phone's IMEI code is also printed either on your phone or on the SIM tray depending on your phone model. If your phone has a removable back cover, you can find the IMEI code under the cover.

The IMEI is also visible on the original sales box.

Locate or lock your phone

If you lose your phone, you may be able to find, lock, or erase it remotely if you have signed in to a Google Account. Find My Device is on by default for phones associated with a Google Account.

To use Find My Device, your lost phone must be:

- Turned on
- Signed in to a Google Account
- Connected to mobile data or Wi-Fi
- Visible on Google Play
- Location turned on
- Find My Device turned on

When Find My Device connects with your phone, you see the phone's location, and the phone gets a notification.

Nokia 2 Udhëzuesi i përdorimit

1. Open android.com/find on a computer, tablet or phone connected to the internet and sign in to your Google Account.
2. If you have more than one phone, click the lost phone at the top of the screen.
3. On the map, see about where the phone is. The location is approximate and may not be accurate.

If your device can't be found, Find My Device will show its last known location, if available. To lock or erase your phone, follow the instructions on the web site.

13 Informacionet për produktin dhe sigurinë

PËR SIGURINË TUAJ

Lexoni këto udhëzime të thjeshta. Mosrespektimi i tyre mund të rezultojë në situata të rrezikshme ose shkelje të ligjeve dhe rregulloreve vendore. Për informacione të mëtejshme, lexoni të gjithë udhëzuesin e përdoruesit.

FIKENI NË ZONAT E KUFIZUARA



Fikeni pajisjen kur përdorimi i pajisjes celulare është i ndaluar ose kur ajo mund të shkaktojë ndërhyrje ose rrezik, p.sh. në avionë, në spitale ose pranë pajisjeve mjekësore, karburanteve, kimikateve ose zonave të shpërthimeve. Zbatoni të gjitha udhëzimet në zonat e kufizuara.

PARËSI KA SIGURIA NË RRUGË



Zbatoni të gjitha ligjet lokale. Kur jeni duke drejtuar automjetin, mbajini duart gjithmonë të lira për ta komanduar atë. Gjatë drejtimit të automjetit, rëndësi parësore duhet të ketë siguria në rrugë.

NDËRHJRJA



Nokia 2 Udhëzuesi i përdorimit

Të gjitha pajisjet celulare mund të jenë të ndjeshme ndaj ndërhyrjes, e cila mund të ndikojë në funksionimin e tyre.

SHËRBIMI I AUTORIZUAR



Këtë produkt mund ta instalojë ose ta riparojë vetëm personeli i autorizuar.

BATERITË, KARIKUESIT DHE AKSESORË TË TJERË



Përdorni vetëm bateri, karikues dhe pajisje shtesë të tjera të miratuara nga HMD Global Oy për përdorim me këtë pajisje. Mos lidhni produkte që nuk përputhen.

MBAJENI TË THATË PAJISJEN



Nëse pajisja juaj është rezistente ndaj ujit, shikoni klasifikimin e saj të mbrojtjes IP të specifikimit teknike të pajisjes për udhëzime më të detajuara.

PJESËT PREJ XHAMI



Pajisja dhe/ose ekrani i saj është prej xhami. Xhami mund të thyhet nëse pajisja hidhet mbi një sipërfaqe të fortë ose merr një goditje të fortë. Nëse thyhet xhami, mos i prekni pjesët prej xhami të pajisjes ose mos u përpiqni ta hiqni xhamin e thyer nga pajisja. Mos e përdorni pajisjen deri sa xhami të zëvendësohet nga personeli i autorizuar i shërbimit.

MBRONI DËGJIMIN TUAJ



Për të parandaluar dëmtimin e mundshëm të dëgjimit, mos dëgjoni me nivele të larta të volumit për periudha të gjata. Kini kujdes kur e mbani pajisjen afër veshit kur altoparlanti është në përdorim.

SAR



Kjo pajisje ndjek udhëzimet për ekspozimin ndaj RF-së, kur përdoret në një pozicion normal ndaj veshit ose kur është vendosur të paktën 1,5 centimetra (5/8 inçë) larg nga trupi. Vlerat maksimale specifike të SAR-it mund të gjenden në seksionin e informacionit për certifikimin (SAR) të këtij udhëzuesi përdorimi. Për më shumë informacione, seksionin e informacionit për certifikimin (SAR) të këtij udhëzuesi përdorimi ose shkoni te www.sar-tick.com.

NETWORK SERVICES AND COSTS

Përdorimi i disa veçorive dhe shërbimeve, ose shkarkimi i përmbajtjes, përfshirë elementet falas, kërkon një lidhje të të dhënave. Kjo mund të shkaktojë transferimin e sasive të mëdha të të dhënave, gjë që mund të sjellë kosto të të dhënave. Mund të duhet të abonoheni gjithashtu te disa nga veçoritë.



Important: 4G/LTE might not be supported by your network service provider or by the service provider you are using when traveling. In these cases, you may not be able to make or receive calls, send or receive messages or use mobile data connections. To make sure your device works seamlessly when full 4G/LTE service is not available, it is recommended that you change the highest connection speed from 4G to 3G. To do this, on the home screen, tap **Settings** > **More** > **Cellular networks**, and switch **Preferred network type** to **2G/3G**.


EMERGENCY CALLS




E rëndësishme: Nuk mund të garantohet lidhja në të gjitha kushtet. Kurrë mos u mbështetni vetëm në telefonat celularë për komunikimet thelbësore siç janë urgjencat mjekësore.

Përpara se të telefononi:

- Ndizni telefonin.
- Nëse ekrani dhe butonat e telefonit janë të bllokuar, zhbllokojini ato.
- Lëvizni në një vend me fuqi të përshtatshme sinjali.

Në ekranin bazë, trokitni .

1. Shkruani numrin zyrtar të emergjencës për vendndodhjen tuaj aktuale. Numrat e thirrjes së urgjencës mund të ndryshojnë sipas vendndodhjes.
2. Trokitni .
3. Jepni të gjithë informacionet e nevojshme sa më saktë të jetë e mundur. Mos e përfundoni thirrjen derisa t'ju japin lejen për të vepruar kështu.

Mund t'ju duhet gjithashtu që të veproni si më poshtë:

- Vendosni një kartë SIM në telefon. Nëse nuk keni një kartë SIM, në ekranin e kyçjes, trokitni **Emergjencë**.
- Nëse telefoni kërkon kodin PIN, trokitni **Emergjencë**.
- Çaktivizoni bllokimet e thirrjeve në telefon, si p.sh. bllokimin e thirrjeve, thirrjet fikse ose grupin e mbyllur të përdoruesve.
- Nëse rrjeti celular nuk është i disponueshëm, mund të provoni të bëni një thirrje në internet, nëse keni qasje.

KUJDESUNI PËR PAJISJEN TUAJ

Administrojini me kujdes pajisjen, baterinë, karikuesin dhe pajisjet shtesë. Sugjerimet e mëposhtme ju ndihmojnë ta mbani pajisjen në punë.

- Mbajeni të thatë pajisjen. Reshjet, lagështia dhe të gjitha llojet e lëngjeve ose avujve mund të përmbajnë minerale që gërryejnë qarqet elektronike.
- Mos e ruani apo përdorni pajisjen në vende të ndotura ose me pluhur.
- Mos e mbani pajisjen në temperatura të larta. Temperaturat e larta mund të dëmtojnë pajisjen ose baterinë.
- Mos e mbani pajisjen në temperatura të ftohta. Kur pajisja kthehet në temperaturën e saj normale, brenda saj mund të krijohet lagështi dhe të dëmtohet.
- Mos e hapni pajisjen ndryshe nga ç'udhëzohet në udhëzuesin e përdorimit.
- Modifikimet e paautorizuara mund të dëmtojnë pajisjen dhe mund të shkelin rregulloret për radiopajisjet.
- Mos e shkundni, hidhni ose goditni pajisjen ose baterinë. Manovrimi i ashpër mund dhe ta thyejë.
- Për pastrimin e sipërfaqes së pajisjes, përdorni vetëm një pecetë të butë, të thatë dhe të pastër.
- Mos e lyeni me bojë pajisjen. Boja mund të pengojë funksionimin normal.
- Mbajeni pajisjen larg magnetëve ose fushave magnetike.
- Për t'i mbajtur të sigurtat të dhënat tuaja të rëndësishme, ruajini ato në të paktën dy vende të veçanta, si pajisja, karta e kujtesës ose kompjuteri, ose shkruani informacione të rëndësishme.

Gjatë funksionimit për një kohë të gjatë, pajisja mund të ngrohet. Në shumicën e rasteve, kjo është normale. Për të shmangur mbinxehjen, pajisja mund të ngadalësohet automatikisht, të mbyllë aplikacione, të çaktivizojë karikimin dhe, nëse është e nevojshme, të fiket vetë. Nëse pajisja nuk punon siç duhet, dërgojeni në pikën më të afërt të autorizuar të shërbimit.

RICIKLIMI



Gjithmonë kthejini produktet tuaja elektronike të përdorura, bateritë dhe materialet e paketimit në pika grumbullimi të posaçme. Në këtë mënyrë ju ndihmoni në parandalimin e hedhjes së pakontrolluar të mbeturinave dhe nxitni riciklimin e materialeve. Produktet elektrike dhe elektronike përmbajnë shumë materiale të vlefshme, duke përfshirë metale (si bakër, alumin, çelik dhe magnez) dhe metale të çmuara (si ar, argjend dhe paladium). Të gjitha materialet e pajisjes mund të rikuperohen si materiale dhe energji.

SIMBOLI I KOSHIT ME RROTA SHËNUAR ME KRYQ

Simboli i koshit me rrota shënuar me kryq



Simboli i koshit me rrota, i shënuar me kryq në produktin tuaj, në bateri, në udhëzues ose në paketim, ju kujton se të gjitha produktet elektrike dhe elektronike dhe bateritë duhet të dërgohen në një pikë të veçantë grumbullimi kur dalin jashtë përdorimit. Mos harroni të hiqni të dhënat personale nga pajisja në fillim. Mos i hidhni këto produkte si mbetje të paveçuara urbane: çojini ato për riciklim. Për informacion mbi pikën tuaj më të afërt të riciklimit, kontrolloni me autoritetin tuaj lokal të mbetjeve ose lexoni për programin e rikthimit të HMD dhe disponueshmërinë e tij në vendin tuaj në www.hmd.com/phones/support/topics/recycle.

INFORMACIONET PËR BATERINË DHE KARIKUESIN

Informacione për baterinë dhe karikuesin

Për të kontrolluar nëse telefoni juaj ka një bateri të heqshme apo të paheqshme, shikoni udhëzuesin e printuar.

Pajisjet me bateri të heqshme Përdoreni pajisjen tuaj vetëm me një bateri origjinale të rikarikueshme. Bateria mund të karikohet dhe shkarkohet qindra herë, por me kalimin e kohës ajo do të konsumohet. Kur kohëzgjatja e telefonatave dhe e gjendjes së gatishmërisë është dukshëm më e shkurtër se normalisht, zëvendësoni baterinë.

Pajisjet me bateri që nuk hiqet Mos u përpiqni ta hiqni baterinë, pasi mund të dëmtoni pajisjen. Bateria mund të karikohet dhe shkarkohet qindra herë, por me kalimin e kohës ajo do të konsumohet. Kur kohëzgjatja e telefonatave dhe e gjendjes së gatishmërisë është dukshëm më e shkurtër se normalisht, për të zëvendësuar baterinë, dërgojeni atë në pikën më të afërt të autorizuar të shërbimit.

Karikojeni pajisjen tuaj me një karikues të përputhshëm. Lloji i spinës së karikuesit mund të ndryshojë. Koha e karikimit mund të ndryshojë në varësi të kapacitetit të pajisjes.

Informacionet e sigurisë për baterinë dhe karikuesin

Pas përfundimit të karikimit të pajisjes suaj, hiqeni karikuesin nga pajisja dhe nga priza. Kini parasysh se karikimi i vazhdueshëm nuk duhet të kalojë mbi 12 orë. Nëse një bateri plotësisht e karikuar lihet e papërdorur, ajo do të shkarkohet pas një farë kohe.

Temperaturat ekstreme zvogëlojnë kapacitetin dhe jetëgjatësinë e baterisë. Përpiquni që ta mbani baterinë gjithmonë midis temperaturave 15°C dhe 25°C (59°F dhe 77°F) për një rendiment optimal. Një pajisje me bateri të nxehtë ose të ftohtë mund të mos punojë përkohësisht. Kini parasysh se bateria mund të shkarkohet shpejt në temperatura të ulëta dhe të humbasë aq energji sa të fikë telefonin brenda pak minutave. Kur jeni në ambiente të jashtme në temperatura të ulëta, mbajeni telefonin ngrohtë.

Zbatoni rregulloret lokale. Kur është e mundur, ricikloni. Mos e asgjësoni njësojë si mbetjet shtëpiake.

Mos e ekspozoni baterinë ndaj trysnisë jashtëzakonisht të ulët të ajrit dhe mos e lini atë në temperatura jashtëzakonisht të larta, si p.sh. ta hidhni në zjarr, pasi kjo mund të shkaktojë shpërthimin e baterisë ose rrjedhjen e lëngjeve ose gazit të djegshëm nga ajo.

Mos e zbërtheni, pritni, shtypni, përthyeri, shponi apo dëmtoni baterinë në asnjë mënyrë. Në rast se bateria rrjedh, mos e lejoni lëngun të prekë lëkurën ose sytë. Nëse ndodh kjo gjë, shpëlani menjëherë me ujë zonat e prekura ose kërkoni ndihmë mjekësore. Mos e modifikoni, mos u përpiqni të futni objekte të huaja në bateri, mos e zhytni apo ekspozoni atë ndaj ujit ose lëngjeve të tjera. Bateritë mund të shpërthejnë nëse dëmtohen.

Përdoreni baterinë dhe karikuesin vetëm për qëllimin që janë krijuar. Përdorimi i papërshtatshëm ose përdorimi i baterive dhe karikuesve të papërputhshëm dhe të pamiratuara mund të paraqesë rrezik zjarri, shpërthimi ose rreziqe të tjera dhe mund të zhvlerësojë çdo miratim ose garanci. Nëse besoni se bateria ose karikuesi është dëmtuar, dërgojeni në një qendër shërbimi ose te shitësi i telefonit para se të vazhdoni ta përdorni. Mos përdorni asnjëherë një bateri ose karikues të dëmtuar. Përdoreni karikuesin vetëm në ambiente të brendshme. Mos e karikoni pajisjen tuaj gjatë një stuhie me vetëtimë. Kur karikuesi nuk është i përfshirë në kutinë e shitjes, karikojeni pajisjen duke përdorur kabllon e të dhënave (e përfshirë) dhe një përshtatës elektrik me USB (mund të shitet veçantë). Mund ta karikoni pajisjen me kabllon dhe përshtatës elektrik të palëve të treta që janë në përputhje me USB 2.0 ose versione të mëvonshme si dhe me rregulloret e zbatueshme të shtetit dhe standardet ndërkombëtare dhe rajonale të sigurisë. Përshtatësit e tjerë mund të mos i përmbushin standardet e zbatueshme të sigurisë dhe karikimi me përshtatës të tillë mund të përbëjë rrezik për humbje të pronës ose lëndime personale.

Për të hequr nga priza karikuesin ose aksesorët, kapni dhe tërhiqni spinën, jo kordonin.

Për më tepër, pikat e mëposhtme vlejné në rast se pajisja juaj ka një bateri të heqshme:

- Fikeni gjithmonë pajisjen dhe hiqni karikuesin nga spina përpara se të hiqni kapakët ose baterinë.
- Një qark i shkurtër aksidental mund të ndodhë kur një objekt metalik prek shiritat metalikë në bateri. Kjo gjë mund të dëmtojë baterinë ose objektin tjetër.

FËMIJËT E VEGJËL

Pajisja juaj dhe pajisjet shtesë të saj nuk janë lodra. Ato mund të përmbajnë pjesë të vogla. Mbajini larg nga fëmijët e vegjël.

PAJISJET MJEKËSORE

Funksionimi i pajisjes radiotransmetuese, duke përfshirë edhe telefonat celularë, mund të ndërhyjë në funksionimin e pajisjeve mjekësore të pambrojtura mirë. Konsultohuni me një mjek ose me prodhuesin e pajisjes mjekësore për të përcaktuar nëse janë të mbrojtura mirë nga energjia e jashtme e radiovalëve.

PAJISJET MJEKËSORE TË TRANSPLANTUARA

Për të shmangur ndërhyrjet e mundshme, prodhuesit e pajisjeve mjekësore të implantuara (si p.sh. stimulues kardiakë, pompa insuline dhe neurostimulues) rekomandojnë një distancë ndarëse minimale prej 15,3 centimetrash (6 inç) mes pajisjes pa tel dhe pajisjes mjekësore. Personat që kanë pajisje të tilla duhet që:

- Mbajeni gjithmonë pajisjen me valë më shumë se 15,3 centimetra (6 inç) nga pajisja mjekësore.
- Të mos e mbajnë pajisjen në xhepa afër gjoksit.
- Ta mbajnë pajisjen celulare në veshin në anën e kundërt të pajisjes mjekësore.
- Fikeni pajisjen celulare, nëse keni ndonjë arsye të dyshoni se po kryhen ndërhyrje.
- Të ndjekin udhëzimet e prodhuesit të pajisjes mjekësore të implantuar.

Nëse keni pyetje rreth përdorimit të pajisjes suaj celulare bashkë me një pajisje mjekësore të transplantuar, këshillohuni me mjekun tuaj.

DËGJIMI



Paralajmërim: Gjatë përdorimit të kufjeve, mund të mos dëgjoni tingujt e ambientit që ju rrethon. Mos i përdorni kufjet atëherë kur ato mund të rrezikojnë sigurinë tuaj.

Disa pajisje celulare mund të shkaktojnë ndërhyrje në disa aparate dëgjimi.

MBRONI PAJISJEN TUAJ NGA PËRMBAJTJET E DËMSHME

Pajisja juaj mund të ekspozohet ndaj viruseve dhe përmbajtjeve të tjera të dëmshme. Merrni masat paraprake si më poshtë:

- Tregoni kujdes kur hapni mesazhet. Ato mund të përmbajnë softuerë keqdashës ose mund të jenë të dëmshme në një mënyrë tjetër për pajisjen ose kompjuterin tuaj.
- Tregoni kujdes kur pranoni kërkesa për lidhje, kur shfletoni në internet ose kur shkarkoni përmbajtje. Mos pranoni lidhje me Bluetooth nga burime që nuk i besoni.
- Instaloni dhe përdorni vetëm shërbimet dhe softuerët nga burimet që i besoni dhe që ofrojnë një siguri dhe mbrojtje të

përshtatshme.

- Instaloni një antivirus dhe softuerë të tjerë të sigurisë në pajisjen tuaj dhe çdo kompjuter të lidhur. Përdorni vetëm një aplikacion antivirus në të njëjtën kohë. Përdorimi i shumë aplikacioneve mund të ndikojë te rendimenti dhe funksionimi

i pajisjes dhe/ose kompjuterit.

- Nëse keni akses te shenjat e referimit dhe lidhjet e instaluara paraprakisht në sajte interneti të palëve të treta, merrni masat paraprake të duhura. HMD Global nuk mbështet apo merr përgjegjësi për sajte të tilla.

MJETET

Sinjalet e radios mund të ndikojnë në sistemet elektronike të instaluara gabim ose të mbrojtura në mënyrë të gabuar në automjete. Për informacione të mëtejshme, pyesni prodhuesin e automjetit tuaj ose të aparaturave të tij. Vetëm personeli i autorizuar duhet të instalojë pajisjen në automjet. Instalimi i gabuar mund të jetë i rrezikshëm dhe mund ta zhvlerësojë garancinë tuaj. Kontrolloni rregullisht nëse të gjitha aparaturat e pajisjes celulare të instaluara në automjetin tuaj, janë të vendosura dhe punojnë si duhet. Mos ruani ose transportoni materiale shpërthyes në të njëjtën kabinë me pajisjen, pjesët ose pajisjet shtesë të saj. Mos e vendosni pajisjen tuaj ose pajisjet shtesë në zonën e hapjes së jastëkëve të ajrit.

MJEDISE TË MUNDSHME SHPËRTHYESE

Fikeni pajisjen tuaj në ambiente të mundshme shpërthyes, si p.sh. pranë pompave të benzinës. Shkëndijat mund të shkaktojnë shpërthim ose zjarr, me pasojë plagosjen trupore ose vdekjen. Vini re kufizimet në zonat me karburant; uzinat kimike; ose aty ku janë duke u zhvilluar shpërthime. Zonat me një atmosferë të mundshme shpërthyes mund të mos jenë të shënuara qartë. Këto janë zakonisht zona ku këshilloheni ta fikni motorin, poshtë kuvertës në anije, në impiantet e transferimit ose të ruajtjes së kimikateve dhe aty ku ajri përmban lëndë kimike ose grimca të tilla si kokrriza pluhuri ose metalesh. Këshillohuni me prodhuesit e automjeteve që përdorin gaz natyror të lëngëzuar (si propani ose butani) nëse kjo pajisje mund të përdoret pa rrezik në afërsi të tyre.

INFORMACIONET PËR CERTIFIKIMIN (SAR)

Kjo pajisje celulare plotëson udhëzimet për ekspozimin ndaj valëve të radios.

Pajisja juaj celulare është një radiotransmetuese dhe radiomarrëse. Ajo është projektuar që të mos i kalojë kufijtë për ekspozimin ndaj radiovalëve (fushat elektromagnetike të radiofrekuencave), të rekomanduara sipas udhëzimeve ndërkombëtare nga organizata shkencore e pavarur ICNIRP. Këto udhëzime përfshijnë marzhe të konsiderueshëm për sigurinë të planifikuara për të garantuar mbrojtjen e të gjithë personave, pavarësisht nga mosha dhe gjendja shëndetësore. Udhëzimet për ekspozimin bazohen në Normën specifike të përthithjes (SAR), e cila është një shprehje e sasisë të fuqisë së radiofrekuencës (RF) të depozituar në kokë ose në trup kur pajisja është duke transmetuar. Kufiri i SAR-it sipas ICNIRP për pajisjet celulare është mesatarisht 2 W/kg për 10 gramë ind.

Testet për vlerën SAR kryhen me pajisjen në pozicionet standarde të përdorimit, duke transmetuar në nivelin më të lartë të fuqisë së certifikuar dhe në të gjitha bandat e frekuencave.

Kjo pajisje përmbush udhëzimet për ekspozimin ndaj RF-së kur përdoret pranë kokës ose kur vendoset të paktën 1,5 centimetra (5/8 inç) larg nga trupi. Kur përdoret një këllëf, kapëse rripi ose një mbajtëse e një forme tjetër për përdorimin e pajisjes në kontakt me trupin, ajo nuk duhet të përmbajë metale dhe duhet të sigurojë të paktën distancën ndarëse me trupin si më sipër.

Dërgimi i të dhënave ose i mesazheve kërkon një lidhje të mirë me rrjetin. Dërgimi mund të vonohet deri sa një lidhje e tillë të jetë e disponueshme. Ndiqni udhëzimet për distancën ndarëse deri sa të përfundojë dërgimi.

Gjatë përdorimit të përgjithshëm, vlerat e SAR-it zakonisht janë shumë më të ulëta se vlerat e deklaruara më sipër. Kjo ndodh sepse, për efektivitet në sistem dhe për të minimizuar ndërhyrjet në rrjet, fuqia e përdorimit e pajisjes celulare ulet automatikisht kur nevojitet fuqia e plotë për një thirrje të caktuar. Sa më i ultë të jetë rezultati i fuqisë, aq më e ultë është vlera e SAR-it.

Modelet e pajisjeve mund të kenë versione të ndryshme dhe më shumë se një vlerë. Me kalimin e kohës mund të ndodhin ndryshime të pjesëve përbërëse e të modelit dhe disa ndryshime mund të ndikojnë në vlerat e SAR-it.

Për më shumë informacione, shkoni te www.sar-tick.com. Kini parasysh se pajisjet celulare mund të transmetojnë edhe nëse nuk jeni duke kryer një thirrje zanore.

Organizata Botërore e Shëndetësisë (OBSH) ka deklaruar se informacionet aktuale shkencore nuk tregojnë se ka nevojë për masa paraprake të veçanta kur përdoren pajisjet celulare. Nëse jeni të interesuar të ulni ekspozimin tuaj, rekomandohet që të kufizoni përdorimin ose të përdorni një paketë pa duar për ta mbajtur pajisjen larg kokës ose trupit. Për më shumë informacione dhe shpjegime e diskutime mbi ekspozimin ndaj radiofrekuencave, shkoni te sajti i uebit i OBSH-së në www.who.int/health-topics/electromagnetic-fields#tab=tab_1.

Ju lutemi referojuni www.hmd.com/sar për vlerën maksimale SAR të pajisjes.

MBI MENAXHIMIN E TË DREJTAVE DIXHITALE

Kur përdorni këtë pajisje, zbatoni të gjitha ligjet dhe respektoni zakonet vendore, fshehtësinë dhe të drejtat e ligjshme të të tjerëve, duke përfshirë dhe të drejtat e autorit. Mbrojtja e të drejtave të autorit mund t'ju parandalojë të kopjoni, modifikoni ose transferoni fotografi, muzikë dhe përmbajtje të tjera.

COPYRIGHTS AND NOTICES

Copyrights and other notices

The availability of products, features, apps and services may vary by region. For more info, contact your dealer or your service provider. This device may contain commodities, technology

or software subject to export laws and regulations from the US and other countries. Diversion contrary to law is prohibited.

The contents of this document are provided "as is". Except as required by applicable law, no warranties of any kind, either express or implied, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose, are made in relation to the accuracy, reliability or contents of this document. HMD Global reserves the right to revise this document or withdraw it at any time without prior notice.

To the maximum extent permitted by applicable law, under no circumstances shall HMD Global or any of its licensors be responsible for any loss of data or income or any special, incidental, consequential or indirect damages howsoever caused.

Reproduction, transfer or distribution of part or all of the contents in this document in any form without the prior written permission of HMD Global is prohibited. HMD Global operates a policy of continuous development. HMD Global reserves the right to make changes and improvements to any of the products described in this document without prior notice.

HMD Global does not make any representations, provide a warranty, or take any responsibility for the functionality, content, or end-user support of third-party apps provided with your device. By using an app, you acknowledge that the app is provided as is.

Downloading of maps, games, music and videos and uploading of images and videos may involve transferring large amounts of data. Your service provider may charge for the data transmission. The availability of particular products, services and features may vary by region. Please check with your local dealer for further details and availability of language options.

Certain features, functionality and product specifications may be network dependent and subject to additional terms, conditions, and charges.

All are subject to change without notice.

HMD Global Oy is the exclusive licensee of the Nokia brand for phones & tablets. Nokia is a registered trademark of Nokia Corporation.

HMD Global Privacy Policy, available at <http://www.hmd.com/privacy>, applies to your use of the device.

Qualcomm and Snapdragon are trademarks of Qualcomm Incorporated, registered in the United States and other countries.

Android, Google and Google Play are trademarks of Google Inc.

All other trademarks are the property of their respective owners.