

NOKIA

Nokia 210 Dual SIM

Korisnički vodič

Sadržaj

1	O ovom korisničkom vodiču	4
2	Prvi koraci	5
	Keys and parts	5
	Set up and switch on your phone	6
	Charge your phone	7
	Keypad	8
	Write text	8
3	Calls, contacts, and messages	9
	Calls	9
	Contacts	9
	Send messages	10
4	Personalize your phone	11
	Change tones	11
	Change the look of your home screen	11
	Profiles	11
	Add shortcuts	12
	Get the most out of the two SIM cards	12
5	Kamera	14
	Photos and videos	14
6	Internet i veze	15
	Browse the web	15
	Bluetooth®	15
7	Muzika	16
	Music player	16
	Listen to radio	16

8 Clock, calendar, and calculator	17
Set the time and date manually	17
Alarm clock	17
Calendar	17
Calculator	18
9 Empty your phone	19
Restore factory settings	19
10 Informacije o proizvodu i sigurnosne informacije	20
For your safety	20
Emergency calls	22
Vodite računa o svom uređaju	23
Recikliranje	24
Simbol precrtane kante na točkovima	24
Battery and charger information	24
Mala djeca	25
Medicinski uređaji	25
Implantirani medicinski uređaji	25
Sluh	26
Zaštitite uređaj od štetnog sadržaja	26
Vozila	26
Potencijalno eksplozivna okruženja	27
Certifikat o specifičnoj stopi apsorpcije	27
O upravljanju digitalnim pravima	28
Copyrights and other notices	28

1 O ovom korisničkom vodiču




Važno: Pročitajte važne informacije o sigurnom korištenju vašeg uređaja i baterije u odlomku "Informacije o proizvodu i sigurnosti" prije nego što počnete koristiti uređaj. Da biste saznali kako započeti s novim uređajem, pročitajte korisnički vodič.

2 Prvi koraci

KEYS AND PARTS

Your phone

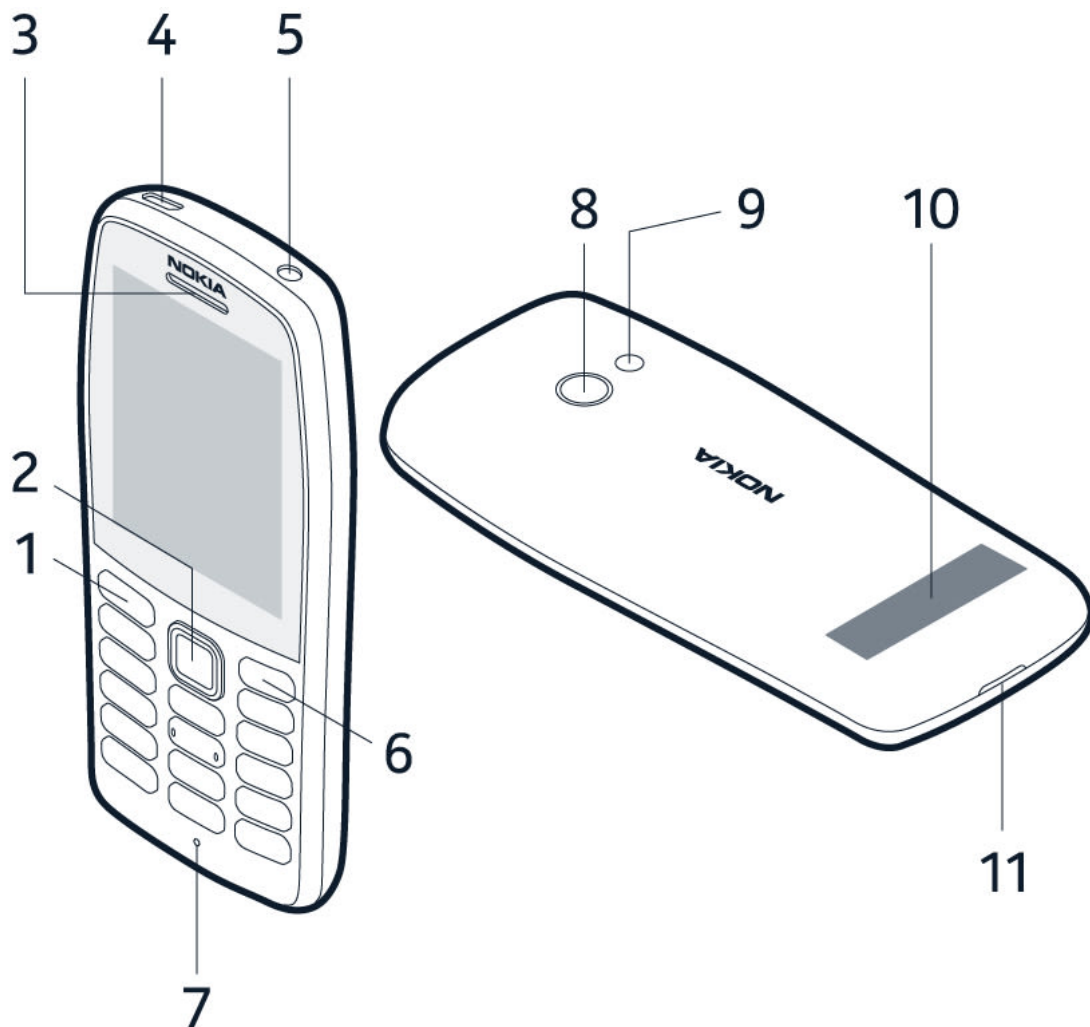

This user guide applies to the following model: TA-1139

The keys and parts of your phone are:

- | | |
|------------------------------------------------------------|-----------------------------|
| 1. Left selection key | 6. Right selection key |
| 2. Scroll key. Press to access your apps and select items. | 7. Microphone |
| 3. Earpiece/Loudspeaker | 8. Camera |
| 4. USB connector | 9. Flash |
| 5. Headset connector | 10. Antenna area |
| | 11. Back cover opening slot |

Avoid touching the antenna area while the antenna is in use. Contact with antennas affects the communication quality and may reduce battery life due to higher power level during operation.

Do not connect to products that create an output signal, as this may damage the device. Do not connect any voltage source to the audio connector. If you connect an external device or headset, other than those approved for use with this device, to the audio connector, pay special attention to volume levels. Parts of the device are magnetic. Metallic materials may be attracted to the device. Do not place credit cards or other magnetic storage media near the device, because info stored on them may be erased.

Some of the accessories mentioned in this user guide, such as charger, headset, or data cable, may be sold separately.



Note: You can set the phone to ask for a security code. The pre-set code is 12345. Change it to protect your privacy and personal data. Note, however, that when you change the code, you need to remember the new code, as HMD Global is not able to open or bypass it.

SET UP AND SWITCH ON YOUR PHONE

Learn how to insert the SIM card, memory card, and battery, and how to switch on your phone.

Mini SIM




Important: This device is designed to be used with a mini SIM card only. Use of incompatible SIM cards may damage the card or the device, and may corrupt data stored on the card.



Note: Switch the device off and disconnect the charger and any other device before removing any covers. Avoid touching electronic components while changing any covers. Always store and use the device with any covers attached.

Set up your phone

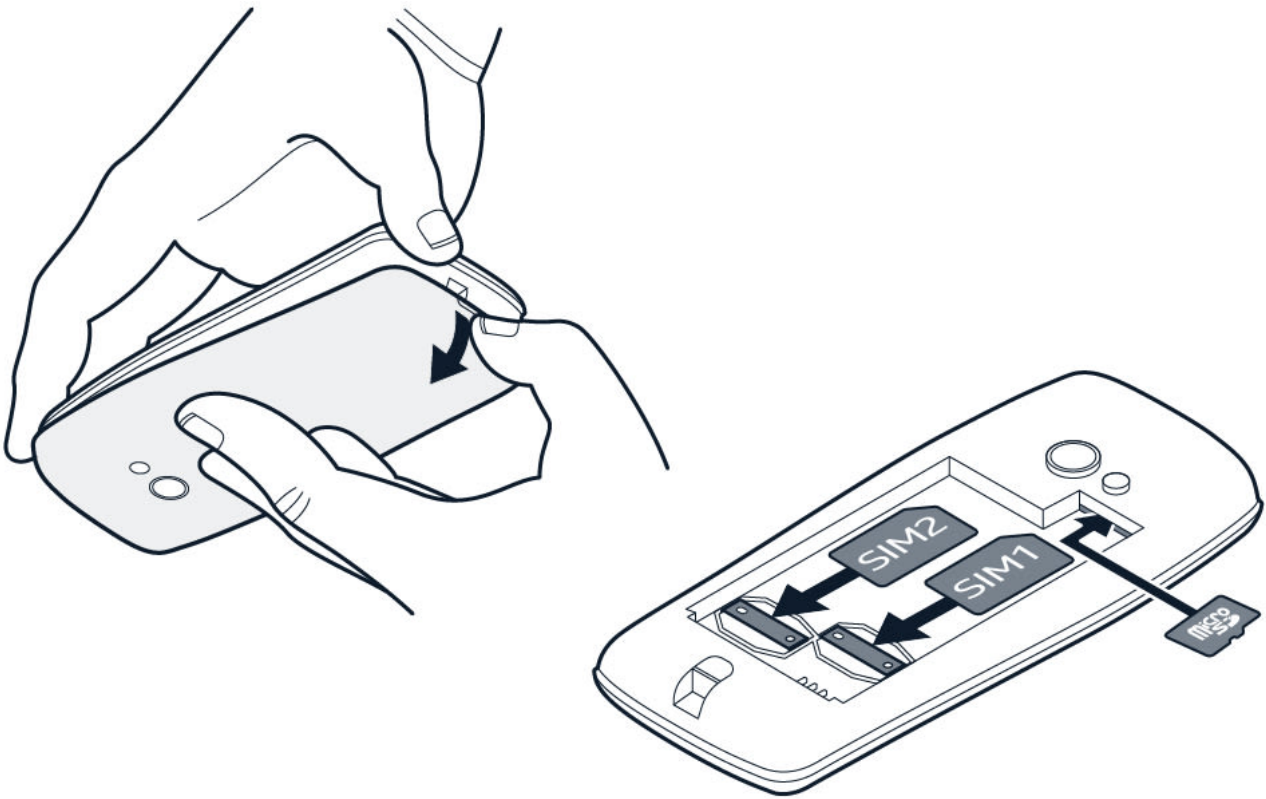

1. Put your fingernail in the small slot at the bottom of the phone, lift and remove the cover.
2. If the battery is in the phone, lift it out.
3. Slide the SIM card in the SIM1 slot. If you have a second SIM, slide it into the SIM2 slot. Both SIM cards are available at the same time when the device is not being used, but while one SIM card is active, for example, making a call, the other may be unavailable.
4. If you have a memory card, slide it in the memory card slot.
5. Put back the battery.
6. Put back the cover.

Switch on your phone

Press and hold .

CHARGE YOUR PHONE

Your battery has been partially charged at the factory, but you may need to recharge it before you can use your phone.

Charge the battery

1. Plug the charger into a wall outlet.
2. Connect the charger to the phone. When done, unplug the charger from the phone, then from the wall outlet.

If the battery is completely discharged, it may take several minutes before the charging indicator is displayed.



Tip: You can use USB charging when a wall outlet is not available. Data can be transferred while charging the device. The efficiency of USB charging power varies significantly, and it may take a long time for charging to start and the device to start functioning. Make sure your computer is switched on.

KEYPAD

Use the phone keys

- To see the apps and features of your phone, on the home screen, select **Menu**.
- To go to an app or feature, press the scroll key up, down, left, or right. To open the app or feature, press the scroll key.
- To go back to the home screen, press the end key **Ⓜ**.
- To change the volume of your phone, scroll left or right.
- To switch on the flashlight, on the home screen, press the scroll key up twice. To switch it off, scroll up once. Do not shine the light in anyone's eyes.

Lock the keypad

To avoid accidentally pressing the keys, lock the keypad: select **Go to** > **Lock keypad**. To unlock the keypad, press the end key, and select **Unlock**.

WRITE TEXT

Write using the keypad

Writing with the keypad is easy and fun.

Press a key repeatedly until the letter is shown.

To type in a space press **0**.

To type in a special character or punctuation mark, press *****.

To switch between character cases, press **#** repeatedly.

To type in a number, press and hold a number key.

3 Calls, contacts, and messages

CALLS

Make a call

Learn how to make a call with your new phone.

1. Type in the phone number. To type in the + character, used for international calls, press * twice.
2. Press the call key. If asked, select which SIM to use.
3. To end the call, press the end key.

Answer a call

Press .




Tip: If you are in a situation where you cannot answer the phone and you need to silence it quickly, select **Silence**.

CONTACTS


Add a contact

Save and organize your friends' phone numbers.

1. Select **Menu** >  > **Add**.
2. Write the name, and type in the number.
3. Select **Save**.

To add more contacts, select **Options** > **Add new contact**.

Save a contact from call log

1. Select **Menu** >  > **Missed**, **Received**, or **Dialled**, depending on from where you want to save the contact.
2. Scroll to the number you want to save, select **Options** > **Save**, and select where you want to save the contact.
3. Add the contact's name, check that the phone number is correct, and select **Save**.


Call a contact

You can call a contact directly from the contacts list.

Select **Menu** > , scroll to the contact you want to call, and press the call key.

SEND MESSAGES


Write and send messages

1. Select **Menu** >  > **Create message**.
2. In the To field, enter the number of the recipient, or select **Add** > **Contacts** to add recipients from your contacts list.
3. Write the message on the message field.
4. To insert images to the message or to use predictive text, select **Options**. To insert smileys or symbols, select **Options** > **Insert options**.
5. Select **Send**.

4 Personalize your phone

CHANGE TONES


Set new tones

1. Select **Menu** >  > **Tones**.
2. Select which tone you want to change and select for which SIM card you want to change it, if asked.
3. Scroll to the tone that you want and select **OK**.


CHANGE THE LOOK OF YOUR HOME SCREEN

Choose a new wallpaper

You can change the background of your home screen.


1. Select **Menu** >  > **Display settings** > **Wallpaper**.
2. Select **Default**, scroll to the wallpaper you want, and select **View**.
3. If you like the wallpaper, select **Choose** and then select how you want to position the wallpaper on the home screen.



Tip: You can also use a photo you've taken or received as wallpaper. Select **Menu** >  > **Display settings** > **Wallpaper** > **Photos**.


Show date and time

You can select to see date and time on the home screen of your phone.

Select **Menu** >  > **Date and time** > **Show date and time** > **On**.

If you want your phone to update the time automatically, set **Auto-update time** on.



Tip: You can also set your phone to show the time even in the idle mode. Select **Menu** >  > **Display settings** > **Glance screen** > **On**.

PROFILES

Your phone has different profiles for different situations. You can edit the profiles to your liking.

Personalize profiles

There are several profiles that you can use in different situations. There is, for example, a silent profile for when you cannot have sounds on, and an outdoor profile with loud tones.

You can personalize profiles further.

1. Select **Menu** > **⚙️** > **Profiles**.
2. Select a profile and **Personalise**.

For each profile you can set a specific ringtone, ringtone volume, message sounds and so on.

ADD SHORTCUTS

You can add shortcuts to different apps and settings on your home screen.

Edit Go to settings

On the bottom left of your home screen is **Go to**, which contains shortcuts to various apps and settings. Select the shortcuts that are the handiest for you.

1. Select **Menu** > **⚙️** > **Go to settings**.
2. Select **Choose options**.
3. Scroll to each shortcut you want to have on the **Go to** list and select **Mark**.
4. Select **Done** > **Yes** to save the changes.

You can also reorganize your **Go to** list.

1. Select **Organise**.
2. Scroll to the item you want to move, select **Move** and where you want to move it.
3. Select **Back** > **Yes** to save the changes.

GET THE MOST OUT OF THE TWO SIM CARDS

Your phone can have two SIM cards, and you can use them for different purposes.

Select which SIM card to use

Select **Menu** >  > **Connectivity** > **Dual SIM**.



- To choose which SIM to use for calls, select **Default SIM for calls**, and select **Always ask**, or **SIM1**, or **SIM2**.
- To choose which SIM to use for messages, select **Default SIM for msgs**, and select **Always ask**, or **SIM1**, or **SIM2**.


5 Kamera

PHOTOS AND VIDEOS



You don't need a separate camera when your phone has all you need for capturing memories.

Take a photo




1. Select **Menu** > .
2. To zoom in or out, scroll up or down.
3. To take a photo, select .

To see the photo you just took, select  > **Photos**.

Options for the camera

Select **Menu** >  > , and select the option you want, such as **Brightness** or **Image effects**.

Record a video


1. Select **Menu** > .
2. Scroll left and select .
3. To stop the video, select .

To see the video you just recorded, select  > **Videos**.

6 Internet i veze

BROWSE THE WEB


Connect to the internet

1. Select **Menu** > .
2. Write a web address, and select **Go**.
3. Use the scroll key to move in the browser.

BLUETOOTH®

Connect your phone to other devices with Bluetooth.

Switch on Bluetooth


1. Select **Menu** >  > **Connectivity** > **Bluetooth**.
2. Switch **Bluetooth** to **On**.
3. Select **Active** to find a new device or **Paired** to find a device you have paired your phone with previously.

7 Muzika

MUSIC PLAYER

You can listen to your MP3 music files with the music player.

Listen to music

1. Select **Menu** > .
2. Select whether you want to view your songs, artists, albums, or playlists.
3. Scroll to a song, and select **Play**.

To adjust the volume, scroll up or down.




Tip: To set a song as ringtone, select **Options** > **Use as tone**.


LISTEN TO RADIO

Connect a compatible headset to your phone. It acts as an antenna.

Search for radio stations

1. Select **Menu** > .
2. To search for all available stations select **Options** > **Auto tuning**.
3. To switch to a saved station, scroll left or right.

Listen to your favorite radio stations on your phone


Select **Menu** > . To change the volume, scroll up or down. To close the radio, select **Options** > **Switch off**.

8 Clock, calendar, and calculator

SET THE TIME AND DATE MANUALLY

You can set your phone clock manually.

Change the time and date


1. Select **Menu** >  > **Date and time**.
2. Switch **Auto-update time** to **Off**.
3. To set the time, select **Time**. Use the scroll key to set the time, and select **OK**.
4. To set the date, select **Date**. Use the scroll key to set the date, and select **OK**.

ALARM CLOCK

Learn how to use the alarm clock to wake up and get to places on time.

Set an alarm


No clock around? Use your phone as an alarm clock.

1. Select **Menu** > .
2. Select a pre-set alarm.
3. To set the alarm on, select **On**, or to set a new time, select **Edit** and use the keypad to enter the time.
4. Select **Save**.

CALENDAR

Need to remember an event? Add it to your calendar.


Add a calendar event

1. Select **Menu** > .
2. Scroll to a date, and select **Options** > **Add event**.
3. Enter the event details, and select **Save**.

CALCULATOR

Learn how to add, subtract, multiply and divide with your phone calculator.

How to calculate

1. Select **Menu** > .
2. Enter the first factor of your calculation, use the scroll key to select the operation, and enter the second factor.
3. Select **Equals** to get the result of the calculation.

Select **Clear** to empty the number fields.

9 Empty your phone

RESTORE FACTORY SETTINGS

Reset your phone

You can restore the original factory settings, but be careful, since this reset removes all data you have saved in the phone memory and all your personalization.

If you are disposing your phone, note that you are responsible of removing all private content.

To reset your phone to its original settings and to remove all your data, on the home screen, type in `*#7370#`. If asked, enter your security code.

10 Informacije o proizvodu i sigurnosne informacije

FOR YOUR SAFETY

Read these simple guidelines. Not following them may be dangerous or against local laws and regulations. For further info, read the complete user guide.

ISKLUČIVANJE U OGRANIČENIM PODRUČJIMA



Isključite uređaj kada uporaba mobilnog uređaja nije dopuštena ili kada može uzrokovati smetnje ili opasnost, na primjer, u avionu, u bolnicama ili u blizini medicinske opreme, goriva, kemikalija ili područja miniranja. Poštujte sva uputstva u ograničenim područjima.

SIGURNOST NA PUTU JE NA PRVOM MJESTU



Poštujte sve lokalne zakone. Uvijek držite ruke slobodnim za upravljanje vozilom. Vaša osnovna briga dok vozite je sigurnost na putu.

SMETNJE



Svi bežični uređaji mogu biti osjetljivi na smetnje što bi moglo uticati na performanse.

OVLAŠTENI SERVIS



Samo ovlašteno osoblje smije instalirati ili popravljati ovaj proizvod.

BATERIJE, PUNJAČI I DRUGI DODACI



Za upotrebu s ovim uređajem, koristite baterije, punjače i druge dodatke koje je odobrila kompanija HMD Global Oy. Nemojte povezivati nekompatibilne proizvode.

DRŽITE UREĐAJ NA SUHOM



Ako je vaš uređaj vodootporan, pogledajte njegovu IP ocjenu u tehničkim specifikacijama uređaja za detaljnija uputstva.

ZAŠTITITE SLUH



Da biste spriječili moguće oštećenje sluha, nemojte slušati sadržaj velike glasnoće tokom dužeg perioda. Budite oprezni kada držite uređaj u blizini uha dok koristite zvučnik.

Specifična stopa apsorpcije (SAR)



Ovaj uređaj zadovoljava smjernice o izlaganju radiofrekventnim valovima kada se koristi u normalnom položaju naspram uha ili kada se drži najmanje 1,5 cm (5/8 inča) od tijela. Maksimalne vrijednosti specifične stope apsorpcije datog uređaja se nalaze u odjeljku Informacija o certifikaciji (SAR) ovog korisničkog vodiča. Za više informacija, pogledajte odjeljak Informacije o certifikaciji (SAR) ovog korisničkog vodiča ili posjetite web lokaciju www.sar-tick.com.

EMERGENCY CALLS



Važno: Ne mogu se garantovati veze u svim uslovima. Nikada se ne oslanjajte isključivo na bežični telefon za osnovnu komunikaciju kao što je komunikacija u hitnim slučajevima.

Before making the call:

- Switch the phone on.
- If the phone screen and keys are locked, unlock them.
- Move to a place with adequate signal strength.

1. Press the end key repeatedly, until the home screen is shown.

2. Type in the official emergency number for your present location. Emergency call numbers vary by location.
3. Press the call key.
4. Give the necessary info as accurately as possible. Do not end the call until given permission to do so.

You may also need to do the following:

- Put a SIM card in the phone.
- If your phone asks for a PIN code, type in the official emergency number for your present location, and press the call key.
- Switch the call restrictions off in your phone, such as call barring, fixed dialling, or closed user group.

VODITE RAČUNA O SVOM UREĐAJU

Rukujte uređajem, baterijom, punjačem i dodacima s pažnjom. Sljedeći prijedlozi vam pomažu da uređaj održavate u radnom stanju.

- Držite uređaj na suhom. Padavine, vlažnost i sve vrste tečnosti ili vlage mogu sadržavati minerale koji uzrokuju korodiranje elektroničkih spojeva.
- Nemojte koristiti ili skladištiti uređaj na prašnjavim ili prljavim područjima.
- Nemojte skladištiti uređaj na visokim temperaturama. Visoke temperature mogu oštetiti uređaj ili bateriju.
- Nemojte skladištiti uređaj na niskim temperaturama. Kada se uređaj zagrije na uobičajenu temperaturu, može se formirati vlaga unutar uređaja i oštetiti ga.
- Ne otvarajte uređaj osim na način predviđen uputstvima korisničkog vodiča.
- Neovlaštene izmjene mogu oštetiti uređaj i kršiti propise mjerodavne za radio uređaje.
- Ne ispuštajte, ne udarajte i ne tresite uređaj i bateriju. Grubim rukovanjem je moguće slomiti uređaj.
- Koristite mekanu, čistu i suhu krpu za čišćenje površine uređaja.
- Nemojte bojiti uređaj. Boja može spriječiti pravilan rad uređaja.
- Uređaj čuvajte dalje od magneta ili magnetnih polja.
- Da bi važni podaci bili sigurni, pohranite ih na najmanje dva odvojena mjesta, kao što su uređaj, memorijska kartica ili računar ili zapišite bitne informacije.

Uređaj se može zagrijati tokom dužeg rada. U većini slučajeva je to normalno. Da bi se izbjeglo preveliko zagrijavanje, uređaj može automatski usporiti, zatvoriti aplikacije, isključiti punjenje i, po potrebi, sam se isključiti. Ako uređaj ne funkcionira ispravno, odnesite ga do najbližeg ovlaštenog servisa.

RECIKLIRANJE



Iskorištene elektroničke proizvode, baterije i materijale za pakovanje uvijek vratite na predviđena mjesta prikupljanja. Na taj način pomažete u sprječavanju nekontroliranog odlaganja otpada i promovirate recikliranje materijala. Električni i elektronički proizvodi sadrže mnogo vrijednih materijala, uključujući metale (poput bakra, aluminijuma, čelika, magnezijuma) i dragocjene metale (poput zlata, srebra ili paladijuma). Svi materijali u uređaju se mogu obnoviti u vidu materijala i energije.

SIMBOL PRECRTANE KANTE NA TOČKOVIMA

Simbol precrtane kante na točkovima



Simbol precrtane kante na točkovima na vašem proizvodu, bateriji, literaturi ili pakovanju podsjeća vas da se svi električni i elektronički proizvodi i baterije moraju odnijeti na posebno mjesto za sakupljanje na kraju svog radnog vijeka. Ne zaboravite prvo ukloniti lične podatke s uređaja. Nemojte odlagati ove proizvode kao nesortirani komunalni otpad: predajte ih na recikliranje. Za informacije o najbližem mjestu za reciklažu, obratite se svom lokalnom tijelu nadležnom za otpad ili pročitajte o HMD-ovom programu povrata i njegovoj dostupnosti u vašoj zemlji na www.hmd.com/support/topics/recycle.

BATTERY AND CHARGER INFORMATION

Battery and charger safety info

To unplug a charger or an accessory, hold and pull the plug, not the cord.

When your charger is not in use, unplug it. If left unused, a fully charged battery will lose its charge over time.

Always keep the battery between 59°F and 77°F (15°C and 25°C) for optimal performance. Extreme temperatures reduce the capacity and lifetime of the battery. A device with a hot or cold battery may not work temporarily. Accidental short-circuiting can happen when a metallic object touches the metal strips on the battery. This may damage the battery or the other object.

Do not dispose of batteries in a fire as they may explode. Obey local regulations. Recycle when possible. Do not dispose as household waste.

Do not dismantle, cut, crush, bend, puncture, or otherwise damage the battery in any way. If a battery leaks, do not let liquid touch skin or eyes. If this happens, immediately flush the affected areas with water, or seek medical help. Do not modify, attempt to insert foreign objects into the battery, or immerse or expose it to water or other liquids. Batteries may explode if damaged.

Use the battery and charger for their intended purposes only. Improper use, or use of unapproved or incompatible batteries or chargers may present a risk of fire, explosion, or other hazard, and may invalidate any approval or warranty. If you believe the battery or charger is damaged, take it to a service centre or your phone dealer before continuing to use it. Never use a damaged battery or charger. Only use the charger indoors. Do not charge your device during a lightning storm.

MALA DJECA

Vaš uređaj i njegovi pribori nisu igračke. Oni mogu sadržavati male dijelove. Držite ih van dohvata male djece.

MEDICINSKI UREĐAJI

Funkcioniranje radio prijenosne opreme, uključujući bežične telefone, može ometati funkcije neadekvatno zaštićenih medicinskih uređaja. Posavjetujte se s liječnikom ili proizvođačem medicinskih uređaja da utvrdite da li je medicinski uređaj adekvatno zaštićen od vanjske radio energije.

IMPLANTIRANI MEDICINSKI UREĐAJI

Da biste izbjegli potencijalne smetnje, proizvođači implantiranih medicinskih uređaja (kao što su srčani pejsmejkeri, insulinske pumpe i neurostimulatori) preporučuju minimalnu udaljenost od 15,3 centimetra (6 inča) između bežičnog uređaja i medicinskog uređaja. Osobe koje imaju takve uređaje trebaju:

- Uvijek držite bežični uređaj na udaljenosti većoj od 15,3 centimetra (6 inča) od medicinskog uređaja.
- Ne nosite bežični uređaj u džepu na grudima.
- Držite bežični uređaj na uhu nasuprot

- medicinskom uređaju.
- Isključite bežični uređaj ako postoji bilo koji razlog za sumnju da dolazi do smetnji.
- Slijedite upute proizvođača za implantirani medicinski uređaj.

Ako imate bilo kakva pitanja u vezi s korištenjem bežičnog uređaja s implantiranim medicinskim uređajem, posavjetujte se sa zdravstvenim radnikom.

SLUH



Upozorenje: Kada koristite slušalice, to može uticati na vašu sposobnost da čujete spoljašnje zvukove. Nemojte koristiti slušalice s mikrofonom tamo gdje to može ugroziti vašu sigurnost.

Neki bežični uređaji mogu ometati neka slušna pomagala.

ZAŠTITITE UREĐAJ OD ŠTETNOG SADRŽAJA

Uređaj može biti izložen virusima i drugom štetnom sadržaju. Poduzmite sljedeće mjere predostrožnosti:

- Budite oprezni kada otvarate poruke. One mogu sadržavati zlonamjernim softver ili na drugi način biti štetne za uređaj ili računar.
- Budite oprezni kada prihvatate zahtjeve za povezivanje, pretražujete internet ili preuzimate sadržaj. Nemojte prihvatati Bluetooth veze od izvora kojima ne vjerujete.
- Instalirajte i koristite samo usluge i softver iz izvora u koje imate povjerenja i koji nude adekvatnu sigurnost i zaštitu.
- Instalirajte antivirusni i drugi sigurnosni softver na svoj uređaj i bilo koji povezani računar. Koristite samo jednu antivirusnu aplikaciju istovremeno. Korištenje više njih može uticati na performanse i rad uređaja i/ili računara.
- Ako pristupate unaprijed instaliranim oznakama i vezama na internet stranice trećih strana, preduzmite odgovarajuće mjere predostrožnosti. HMD Global ne prihvata niti preuzima odgovornost za takve stranice.

VOZILA

Radio signali mogu uticati na neispravno instalirane ili neadekvatno zaštićene elektroničke sisteme u vozilima. Za više informacija, raspitajte se kod proizvođača vozila ili opreme. Samo ovlašteno osoblje smije instalirati uređaj u vozilo. Pogrešno instaliranje može biti opasno i poništiti garanciju. Redovno provjeravajte da li je sva bežična oprema u vašem vozilu montirana i da li ispravno funkcionira. Nemojte skladištiti ili nositi zapaljive ili eksplozivne materije u istom odjeljku kao i uređaj, njegove dijelove ili dodatke. Nemojte stavljati uređaj ili dodatke u područje angažiranosti zračnog jastuka.

POTENCIJALNO EKSPLOZIVNA OKRUŽENJA

Isključite uređaj u potencijalno eksplozivnim okruženjima, kao npr. u blizini benzinskih pumpi. Iskre mogu izazvati eksploziju ili požar koji dovodi do povrede ili smrti. Imajte na umu ograničenja u područjima s gorivom, hemijskim pogonima i na mjestima na kojima se provodi miniranje. Područja s potencijalnim eksplozivnim okruženjima nekada nisu jasno označena. To su obično područja u kojima se preporučuje da isključite motor, u potpalublju broda, objektima za prevoz i skladištenje hemikalija te područjima gdje zrak sadrži hemikalije ili čestice. Provjerite s proizvođačem vozila koje koriste ukapljeni naftni plin (kao što je propan ili butan) da li se ovaj uređaj može sigurno koristiti u njegovoj blizini.

CERTIFIKAT O SPECIFIČNOJ STOPI APSORPCIJE

Ovaj mobilni uređaj zadovoljava smjernice za izloženost radio valovima.

Vaš mobilni uređaj je radio odašiljač i prijemnik. Napravljen je da ne prekoračuje ograničenja za izloženost radio valovima (radio frekvencija elektromagnetnih polja), koju preporučuju međunarodne smjernice nezavisne naučne organizacije ICNIRP. Ove smjernice obuhvataju značajne sigurnosne granice namijenjene da osiguraju zaštitu svih osoba bez obzira na dob i zdravlje. Smjernice za izloženost su zasnovane na Specifičnoj stopi apsorpcije (SAR) koja predstavlja izraz količine energije radio frekvencije (RF) koja se odlaže u glavi i tijelu dok uređaj izvršava prijenos. ICNIRP SAR granica za mobilne uređaje iznosi u prosjeku 2,0 W/kg na 10 grama tkiva.

SAR testiranja se provode s uređajem u standardnim radnim položajima pri prijenosu najvišeg certificiranog nivoa energije u svim frekvencijskim opsezima.

Ovaj uređaj zadovoljava smjernice o izlaganju radiofrekventnim valovima kada se koristi na glavi ili najmanje 5/8 inča (1,5 centimetara) od tijela. Kada koristite futrolu, pojas ili drugu vrstu držača uređaja radi njegovog nošenja uz tijelo, on ne bi trebao sadržavati metal i trebao bi osigurati minimalno gore navedenu udaljenost od tijela.

Za prijenos podataka ili slanje poruka potrebna je kvalitetna mrežna veza. Slanje može kasniti dok takva veza ne bude dostupna. Pridržavajte se uputstava o držanju rastojanja tokom slanja.

Tokom opće upotrebe, SAR vrijednosti su obično dosta niže od gore navedenih vrijednosti. To je zbog toga što se u svrhe systemske efikasnosti i minimiziranja smetnji na mreži radna energija mobilnog uređaja automatski smanjuje kada nije potrebna puna energija za pozivanje. Što je manja izlazna energija, to je manja SAR vrijednost.

Modeli uređaja mogu imati različite verzije i više od jedne vrijednosti. Tokom vremena se mogu pojaviti promjene na komponentama i dizajnu, a neke od njih mogu uticati na SAR vrijednosti.

Za više informacije, idite na www.sar-tick.com. Zapamtite da mobilni uređaji vrše prijenos čak i kada ne upućujete glasovni poziv.

Svjetska zdravstvena organizacija (WHO) navodi da trenutne naučne informacije ne ukazuju na potrebu za bilo kakvim posebnim mjerama opreza pri korištenju mobilnih uređaja. Ako želite smanjiti izloženost, oni preporučuju da ograničite upotrebu uređaja ili da koristite opremu za upravljanje uređajem bez dodira da biste udaljili uređaj od glave i tijela. Dodatne

informacije, objašnjenja i rasprave o izlaganju radijskoj frekvenciji potražite na web-lokaciji SZO www.who.int/health-topics/electromagnetic-fields#tab=tab_1.

Posjetite web lokaciju www.hmd.com/sar za informacije o maksimalnoj vrijednosti specifične stope apsorpcije (SAR) uređaja.

O UPRAVLJANJU DIGITALNIM PRAVIMA

Kada koristite ovaj uređaj, uvijek poštujujte zakone te lokalne običaje, privatnost i legitimna prava drugih, uključujući i autorska prava. Zaštita autorskih prava vas može spriječiti da kopirate, mijenjate ili prenosite fotografije, muziku i drugi sadržaj.

COPYRIGHTS AND OTHER NOTICES

Copyrights

The availability of products, features, apps and services may vary by region. For more info, contact your dealer or your service provider. This device may contain commodities, technology or software subject to export laws and regulations from the US and other countries. Diversion contrary to law is prohibited.

The contents of this document are provided "as is". Except as required by applicable law, no warranties of any kind, either express or implied, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose, are made in relation to the accuracy, reliability or contents of this document. HMD Global reserves the right to revise this document or withdraw it at any time without prior notice.

To the maximum extent permitted by applicable law, under no circumstances shall HMD Global or any of its licensors be responsible for any loss of data or income or any special, incidental, consequential or indirect damages howsoever caused.

Reproduction, transfer or distribution of part or all of the contents in this document in any form without the prior written permission of HMD Global is prohibited. HMD Global operates a policy of continuous development. HMD Global reserves the right to make changes and improvements to any of the products described in this document without prior notice.

HMD Global does not make any representations, provide a warranty, or take any responsibility for the functionality, content, or end-user support of third-party apps provided with your device. By using an app, you acknowledge that the app is provided as is.

Downloading of maps, games, music and videos and uploading of images and videos may involve transferring large amounts of data. Your service provider may charge for the data transmission. The availability of particular products, services and features may vary by region. Please check with your local dealer for further details and availability of language options.

Certain features, functionality and product specifications may be network dependent and subject to additional terms, conditions, and charges.

All specifications, features and other product information provided are subject to change without notice.

HMD Global Privacy Policy, available at <http://www.hmd.com/privacy>, applies to your use of the device.

HMD Global Oy is the exclusive licensee of the Nokia brand for phones & tablets. Nokia is a registered trademark of Nokia Corporation.

The Bluetooth word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by HMD Global is under license.