

NOKIA

Nokia G22

사용자 가이드

차례

1 사용자 가이드 정보	5
2 Get started	6
Keep your phone up to date	6
Keys and parts	6
Insert the SIM and memory cards	7
Charge your phone	8
Switch on and set up your phone	9
Use the touch screen	10
3 Protect your phone	14
Lock or unlock your phone	14
Protect your phone with a screen lock	14
Protect your phone with your fingerprint	14
Protect your phone with your face	15
Find your lost phone	15
4 기본 사항	17
Personalize your phone	17
Notifications	17
Control volume	18
Automatic text correction	19
Battery life	19
Extend the memory of your phone with virtual RAM	20
Accessibility	20
5 친구 및 가족과 연락 주고받기	22
Calls	22
Contacts	22
Send messages	22
Mail	23

6 Internet and connections	24
Activate Wi-Fi	24
Browse the web	24
Bluetooth®	24
NFC	26
VPN	26
7 카메라	28
Camera basics	28
Your photos and videos	28
8 Organize your day	30
Date and time	30
Alarm clock	30
Calendar	31
9 Maps	32
Find places and get directions	32
10 Apps, updates, and backups	33
Get apps from Google Play	33
Update your phone software	33
Back up your data	33
Restore original settings and remove private content from your phone	34
11 제품 및 안전 정보	35
안전을 위해	35
Network services and costs	37
Emergency calls	38
Take care of your device	38
재활용	39
WEEE 마크	39

Battery and charger information	40
어린이	41
의료 기기	41
삽입형 의료 기기	41
청력	42
유해한 콘텐츠로부터 기기 보호	42
차량	42
폭발할 수 있는 환경	42
Certification information	43
디지털 권한 관리 소개	43
Copyrights and other notices	43

1 사용자 가이드 정보



중요: 기기를 사용하기 전에 사용자 가이드 인쇄본의 '안전을 위해'와 '제품 안전' 정보 또는 www.nokia.com/support 에서 기기 및 배터리의 안전한 사용에 대한 중요한 정보를 확인하시기 바랍니다. 새 기기를 사용하는 방법은 사용자 가이드 인쇄본을 참조하십시오.

2 Get started

 
KEEP YOUR PHONE UP TO DATE

Your phone software

Keep your phone up to date and accept available software updates to get new and enhanced features for your phone. Updating the software may also improve your phone's performance.

KEYS AND PARTS

Your phone

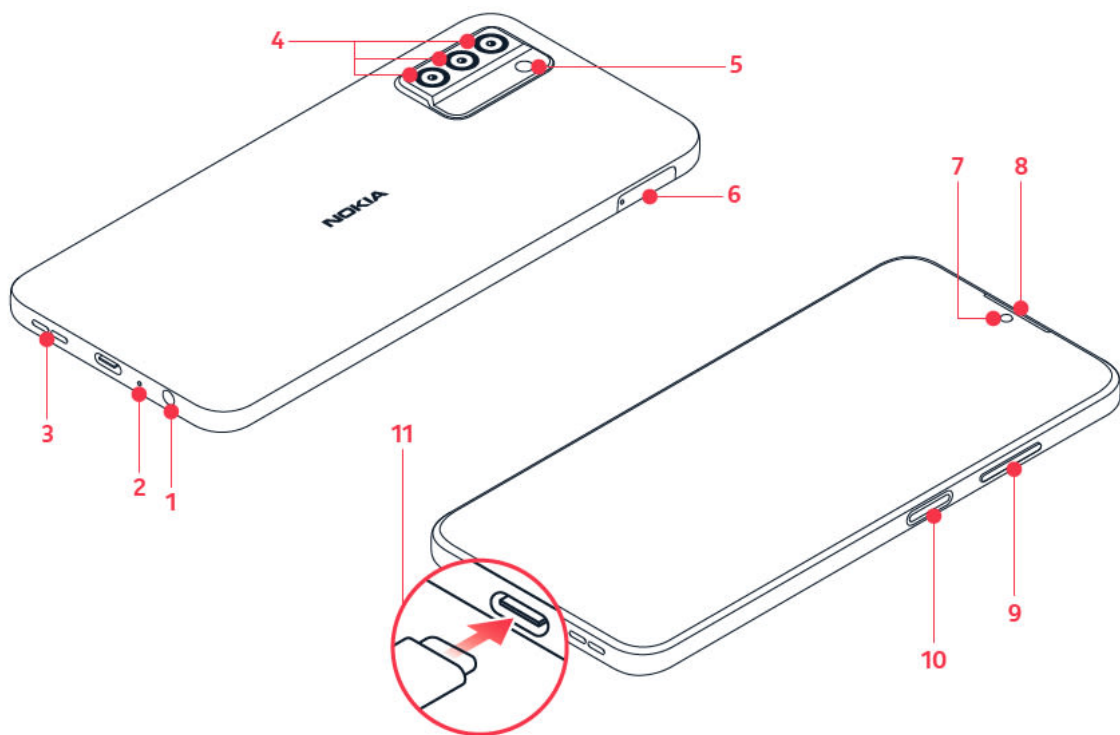

This user guide applies to the following models: TA-1516, TA-1528.

- | | |
|-----------------------------|--|
| 1. Headset connector | 7. Front camera |
| 2. Microphone | 8. Earpiece |
| 3. Loudspeaker | 9. Volume keys |
| 4. Camera | 10. Power/Lock key, Fingerprint sensor |
| 5. Flash | 11. USB connector |
| 6. SIM and memory card slot | |

Some of the accessories mentioned in this user guide, such as charger, headset, or data cable, may be sold separately.

 
Parts and connectors, magnetism

Do not connect to products that create an output signal, as this may damage the device. Do not connect any voltage source to the audio connector. If you connect an external device or headset, other than those approved for use with this device, to the audio connector, pay special attention to volume levels.

Parts of the device are magnetic. Metallic materials may be attracted to the device. Do not place credit cards or other magnetic stripe cards near the device for extended periods of time, since the cards may be damaged.

INSERT THE SIM AND MEMORY CARDS

Insert the cards

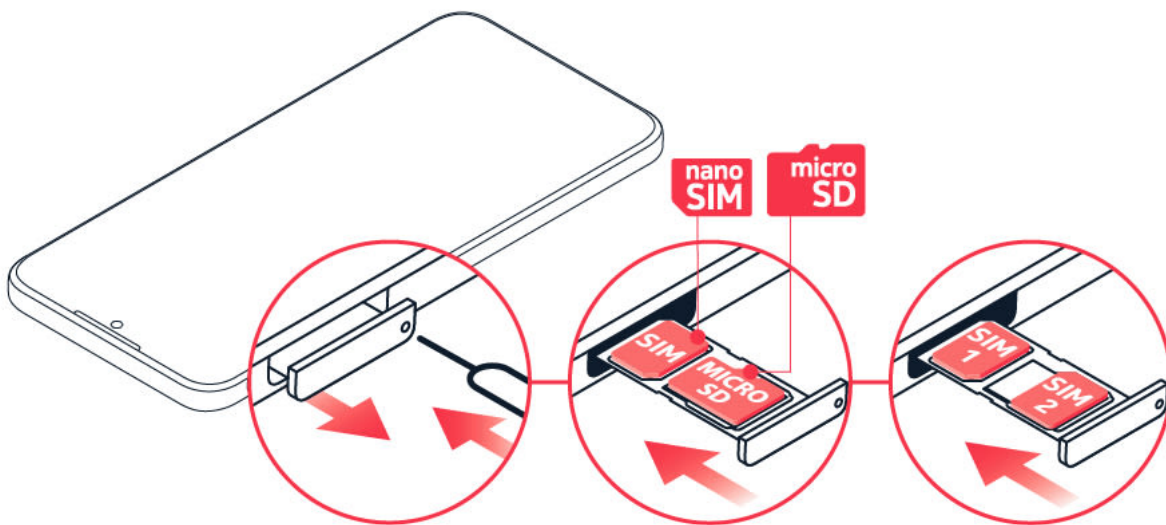

1. Open the SIM and memory card tray: push the tray opener pin in the tray hole and slide the tray out.
2. If you have a single-SIM phone, put a nano-SIM card in slot 1 and a memory card in slot 2 on the tray with the contact areas face down. If you have a dual-SIM phone, put a nano-SIM card in slot 1 and either a second SIM or a memory card in slot 2 with the contact areas face down.
3. Slide the tray back in.

Use only original nano-SIM cards. Use of incompatible SIM cards may damage the card or the device, and may corrupt data stored on the card.

Both SIM cards are available at the same time when the device is not being used, but while one SIM card is active, for example, when making a call, the other may be unavailable.

Use only compatible memory cards approved for use with this device. Incompatible cards may damage the card and the device and corrupt data stored on the card.



Tip: To find out if your phone can use 2 SIM cards, see the label on the sales box. If there are 2 IMEI codes on the label, you have a dual-SIM phone.



Important: Do not remove the memory card when an app is using it. Doing so may damage the memory card and the device and corrupt data stored on the card.



Tip: Use a fast, up to 2 TB microSD memory card from a well-known manufacturer.



Note: Pre-installed system software and apps use a significant part of memory space.

CHARGE YOUR PHONE

Charge the battery



1. Plug a compatible charger into a wall outlet.
2. Connect the cable to your phone.

Your phone supports the USB-C cable. You can also charge your phone from a computer with a USB cable, but it may take a longer time.

If the battery is completely discharged, it may take several minutes before the charging indicator is displayed.

Charger model

Charge your device with the AD-010 charger. HMD Global may make additional battery or charger models available for this device. Charging time can vary depending on device capability. Some of the accessories mentioned in this user guide, such as charger, headset, or data cable, may be sold separately.

When charger is not included in the sales box, charge your device using the data cable (included) and a USB power adaptor (may be sold separately). You can charge your device with third-party cables and power adaptors that are compliant with USB 2.0 or later and with applicable country regulations and international and regional safety standards. Other adaptors may not meet applicable safety standards, and charging with such adaptors could pose a risk of property loss or personal injury. It is recommended to use a power adaptor with an input of 100-240V~50/60Hz 0.5A and output of 5.0V/2A to optimise the charging of your device.

SWITCH ON AND SET UP YOUR PHONE

Switch on your phone

When you switch your phone on for the first time, your phone guides you to set up your network connections and phone settings.

1. Press and hold the power key.
2. Choose your language and region.
3. Follow the instructions shown on your phone.

Transfer data from your previous phone

You can transfer data from an old phone to your new phone using your Google account.

To back up data on your old phone to your Google account, refer to your old phone's user guide.

Restore app settings from your previous Android™ phone

If your previous phone was an Android, and you had set it to back up data to your Google account, you can restore your app settings and passwords.

1. Tap **Settings** > **Accounts** > **Add account** > **Google**.
2. Select which data you want to restore on your new phone. The sync starts automatically once your phone is connected to the internet.

Switch off your phone

To switch off your phone, press the power key and the volume up key at the same time, and select **Power off**.



Tip: If you want to switch off your phone by pressing and holding the power key, tap **Settings** > **System** > **Gestures** > **Press and hold power button** and switch off **Hold for Assistant**.

USE THE TOUCH SCREEN

 
Important: Avoid scratching the touch screen. Never use an actual pen, pencil, or other sharp object on the touch screen.

Tap and hold to drag an item




Place your finger on the item for a couple of seconds, and slide your finger across the screen.

Swipe

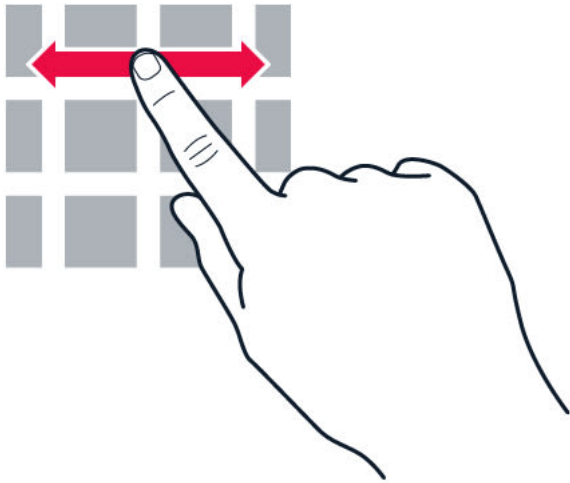


Place your finger on the screen, and slide your finger in the direction you want.

 Scroll through a long list or menu

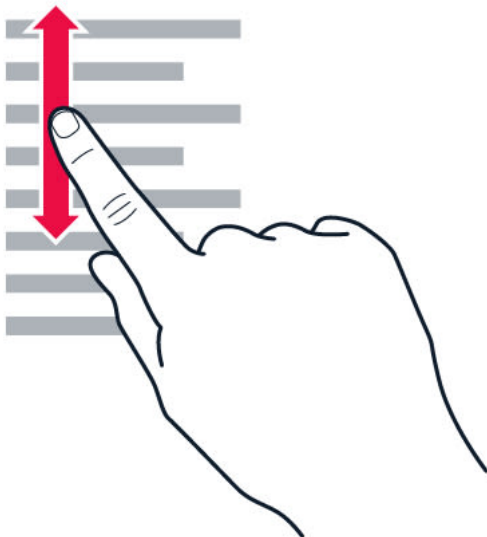

Slide your finger quickly in a flicking motion up or down the screen, and lift your finger. To stop the scrolling, tap the screen.

 Zoom in or out

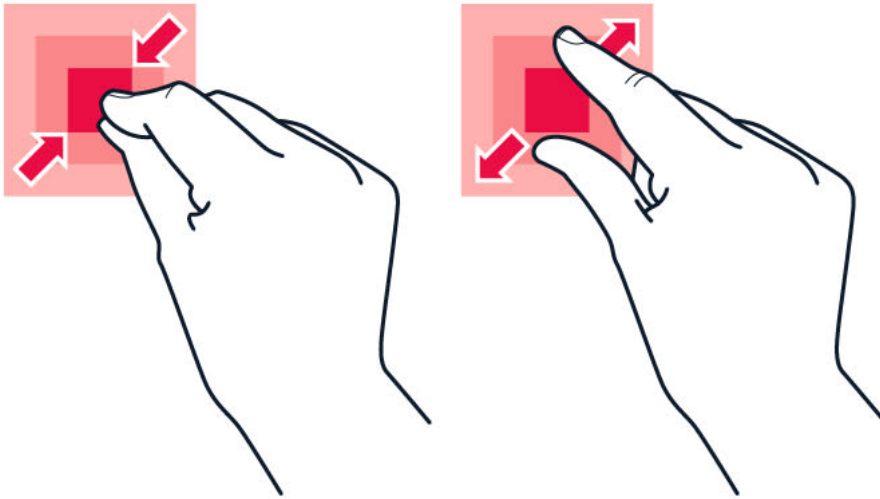

Place 2 fingers on an item, such as a map, photo, or web page, and slide your fingers apart or together.

Lock the screen orientation

The screen rotates automatically when you turn the phone 90 degrees.

To lock the screen in portrait mode, swipe down from the top of the screen, and tap **Auto-rotate** > **Off**.

Navigate with gestures

To switch on using gesture navigation, tap **Settings** > **System** > **Gestures** > **System navigation** > **Gesture navigation**.

- To see all your apps, swipe up from the bottom of the screen.
- To go to the home screen, swipe up from the bottom of the screen. The app you were in stays open in the background.
- To see which apps you have open, swipe up from the bottom of the screen without releasing your finger until you see the apps, and then release your finger. To switch to another open app, tap the app. To close all the open apps, tap **CLEAR ALL**.
- To go back to the previous screen you were in, swipe from the right or left edge of the screen. Your phone remembers all the apps and websites you've visited since the last time your screen was locked.

Navigate with keys

To switch on the navigation keys, tap **Settings** > **System** > **Gestures** > **System navigation** > **3-button navigation** .

- To see all your apps, swipe up from the bottom of the screen.
- To go to the home screen, tap the home key. The app you were in stays open in the background.
- To see which apps you have open, tap ■ . To switch to another open app, swipe right and tap the app. To close all the open apps, tap **CLEAR ALL** .
- To go back to the previous screen you were in, tap ◀ . Your phone remembers all the apps and websites you've visited since the last time your screen was locked.

3 Protect your phone

LOCK OR UNLOCK YOUR PHONE

Lock your phone

If you want to avoid accidentally making a call when your phone is in your pocket or bag, you can lock your keys and screen.

To lock your keys and screen, press the power key.

Unlock the keys and screen

Press the power key, and swipe up across the screen. If asked, provide additional credentials.

PROTECT YOUR PHONE WITH A SCREEN LOCK

You can set your phone to require authentication when unlocking the screen.

Set a screen lock

1. Tap **Settings** > **Security** > **Screen lock**.
2. Choose the type of lock and follow the instructions on your phone.

PROTECT YOUR PHONE WITH YOUR FINGERPRINT

Add a fingerprint

1. Tap **Settings** > **Security** > **Fingerprint**.
2. Select what backup unlocking method you want to use for the lock screen and follow the instructions shown on your phone.

 
Unlock your phone with your finger

Place your registered finger on the power key.

If there is a fingerprint sensor error, and you cannot use alternative sign-in methods to recover or reset the phone in any way, your phone will require service by authorized personnel. Additional charges may apply, and all the personal data on your phone may be deleted. For more info, contact the nearest care point for your phone, or your phone dealer.

PROTECT YOUR PHONE WITH YOUR FACE

Set up face authentication

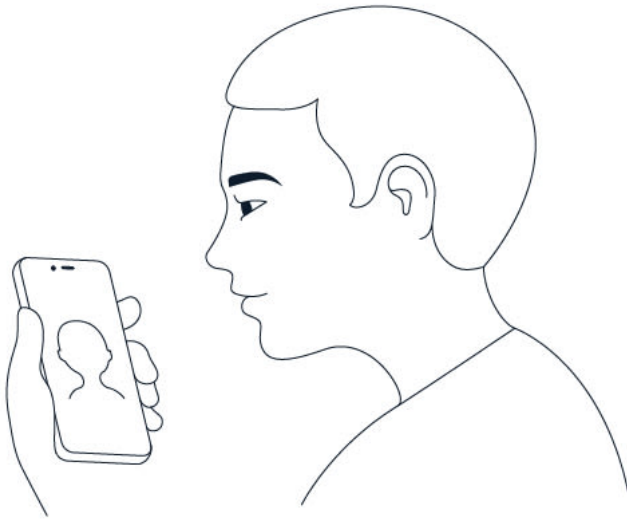

1. Tap **Settings** > **Security** > **Face unlock**.
2. Select what backup unlocking methods you want to use for the lock screen and follow the instructions shown on your phone.

Keep your eyes open and make sure your face is fully visible and not covered by any object, such as a hat or sunglasses.



Note: Using your face to unlock your phone is less secure than using a fingerprint, pattern or password. Your phone may be unlocked by someone or something with similar appearance. Face unlock may not work properly in backlight or too dark or bright environment.

Unlock your phone with your face

To unlock your phone, just turn your screen on and look at the front camera.

If there is a facial recognition error, and you cannot use alternative sign-in methods to recover or reset the phone in any way, your phone will require service. Additional charges may apply, and all the personal data on your phone may be deleted. For more info, contact the nearest authorized service facility for your phone, or your phone dealer.

FIND YOUR LOST PHONE

Locate or lock your phone

If you lose your phone, you may be able to find, lock, or erase it remotely if you have signed in to a Google Account. Find My Device is on by default for phones associated with a Google Account.

To use Find My Device, your lost phone must be:

- Turned on
- Signed in to a Google Account
- Connected to mobile data or Wi-Fi
- Visible on Google Play
- Location turned on
- Find My Device turned on

When Find My Device connects with your phone, you see the phone's location, and the phone gets a notification.

1. Open android.com/find on a computer, tablet or phone connected to the internet and sign in to your Google Account.
2. If you have more than one phone, click the lost phone at the top of the screen.
3. On the map, see about where the phone is. The location is approximate and may not be accurate.

If your device can't be found, Find My Device will show its last known location, if available. To lock or erase your phone, follow the instructions on the web site.

4 기본 사항

PERSONALIZE YOUR PHONE

Change your wallpaper

Tap **Settings** > **Wallpaper & style**.

Change your phone ringtone

 
Tap **Settings** > **Sound** > **Phone ringtone SIM1** or **Phone ringtone SIM2**, and select the tone.

Change your message notification sound

Tap **Settings** > **Sound** > **Default notification sound**.

NOTIFICATIONS

Use the notification panel

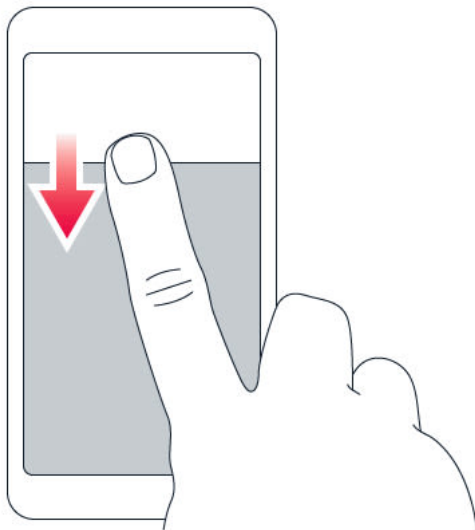



When you receive new notifications, such as messages or missed calls, icons appear at the top of the screen.

To see more information about the notifications, swipe down from the top of the screen. To close the view, swipe up on the screen.

To change the notification settings of an app, tap **Settings** > **Notifications** > **App settings** > **Most recent** > **All apps**, and switch the app's notifications on or off.

 Use the quick access items

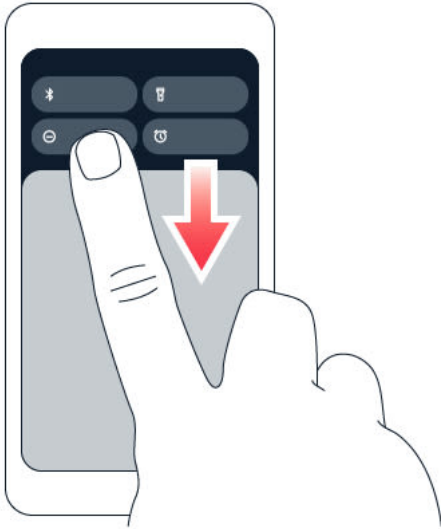

To activate features, tap the corresponding quick access item on the notification panel. To see more items, drag the menu down. To rearrange or add new items, tap , tap and hold an item, and then drag it to another location.


CONTROL VOLUME

Change the volume




If you have trouble hearing your phone ringing in noisy environments, or calls are too loud, you can change the volume to your liking by using the volume keys on the side of your phone.

Do not connect to products that create an output signal, as this may damage the device. Do not connect any voltage source to the audio connector. If you connect an external device or headset, other than those approved for use with this device, to the audio connector, pay special attention to volume levels.

Change the volume for media and apps

1. Press a volume key to see the volume level bar.
2. Tap .
3. Drag the slider on the volume level bars left or right.
4. Tap **DONE**.

Set the phone to silent

1. Press a volume key.
2. Tap .
3. Tap  to set your phone to vibrate only, or tap  to set it to silent.

AUTOMATIC TEXT CORRECTION

Use keyboard word suggestions

Your phone suggests words as you write, to help you write quickly and more accurately. Word suggestions may not be available in all languages.

When you start writing a word, your phone suggests possible words. When the word you want is shown in the suggestion bar, select the word. To see more suggestions, tap and hold the suggestion.



Tip: If the suggested word is marked in bold, your phone automatically uses it to replace the word you wrote. If the word is wrong, tap and hold it to see a few other suggestions.

If you do not want the keyboard to suggest words while typing, turn off the text corrections. Tap **Settings** > **System** > **Languages & input** > **On-screen keyboard**. Select the keyboard you normally use. Tap **Text correction** and switch off the text correction methods you do not want to use.

Correct a word

If you notice that you have misspelled a word, tap it to see suggestions for correcting the word.

Switch spell checker off

Tap **Settings** > **System** > **Languages & input** > **Spell checker**, and switch **Use spell checker** off.

BATTERY LIFE

Extend battery life

To save power:

1. Always charge the battery fully. select which sounds to keep.
2. Mute unnecessary sounds, such as touch sounds. Tap **Settings** > **Sound**, and 3. Use wired headphones, rather than the loudspeaker.

4. Set the phone screen to switch off after a short time. Tap **Settings** > **Display** > **Screen timeout** and select the time.
5. Tap **Settings** > **Display** > **Brightness level**. To adjust the brightness, drag the brightness level slider. Make sure that **Adaptive brightness** is switched off.
6. Stop apps from running in the background.
7. Use location services selectively: switch location services off when you don't need them. Tap **Settings** > **Location**, and switch off **Use location**.
8. Use network connections selectively: Switch Bluetooth on only when needed. Use a Wi-Fi connection to connect to the internet, rather than a mobile data connection. Stop your phone scanning for available wireless networks. Tap **Settings** > **Network & internet** > **Internet**, and switch off **Wi-Fi**. If you're listening to music or otherwise using your phone, but don't want to make or receive calls, switch the airplane mode on. Tap **Settings** > **Network & internet**, and switch on **Airplane mode**. Airplane mode closes connections to the mobile network and switches your device's wireless features off.

EXTEND THE MEMORY OF YOUR PHONE WITH VIRTUAL RAM

Switch on memory extension

If your phone supports the virtual RAM feature, you can have more apps open in the background and switch smoothly between them. To switch the feature on, tap **Settings** > **Memory**, and switch on **Memory extension**. If asked, tap the memory size you want.

Using the memory extension (virtual RAM) requires enough storage space. To protect the storage, the memory extension is automatically and permanently disabled once 90% of the usage limit is reached. This can occur after 4 years of heavy usage.

Clean the memory

To clean the memory of your phone from unnecessary apps running in the background, tap **Settings** > **Memory** > **Clear all**. If there are apps that you always want to keep running in the background, exclude them from the clean-up: tap **Settings** > **Memory** > **Excluded apps**, and switch on the apps you want to keep open.

ACCESSIBILITY

Make the text on the screen larger

1. Tap **Settings** > **Accessibility** > **Text and display**.
2. Tap **Font size**, and tap the font size slider until the text size is to your liking.


 
Make the items on the screen larger

1. Tap **Settings** > **Accessibility** > **Text and display**.
2. Tap **Display size**, and tap the display size slider until the size is to your liking.

5 친구 및 가족과 연락 주고받기

CALLS

Make a call

1. Tap .
2. Tap  and type in a number, or tap  and select a contact you want to call.
3. Tap .

Answer a call

If your phone rings when the screen is unlocked, tap **ANSWER**. If your phone rings when the screen is locked, swipe up to answer.

Reject a call



If your phone rings when the screen is unlocked, tap **DECLINE**. If your phone rings when the screen is locked, swipe down to reject the call.

CONTACTS

Add a contact


 


1. Tap **Contacts** > **+**.
2. Fill out the information.
3. Tap **SAVE**.

Save a contact from call history

1. Tap  >  to see your call history.
2. Tap the number you want to save.
3. Tap **Add contact**. If this is a new contact, type in the contact information, and tap **Save**. If this contact is already in your contacts list, tap **Add to existing**, select the contact, and tap **Save**.

SEND MESSAGES

Send a message

1. Tap **Messages**.
2. Tap **Start chat**.
3. To add a recipient, tap , type in their number, and tap . To add a recipient from your contacts list, start typing their name and tap the contact.
4. To add more recipients, tap . After choosing all the recipients, tap **Next**.
5. Write your message in the text box.
6. Tap .

MAIL




You can send mail with your phone when you're on the go.

Add a mail account

When you use the Gmail app for the first time, you are asked to set up your email account.

1. Tap **Gmail**.
2. You can select the address connected with your Google account or tap **Add an email address**.
3. After adding all the accounts, tap **TAKE ME TO GMAIL**.

Send mail


1. Tap **Gmail**.
2. Tap .
3. In the **To** box, type in an address, or tap  > **Add from Contacts**.
4. Type in the message subject and the mail.
5. Tap .

6 Internet and connections

ACTIVATE WI-FI

Switch on Wi-Fi

 
1. Tap **Settings** > **Network & internet** > **Internet**.
2. Switch **Wi-Fi** on.
3. Select the network you want to use.

Your Wi-Fi connection is active when  is shown at the top of the screen. If both Wi-Fi and mobile data connections are available, your phone uses the Wi-Fi connection.

Important: Use encryption to increase the security of your Wi-Fi connection. Using encryption reduces the risk of others accessing your data.

BROWSE THE WEB

Search the web

1. Tap **Chrome**.
2. Write a search word or a web address to the search field.
3. Tap , or select from the proposed matches.



Tip: If your network service provider doesn't charge you a fixed fee for data transfer, to save on data costs, use a Wi-Fi network to connect to the internet.

Use your phone to connect your computer to the web

Use your mobile data connection to access the internet with your laptop or other device.

1. Tap **Settings** > **Network & internet** > **Hotspot & tethering**.
2. Switch on **Wi-Fi hotspot** to share your mobile data connection over Wi-Fi, **USB tethering** to use a USB connection, **Bluetooth tethering** to use Bluetooth, or **Ethernet tethering** to use a USB Ethernet cable connection.

The other device uses data from your data plan, which may result in data traffic costs. For info on availability and costs, contact your network service provider.

BLUETOOTH®

Connect to a Bluetooth device

1. Tap **Settings** > **Connected devices** > **Connection preferences** > **Bluetooth**.
2. Switch **Use Bluetooth** on.
3. Make sure the other device is switched on. You may need to start the pairing process from the other device. For details, see the user guide for the other device.
4. Tap **Pair new device** and tap the device you want to pair with from the list of discovered Bluetooth devices.
5. You may need to type in a passcode. For details, see the user guide for the other device.

Since devices with Bluetooth wireless technology communicate using radio waves, they do not need to be in direct line-of-sight. Bluetooth devices must, however, be within 10 meters (33 feet) of each other, although the connection may be subject to interference from obstructions such as walls or from other electronic devices.


Paired devices can connect to your phone when Bluetooth is switched on. Other devices can detect your phone only if the Bluetooth settings view is open.

Do not pair with or accept connection requests from an unknown device. This helps to protect your phone from harmful content.

Share your content using Bluetooth

If you want to share your photos or other content with a friend, send them to your friend's phone using Bluetooth.


You can use more than one Bluetooth connection at a time. For example, while using a Bluetooth headset, you can still send things to another phone.

1. Tap **Settings** > **Connected devices** > **Connection preferences** > **Bluetooth**.
2. Make sure Bluetooth is switched on in both phones and the phones are visible to each other.
3. Go to the content you want to send, and tap  > **Bluetooth**.
4. On the list of found Bluetooth devices, tap your friend's phone.
5. If the other phone needs a passcode, type in or accept the passcode, and tap **PAIR**.

The passcode is only used when you connect to something for the first time.

Remove a pairing

If you no longer have the device with which you paired your phone, you can remove the pairing.

1. Tap **Settings** > **Connected devices** > **Previously connected devices**.
2. Tap  next to a device name.
3. Tap **FORGET**.

NFC

If your phone supports Near Field Communication (NFC), you can tap accessories to connect to them, and tap tags to call someone or open a website. The NFC functionality can be used with some specific services and technologies like tap to pay with your device. These services might not be available in your region. For additional info about the availability of these services, contact your network service provider.

Switch on NFC

1. Tap **Settings** > **Connected devices** > **Connection preferences** > **NFC**.
2. Switch on **Use NFC**.

Before using NFC, make sure the screen and keys are unlocked.

Use NFC

The NFC area is at the back of your phone.

To connect your phone to another phone or an accessory, or to read NFC tags, just tap the other device or tag with the NFC area of your phone.



Note: Payment and ticketing apps and services are provided by third parties. HMD Global does not provide any warranty or take any responsibility for any such apps or services including support, functionality, transactions, or loss of any monetary value. You may need to reinstall and activate the cards you have added as well as the payment or ticketing app after repair of your device.

Disconnect the connected accessory

If you don't need to be connected to the accessory anymore, you can disconnect the accessory.

Tap the NFC area of the accessory again.

For more info, see the accessory's user guide.

VPN


You may need a virtual private network (VPN) connection to access your company resources, such as intranet or corporate mail, or you may use a VPN service for personal purposes.

Contact your company IT administrator for details of your VPN configuration, or check your VPN service's website for additional info.


Use a secure VPN connection

1. Tap **Settings** > **Network & internet** > **VPN**.
2. To add a VPN profile, tap **+**.
3. Type in the profile info as instructed by your company IT administrator or VPN service.

Edit a VPN profile

1. Tap  next to a profile name.
2. Change the info as required.

Delete a VPN profile

1. Tap  next to a profile name.
2. Tap **FORGET**.

7 카메라

CAMERA BASICS

Take a photo


Shoot sharp and vibrant photos – capture the best moments in your photo album.

1. Tap **Camera**.
2. Take aim and focus.
3. Tap ○.

 



Keep a safe distance when using the flash. Do not use the flash on people or animals at close range. Do not cover the flash while taking a photo.

Take a selfie

1. Tap **Camera** >  to switch to the front camera.
2. Tap ○.

Record a video


1. Tap **Camera**.
2. To switch to the video recording mode, tap **Video**.
3. Tap  to start recording.
4. To stop recording, tap .
5. To go back to camera mode, tap **Photo**.

YOUR PHOTOS AND VIDEOS

View photos and videos on your phone

Tap **Photos**.

Share your photos and videos

1. Tap **Photos**, tap the photo you want to share and tap .
2. Select how you want to share the photo or video.

Copy your photos and videos to your computer

Connect your phone to your computer with a compatible USB cable. Use your computer's file manager to copy or move your photos and videos to the computer.

8 Organize your day

DATE AND TIME

Set date and time

Tap **Settings** > **System** > **Date & time**.

Update the time and date automatically

You can set your phone to update the time, date, and time zone automatically. Automatic update is a network service and may not be available depending on your region or network service provider.

1. Tap **Settings** > **System** > **Date & time**.
2. Switch on **Set time automatically**.
3. Switch on **Set time zone automatically**.

Change the clock to the 24-hour format

Tap **Settings** > **System** > **Date & time**, and switch **Use 24-hour format** on.

ALARM CLOCK

Set an alarm

1. Tap **Clock** > **Alarm**.
2. To add an alarm, tap **+**.
3. Select the hour and the minutes, and tap **OK**.
4. To set the alarm to repeat on specific days, tap the corresponding weekdays.

Switch an alarm off

When the alarm sounds, swipe the alarm right.

CALENDAR

Select the calendar type

Tap **Calendar** > ≡, and select what type of calendar you want to see.

If you have signed into an account, such as your Google account, your calendar is shown on the phone.

Add an event

1. Tap **Calendar** > +.
2. Add the needed details.
3. To make the event repeat on certain days, tap **Does not repeat**, and select how often the event should repeat.
4. To set a reminder, tap **Add notification** and set the time.
5. Tap **Save**.



Tip: To edit an event, tap the event and , and edit the details.

Delete an appointment


1. Tap the event.
2. Tap **:** > **Delete**.

9 Maps

FIND PLACES AND GET DIRECTIONS

Find a spot

Google Maps helps you find specific locations and businesses.


1. Tap **Maps**.
2. Write search words, such as a street address or place name, in the search bar.
3. Select an item from the list of proposed matches as you write, or tap  to search.

The location is shown on the map. If no search results are found, make sure the spelling of your search words is correct.

See your current location

Tap **Maps** > .

Get directions to a place

1. Tap **Maps** and enter your destination in the search bar.
2. Tap **Directions**. The highlighted icon shows the mode of transportation, for example . To change the mode, select the new mode under the search bar.
3. If you don't want the starting point to be your current location, tap **Your location**, and search for a new starting point.
4. Tap **Start** to start the navigation.

The route is shown on the map, along with an estimate of how long it takes to get there. To see detailed directions, tap **Steps**.

10 Apps, updates, and backups

GET APPS FROM GOOGLE PLAY

Add a payment method

To use Google Play services, you need to have a Google account added to your phone. Charges may apply to some of the content available in Google Play. To add a payment method, tap **Play Store**, tap your Google logo in the search field, and then tap **Payments & subscriptions**. Always be sure to have a permission from the payment method owner when buying content from Google Play.

Download apps

1. Tap **Play Store**.
2. Tap the search bar to look for apps, or select apps from your recommendations.
3. In the app description, tap **Install** to download and install the app.

To see your apps, go to the home screen and swipe up from the bottom of the screen.

UPDATE YOUR PHONE SOFTWARE

Install available updates

Tap **Settings** > **System** > **System update** > **Check for update** to check if updates are available.

When your phone notifies you that an update is available, just follow the instructions shown on your phone. If your phone is low on memory, you may need to move your photos and other stuff to the memory card.

Before starting the update, connect a charger or make sure the device battery has enough power, and connect to Wi-Fi, as the update packages may use up a lot of mobile data.

BACK UP YOUR DATA

To ensure your data is safe, use the backup feature in your phone. Your device data (such as Wi-Fi passwords and call history) and app data (such as settings and files stored by apps) will be backed up remotely.

Switch on automatic backup

Tap **Settings** > **System** > **Backup**, and switch back up on.

RESTORE ORIGINAL SETTINGS AND REMOVE PRIVATE CONTENT FROM YOUR PHONE

Reset your phone

1. Tap **Settings** > **System** > **Reset options** > **Erase all data (factory reset)**.
2. Follow the instructions shown on your phone.

11 제품 및 안전 정보

안전을 위해

본 가이드라인을 확인하십시오. 가이드라인을 준수하지 않으면 위험해 질 수 있으며 현지 법률 및 규정에 저촉될 수 있습니다. 자세한 내용은 전체 사용자 가이드를 참조하십시오.

제한 지역 내 전원 끄기



휴대전화 사용이 허가되지 않거나 전파 방해 또는 위험을 유발할 수 있는 경우 (예: 기내, 병원 안, 의료 장비 근처, 휘발유, 화학 물질, 폭발 위험 지역 인근) 기기의 전원을 끄고 제한 지역의 지침을 모두 준수하십시오.

안전 운전 우선



현지 법률을 모두 준수하십시오. 운전 중에는 손으로 다른 것을 다루지 말고 차량 운행에만 집중해야 합니다. 운전할 때 가장 우선 시해야 할 것은 안전 운전입니다.

전파 방해



모든 무선 기기는 전파 방해에 민감할 수 있으며, 전파 방해로 인해 성능이 저하될 수 있습니다.

AUTHORIZED SERVICE



Only authorized personnel may install or repair this product unless self-repair support is available. See more info at www.hmd.com/self-repair.

배터리, 충전기 및 기타 액세서리



HMD Global Oy 에서 본 기기에 사용을 승인한 배터리, 충전기 및 기타 액세서리만 사용하십시오. 호환되지 않는 제품을 연결하지 마십시오.

기기가 젖지 않도록 주의



기기에 방수 성능이 없는 경우 IP 등급을 참조하여 자세한 지침을 확인하십시오.

GLASS PARTS



The device and/or its screen is made of glass. This glass can break if the device is dropped on a hard surface or receives a substantial impact. Stop using the device until the glass is replaced.

청력 보호



볼륨을 높게 설정한 상태로 장시간 듣지 마십시오. 청각 손상의 위험이 있습니다. 스피커 사용 시 기기를 귀에 가까이 가져갈 경우에는 주의 사항을 준수하십시오.

NETWORK SERVICES AND COSTS

일부 기능 및 서비스를 이용하거나 무료 항목을 비롯한 콘텐츠를 다운로드하려면 네트워크 연결이 필요합니다. 이 경우 대용량 데이터 전송으로 인해 데이터 요금이 발생할 수 있습니다. 또한, 일부 기능의 경우 별도의 요금제에 등록해야 할 수 있습니다.




Important: 4G/LTE might not be supported by your network service provider or by the service provider you are using when traveling. In these cases, you may not be able to make or receive calls, send or receive messages or use mobile data connections. To make sure your device works seamlessly when full 4G/LTE service is not available, it is recommended that you change the highest connection speed from 4G to 3G. To do this, on the home screen, tap **Settings** > **Network & Internet** > **SIMs**, and switch **Preferred network type** to **3G**. For more info, contact your network service provider.




Note: Using Wi-Fi may be restricted in some countries. For example, in the EU, you are only allowed to use 5150 – 5350 MHz Wi-Fi indoors, and in the USA and Canada, you are only allowed to use 5.15 – 5.25 GHz Wi-Fi indoors. For more info, contact your local authorities.


EMERGENCY CALLS

-  **중요:** 모든 조건에서 연결이 보장되지는 않습니다. 긴급 의료 전화 등과 같은 긴급한 통신은 무선 전화에만 의존해서는 안 됩니다.

Before making the call:

- Switch the phone on.
- If the phone screen and keys are locked, unlock them.
- Move to a place with adequate signal strength.

On the home screen, tap .

1. Type in the official emergency number for your present location. Emergency call numbers vary by location.
2. Tap .
3. Give the necessary info as accurately as possible. Do not end the call until given permission to do so.

You may also need to do the following:

- Put a SIM card in the phone. If you don't have a SIM card, on the lock screen, tap **Emergency call**.
- If your phone asks for a PIN code, tap **Emergency call**.
- Switch the call restrictions off in your phone, such as call barring, fixed dialling, or closed user group.
- If the mobile network is not available, you may also try making an internet call, if you can access the internet.

TAKE CARE OF YOUR DEVICE

Handle your device, battery, charger and accessories with care. The following suggestions help you keep your device operational.

- Keep the device dry. Precipitation, humidity, and all types of liquids or moisture can contain minerals that corrode electronic circuits.
- Do not use or store the device in dusty or dirty areas.
- Do not store the device in high temperatures. High temperatures may damage the device or battery.

- Do not store the device in cold temperatures. When the device warms to its normal temperature, moisture can form inside the device and damage it.
- Do not open the device other than as instructed in the user guide.
- Unauthorized modifications may damage the device and violate regulations governing radio devices.
- Do not drop, knock, or shake the device or the battery. Rough handling can break it.
- Only use a soft, clean, dry cloth to clean the surface of the device.
- Do not paint the device. Paint can prevent proper operation.
- Keep the device away from magnets or magnetic fields.
- To keep your important data safe, store it in at least two separate places, such as your device, memory card, or computer, or write down important info.

During extended operation, the device may feel warm. In most cases, this is normal. To avoid getting too warm, the device may automatically slow down, dim display during a video call, close apps, switch off charging, and if necessary, switch itself off. If the device is not working properly, take it to the nearest authorized service facility.

재활용



사용하던 전자 제품, 배터리, 포장재를 항상 전담 수거지에 반납하십시오. 그러면 무분별한 쓰레기 배출을 방지하고 자원을 재활용하는 데 도움이 됩니다. 전기 및 전자 제품에는 구리, 알루미늄, 철, 마그네슘 등의 가치 있는 자원과 금, 은, 팔라듐과 같은 귀금속이 다량 포함되어 있습니다. 기기의 모든 재료는 자원 및 에너지로 복원될 수 있습니다.

WEEE 마크

WEEE 마크



제품이나 배터리, 인쇄물 또는 포장에 있는 WEEE 마크는 전기 및 전자 제품과 배터리는 모두 사용 종료 시 별도로 수거해야 한다는 것을 의미합니다. 이러한 제품을 별도로 분류하지 않고 폐기하지 마십시오. 재활용할 수 있도록 분리 수거하십시오. 가까운 재활용품 수거지 정보는 현지 쓰레기 관리 당국에서 확인하시기 바랍니다.

BATTERY AND CHARGER INFORMATION

Battery and charger info

To check if your phone has a removable or non-removable battery, see the printed guide.

Devices with a removable battery Use your device only with an original rechargeable battery. The battery can be charged and discharged hundreds of times, but it will eventually wear out. When the talk and standby times are noticeably shorter than normal, replace the battery.

Devices with a non-removable battery Do not attempt to remove the battery, as you may damage the device. The battery can be charged and discharged hundreds of times, but it will eventually wear out. When the talk and standby times are noticeably shorter than normal, to replace the battery, take the device to the nearest authorized service facility.

Charge your device with a compatible charger. Charger plug type may vary. Charging time can vary depending on device capability.

Battery and charger safety info

Once charging of your device is complete, unplug the charger from the device and electrical outlet. Please note that continuous charging should not exceed 12 hours. If left unused, a fully charged battery will lose its charge over time.

Extreme temperatures reduce the capacity and lifetime of the battery. Always keep the battery between 15°C and 25°C (59°F and 77°F) for optimal performance. A device with a hot or cold battery may not work temporarily. Note that the battery may drain quickly in cold temperatures and lose enough power to switch off the phone within minutes. When you are outdoors in cold temperatures, keep your phone warm.

Obey local regulations. Recycle when possible. Do not dispose as household waste.

Do not expose the battery to extremely low air pressure or leave it to extremely high temperature, for example dispose it in a fire, as that may cause the battery to explode or leak flammable liquid or gas.

Do not dismantle, cut, crush, bend, puncture, or otherwise damage the battery in any way. If a battery leaks, do not let liquid touch skin or eyes. If this happens, immediately flush the affected areas with water, or seek medical help. Do not modify, attempt to insert foreign objects into the battery, or immerse or expose it to water or other liquids. Batteries may explode if damaged.

Use the battery and charger for their intended purposes only. Improper use, or use of unapproved or incompatible batteries or chargers may present a risk of fire, explosion, or other

hazard, and may invalidate any approval or warranty. If you believe the battery or charger is damaged, take it to a service centre or your phone dealer before continuing to use it. Never use a damaged battery or charger. Only use the charger indoors. Do not charge your device during a lightning storm. When charger is not included in the sales pack, charge your device using the data cable (included) and a USB power adaptor (may be sold separately). You can charge your device with third-party cables and power adaptors that are compliant with USB 2.0 or later and with applicable country regulations and international and regional safety standards. Other adaptors may not meet applicable safety standards, and charging with such adaptors could pose a risk of property loss or personal injury.

To unplug a charger or an accessory, hold and pull the plug, not the cord.

Additionally, the following applies if your device has a removable battery:

- Always switch the device off and unplug the charger before removing any covers or the battery.
- Accidental short-circuiting can happen when a metallic object touches the metal strips on the battery. This may damage the battery or the other object.

어린이

기기와 액세서리는 장난감이 아닙니다. 기기와 액세서리에는 작은 부품이 포함될 수 있습니다. 어린이의 손이 닿지 않는 곳에 보관하십시오.

의료 기기

무선 전화 등의 무선 송신 장비 사용 시 전파 방해로 인해 의료 기기의 기능이 오작동할 수 있습니다. 외부 무선 에너지가 제대로 차단되는 기기인지 여부를 확인하려면 의사나 해당 의료 기기 제조사에 문의하십시오.

삽입형 의료 기기

전파 방해 방지를 위해 삽입형 의료 기기 (예: 심장 박동기, 인슐린 펌프 및 신경 자극 기기) 제조 업체에서 무선 기기와 해당 의료 기기 간의 최소 분리 거리 15.3cm 를 유지하라고 권장합니다. 그러한 기기를 삽입한 사람의 경우 다음을 준수해야 합니다.

- 항상 무선 기기와 의료 기기 간의 거리를 15.3cm 이상으로 유지합니다.
- 무선 기기를 가슴 쪽 주머니에 넣지 않습니다.
- 무선 기기를 의료 기기가 삽입된 방향과 반대 방향의 귀에 대고 사용합니다.
- 전파 방해가 있는 것으로 의심되는 모든 경우에 무선 기기의 전원을 끕니다.
- 삽입형 의료 기기에 대한 제조 업체의 지침을 따릅니다.

삽입형 의료 기기와 무선 기기 사용에 대해 더 궁금한 점이 있을 경우 담당 의료 기관에 문의하십시오.

청력



경고: 헤드셋을 사용할 경우 외부 소리를 듣는 능력에 영향을 미칠 수 있습니다. 안전을 위협하는 장소에서는 헤드셋을 사용하지 마세요.

일부 무선 기기는 보청기에 장애를 유발할 수 있습니다.

유해한 콘텐츠로부터 기기 보호

기기가 바이러스와 기타 유해 콘텐츠에 노출될 수 있습니다. 다음 주의 사항을 준수하십시오.

- 메시지를 열 때 주의하십시오. 악성 소프트웨어가 포함되어 있거나 기기 및 컴퓨터에 해를 끼칠 수 있습니다.
- 연결 요청을 수락하거나 인터넷을 탐색하거나 콘텐츠를 다운로드할 때 주의하십시오. 신뢰할 수 없는 출처의 블루투스 연결을 수락하지 마십시오.
- 신뢰할 수 있고 적절한 안전 및 보호를 제공하는 소스에서만 서비스와 소프트웨어를 설치하고 사용하십시오.
- 기기 및 연결된 컴퓨터에 안티바이러스를 비롯한 기타 보안 소프트웨어를 설치하십시오. 한 번에 한 가지 안티바이러스 앱만 사용하십시오. 두 개 이상 사용 시 기기 및/또는 컴퓨터 성능과 작동에 영향을 미칠 수 있습니다.
- 사전 설치된 타사 인터넷 사이트 북마크 및 링크를 사용할 경우 적절한 주의 조치를 수행하십시오. HMD Global은 그러한 사이트의 안전을 보증하거나 그러한 사이트를 신뢰할 수 있는 것으로 추정하지 않습니다.

차량

무선 신호는 차량 내에 부적절하게 설치되었거나 제대로 보호 기능을 갖추지 못한 전자 시스템에 영향을 미칠 수 있습니다. 자세한 내용은 차량 또는 해당 장비 제조사에 문의하십시오. 공인된 서비스 인력만이 차량에 기기를 설치해야 합니다. 잘못된 설치는 위험할 수 있으며 이로 인해 보증이 무효화될 수 있습니다. 차량 내 모든 무선 기기 장치의 설치 및 작동 상태를 정기적으로 확인하십시오. 기기나 기기 부품 또는 액세서리와 같은 공간에 인화성 또는 폭발성 물질을 보관하거나 담지 마십시오. 기기나 액세서리를 에어백 작동 위치에 놓지 마십시오.

폭발할 수 있는 환경

가스관 등이 있는 폭발할 수 있는 환경에서는 기기 전원을 끄십시오. 불꽃이 튀면 폭발 또는 화재가 일어나 상해 또는 사망 사고가 일어날 수 있습니다. 휘발유, 화학 설비, 폭발 작업이 진행되는 곳이 있는 지역에서의 제한 사항을 숙지하십시오. 폭발할 수 있는 환경이 존재하는 지역이 명확하게 표시되지 않을 수 있습니다. 주로 엔진을 끄도록 권장되는 곳, 선박 하단 덱, 화학물 이송 또는 저장 설비, 대기 중에 화학 물질이나 입자가 포함되는 곳 등이 해당됩니다. 액화 석유 가스(프로판, 부탄 등)를 사용하는 차량의 경우 본 기기를 차량 인근에서 사용해도 안전한지 여부를 차량 제조 업체에 확인하십시오.

CERTIFICATION INFORMATION

이 휴대 전화는 무선 전파 노출에 대한 지침을 충족합니다.

본 휴대 전화는 무선 송수신기입니다. 독립적인 과학 기관 ICNIRP의 국제 지침에서 권장하는 무선 전파(무선 주파수 전자기장) 노출 제한을 초과하지 않도록 설계되어 있습니다. 이 지침은 연령 및 건강 상태에 상관없이 모든 사람의 안전을 보호하도록 설계된 안전 마진을 광범위하게 다루고 있습니다. 노출 지침은 기기 송신 시 머리카나 인체에 축적되는 RF(무선 주파수) 총량을 나타내는 SAR을 토대로 작성됩니다. 모바일 기기에 대한 ICNIRP SAR 제한은 티슈 10g당 평균 2.0W/kg입니다.

SAR 테스트는 표준 작동 위치에서 주파수 대역 전체의 최대 정격 전원 수준으로 송신하는 기기로 수행합니다.

기기의 최대 SAR 값은 www.hmd.com/sar를 참조하시기 바랍니다.

본 기기는 머리 쪽에서 사용하거나 인체에서 1.5cm 이상 떨어진 곳에 둔 상태에서 RF 노출 지침을 충족합니다. 휴대용 케이스, 벨트 클립 또는 기타 형태의 기기 홀더를 인체에 착용하여 사용하는 경우, 재질에 메탈이 포함되어서는 안 되며 앞서 설명한 인체와 기기 간 분리 거리 이상을 충족해야 합니다.

데이터나 메시지를 전송하려면 양호한 네트워크 연결이 필요합니다. 연결이 양호하지 못하면 양호한 연결을 사용할 수 있을 때까지 전송이 지연될 수 있습니다. 전송이 완료될 때까지 별도의 거리 지침을 따르십시오.

일반적인 사용 시 SAR 값은 대체로 위에서 설명한 값 아래로 유지됩니다. 이는 시스템 효율성 목적 및 네트워크상의 전파 방해를 최소화하기 위한 목적으로 통화에 풀 전력이 필요 없을 때에는 휴대전화의 작동 전원이 자동으로 감소되기 때문입니다. 전원 출력이 낮을수록 SAR 값이 낮아집니다.

기기 모델별로 다양한 버전이 있어 SAR 값이 상이할 수 있습니다. 부품 및 디자인 변경이 진행될 수 있으며 일부 변경 항목이 SAR 값에 영향을 미칠 수 있습니다.

자세한 내용은 www.sar-tick.com에서 확인할 수 있습니다. 음성 통화를 하지 않을 때에도 휴대전화에서 전기, 전파 등의 전도가 일어날 수 있다는 점에 유의하십시오.

WHO(세계 보건 기구)에서는 현 과학 정보상 모바일 기기 사용 시 별도의 주의 사항은 필요하지 않은 것으로 나타난다고 발표했습니다. SAR 노출 감소에 관심이 있는 경우 모바일 기기를 제한적으로 사용하거나 머리와 인체와 기기 간 거리를 유지하기 위해 핸드프리 도구를 사용할 것을 권장합니다. 자세한 정보와 RF 노출 관련 설명 및 논의는 WHO 웹 사이트 www.who.int/peh-emf/en를 참조하시기 바랍니다.

디지털 권한 관리 소개

본 기기를 사용할 때에는 모든 법률 및 지역 관례는 물론 타인의 저작권 등의 합법적인 권한과 개인 정보 규정을 준수하십시오. 저작권 보호를 위해 사진, 음악 및 기타 콘텐츠의 복사, 수정 또는 전송이 금지될 수 있습니다.

COPYRIGHTS AND OTHER NOTICES

Copyrights and other notices

The availability of some products, features, applications and services described in this guide may vary by region and require activation, sign up, network and/or internet connectivity

and an appropriate service plan. For more info, contact your dealer or your service provider. This device may contain commodities, technology or software subject to export laws and regulations from the US and other countries. Diversion contrary to law is prohibited.

The contents of this document are provided "as is". Except as required by applicable law, no warranties of any kind, either express or implied, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose, are made in relation to the accuracy, reliability or contents of this document. HMD Global reserves the right to revise this document or withdraw it at any time without prior notice.

To the maximum extent permitted by applicable law, under no circumstances shall HMD Global or any of its licensors be responsible for any loss of data or income or any special, incidental, consequential or indirect damages howsoever caused.

Reproduction, transfer or distribution of part or all of the contents in this document in any form without the prior written permission of HMD Global is prohibited. HMD Global operates a policy of continuous development. HMD Global reserves the right to make changes and improvements to any of the products described in this document without prior notice.

HMD Global does not make any representations, provide a warranty, or take any responsibility for the functionality, content, or end-user support of third-party apps provided with your device. By using an app, you acknowledge that the app is provided as is.

Downloading of maps, games, music and videos and uploading of images and videos may involve transferring large amounts of data. Your service provider may charge for the data transmission. The availability of particular products, services and features may vary by region. Please check with your local dealer for further details and availability of language options.

Certain features, functionality and product specifications may be network dependent and subject to additional terms, conditions, and charges.

All specifications, features and other product information provided are subject to change without notice.

HMD Global Privacy Policy, available at <http://www.hmd.com/privacy>, applies to your use of the device.

HMD Global Oy is a licensee of the Nokia brand for phones & tablets. Nokia is a registered trademark of Nokia Corporation.

Android, Google and other related marks and logos are trademarks of Google LLC.

The Bluetooth word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by HMD Global is under license.

OZO



OZO is a trademark of Nokia Technologies Oy.