

**NOKIA**

# **Nokia 3310 3G**

## **Gebruikersgids**

# Inhoud

<b>1 Oor hierdie gebruikersgids</b>	<b>5</b>
<b>2 Om te begin</b>	<b>6</b>
Keys and parts . . . . .	6
Set up and switch on your phone . . . . .	7
Charge your phone . . . . .	10
Lock or unlock the keys . . . . .	11
<b>3 Basiese beginsels</b>	<b>12</b>
Get the most out of the two SIM cards (dual SIM phones) . . . . .	12
Explore your phone . . . . .	13
Change the volume . . . . .	16
Write text . . . . .	16
<b>4 Calls, contacts, and messages</b>	<b>18</b>
Calls . . . . .	18
Contacts . . . . .	19
Send and receive messages . . . . .	20
<b>5 Personalize your phone</b>	<b>21</b>
Change your ring or message tone . . . . .	21
Change the look of your home screen . . . . .	21
<b>6 Kamera</b>	<b>23</b>
Photos . . . . .	23
Videos . . . . .	24
<b>7 Internet en verbinding</b>	<b>25</b>
Browse the web . . . . .	25

<b>8 Music, audio and videos</b>	<b>26</b>
Music player . . . . .	26
Voice recorder . . . . .	26
Video player . . . . .	26
<b>9 Radio</b>	<b>28</b>
Find and save radio stations . . . . .	28
Listen to radio . . . . .	28
<b>10 Clock, calendar, and calculator</b>	<b>29</b>
Set the time and date manually . . . . .	29
Alarm clock . . . . .	29
Calendar . . . . .	29
Calculator . . . . .	30
<b>11 Bluetooth</b>	<b>31</b>
Activate Bluetooth . . . . .	31
<b>12 Copy, share and remove content</b>	<b>32</b>
Copy content . . . . .	32
Share content . . . . .	32
Memory . . . . .	33
Remove private content from your phone . . . . .	33
<b>13 Backup and restore</b>	<b>34</b>
Create a backup . . . . .	34
Restore a backup . . . . .	34
<b>14 Tools</b>	<b>35</b>
Extras . . . . .	35
Torch . . . . .	35
Counters . . . . .	36

<b>15 Settings</b>	<b>37</b>
System settings . . . . .	37
Connectivity settings . . . . .	38
Personalization settings . . . . .	38
Time and language settings . . . . .	39
Security settings . . . . .	40
<b>16 Produk- en veiligheidsinligting</b>	<b>41</b>
For your safety . . . . .	41
Network services and costs . . . . .	43
Emergency calls . . . . .	43
Sien om na jou toestel . . . . .	44
Herwin . . . . .	45
Deurgehaalde wieldrom-simbool . . . . .	45
Battery and charger information . . . . .	46
Klein kinders . . . . .	46
Mediese toestelle . . . . .	47
Geïmplanteerde mediese toestelle . . . . .	47
Gehoor . . . . .	47
Beskerm jou toestel teen skadelike inhoud . . . . .	47
Voertuie . . . . .	48
Plekke met potensiaal vir ontploffing . . . . .	48
Sertifiserings informasie . . . . .	48
Copyrights and other notices . . . . .	49
Oor Digitale Regtebestuur . . . . .	50

# 1 Oor hierdie gebruikersgids



 
**Belangrik:** Vir belangrike inligting oor die veilige gebruik van jou toestel en battery, lees "Produk- en veiligheidsinligting" voordat jy die toestel in gebruik neem. Om uit te vind hoe om jou nuwe toestel te begin gebruik, lees die gedrukte gebruikersgids.

## 2 Om te begin

### KEYS AND PARTS

Explore the keys and parts of your new phone.

#### Your phone

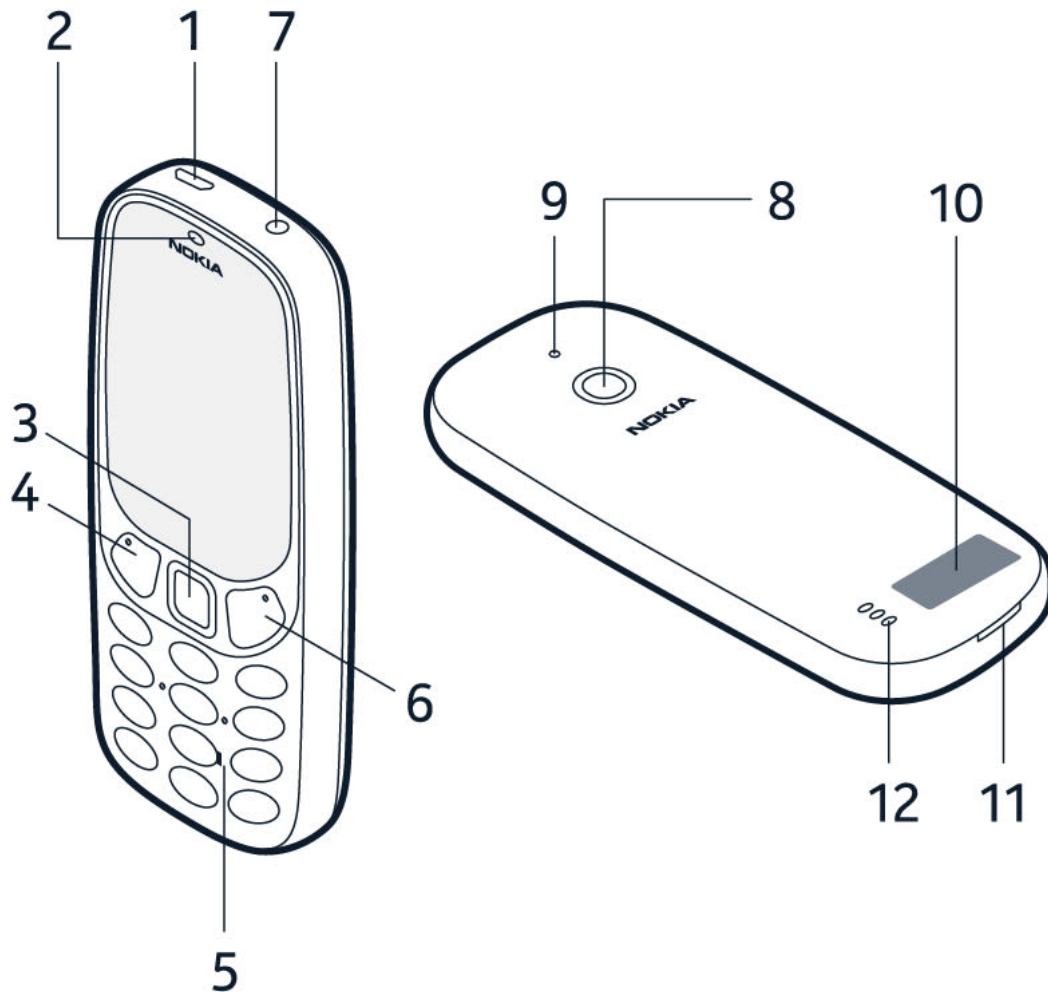


The keys and parts of your phone are:

- |                             |                                     |
|-----------------------------|-------------------------------------|
| 1. Charger connector        | 6. Function key, end call/power key |
| 2. Earpiece                 | 7. Headphone connector              |
| 3. Scroll and selection key | 8. Camera                           |
| 4. Function key, call key   | 9. Flash light                      |
| 5. Number keys              | 10. Antenna area                    |

## 11. Back cover opening slot

## 12. Loudspeaker

To lock the keys automatically, select **Menu** >  > **Security** > **Keyguard** > **Automatic keyguard** and select **On**.



To unlock the keys, select **Unlock** and press **\***.

Avoid touching the antenna area while the antenna is in use. Contact with antennas affects the communication quality and may reduce battery life due to higher power level during operation.

Do not connect to products that create an output signal, as this may damage the device. Do not connect any voltage source to the audio connector. If you connect an external device or headset, other than those approved for use with this device, to the audio connector, pay special attention to volume levels.

Parts of the device are magnetic. Metallic materials may be attracted to the device. Do not place credit cards or other magnetic storage media near the device, because info stored on them may be erased.

Some of the accessories mentioned in this user guide, such as charger, headset, or data cable, may be sold separately.

 **Note:** You can set the phone to ask for a security code. Select **Menu** >  > **Security** > **Keyguard** and set **Security code** on. If there is a pre-set code, it is 12345. Change it to protect your privacy and personal data. Note, however, that when you change the code, you need to remember the new code, as HMD Global is not able to open or bypass it. This phone cannot be located or locked remotely if lost.

## SET UP AND SWITCH ON YOUR PHONE

Learn how to insert the SIM card, memory card, and battery, and how to switch on your phone.

### Micro SIM



**Important:** This device is designed to be used with a micro SIM card (see figure) only. Use of incompatible SIM cards may damage the card or the device, and may corrupt data stored on the card. Please consult your mobile operator for the use of a SIM card that has a nano-UICC cutout.

## MicroSD memory cards



Use only compatible memory cards approved for use with this device. Incompatible cards may damage the card and the device and corrupt data stored on the card.



 
**Note:** Switch the device off and disconnect the charger and any other device before removing any covers. Avoid touching electronic components while changing any covers. Always store and use the device with any covers attached.

## Set up your phone (single SIM)



1. Place your fingernail in the small slot at the bottom of the phone, lift and remove the cover.
2. If the battery is in the phone, lift it out.
3. Slide the SIM into the SIM slot with the contact area face down.
4. If you have a memory card, slide the memory card into the memory card slot.
5. Line up the battery contacts, and put the battery in.
6. Put back the back cover.

## Set up your phone (dual SIM)

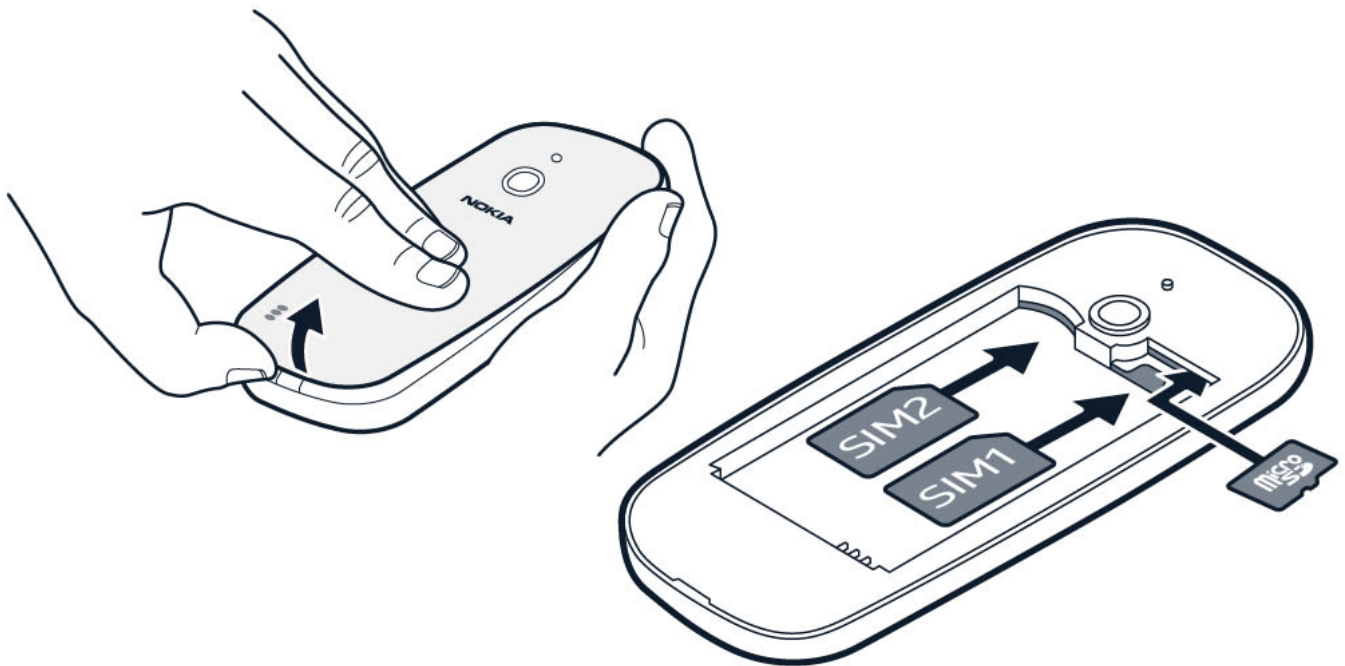

1. Place your fingernail in the small slot at the bottom of the phone, lift and remove the cover.
2. If the battery is in the phone, lift it out.
3. Slide the first SIM into SIM slot 1 with the contact area face down. Slide the second SIM into SIM slot 2. Both SIM cards are available at the same time when the device is not being used, but while one SIM card is active, for example, making a call, the other may be unavailable.
4. If you have a memory card, slide the memory card into the memory card slot.
5. Line up the battery contacts, and put the battery in.
6. Put back the back cover.

## Switch on your phone

Press and hold the  key.

## Remove the SIM card

Open the back cover, remove the battery, and slide the SIM out.

## Remove the memory card

Open the back cover, remove the battery, and pull the memory card out.

## Access codes

Your phone and SIM card use different codes for security.

- PIN or PIN2 codes: These codes protect your SIM card against unauthorized use. If you forget the codes or they aren't supplied with your card, contact your network service provider. If you type in the code incorrectly 3 times in a row, you need to unblock the code with the PUK or PUK2 code.
- PUK or PUK2 codes: These codes are required to unblock a PIN or PIN2 code. If the codes are not supplied with your SIM card, contact your network service provider.
- Security code: The security code helps you protect your phone against unauthorized use. You can set your phone to ask for the security code that you define. Keep the code secret and in a safe place, separate from your phone. If you forget the code and your phone is locked, your phone will require service. Additional charges may apply, and all the personal data on your phone may be deleted. For more info, contact the nearest care point for your phone, or your phone dealer.
- IMEI code: The IMEI code is used to identify phones in the network. You may also need to give the number to your care point services or phone dealer. To view your IMEI number, dial **\*#06#**. Your phone's IMEI code is also printed on your phone label, which is located under the battery. The IMEI is also visible on the original sales box.

## CHARGE YOUR PHONE

Your battery has been partially charged at the factory, but you may need to recharge it before you can use your phone.

### Charge the battery

1. Plug the charger into a wall outlet.
2. Connect the charger to the phone. When done, unplug the charger from the phone, then from the wall outlet.

If the battery is completely discharged, it may take several minutes before the charging indicator is displayed.



**Tip:** You can use USB charging when a wall outlet is not available. Data can be transferred while charging the device. The efficiency of USB charging power varies significantly, and it may take a long time for charging to start and the device to start functioning. Make sure your computer is switched on.


### Save power

To save power:

1. Charge wisely: always charge the battery fully.
2. Select only the sounds that you need: mute unnecessary sounds, such as keypad sounds.
3. Use wired headphones, rather than the loudspeaker.
4. Change the phone screen settings: set the phone screen to switch off after a short time.
5. Lower the screen brightness.
6. When applicable, use network connections, such as Bluetooth, selectively: switch the connections on only when you are using them.

## LOCK OR UNLOCK THE KEYS

### Lock the keypad

To lock the keys automatically, select **Menu** >  > **Security** > **Keyguard** > **Automatic keyguard** and select **On**.

### Unlock the keypad


To unlock the keys, select **Unlock** and press **\***.

## 3 Basiese beginsels

### GET THE MOST OUT OF THE TWO SIM CARDS (DUAL SIM PHONES)

Your phone can use two SIM cards, and you can use them for different purposes.


#### Select which SIM card to use

1. Select **Menu** >  > **Connectivity** > **Dual SIM**.
2. To choose which SIM to use for calls, select **Preferred SIM for calls**, and select **SIM1** or **SIM2**.
3. To choose which SIM to use for messages, select **Preferred SIM for messages**, and select **SIM1** or **SIM2**.
4. To choose which SIM to use for mobile data, select **Mobile data connection**, switch **Mobile data** on, and select either **SIM1** or **SIM2**.

#### Forward calls between your 2 SIMs

Get the most out of your 2 SIM cards. If you forward your calls between your SIMs, when someone calls you on one SIM while you're having a call on the other, you can manage your calls from both SIMs just like with only one SIM.

Make sure you have 2 SIM cards inserted in your phone.

1. Select **Menu** >  > **Connectivity** > **Dual SIM** > **SIM numbers**.
2. Type in the numbers of your both SIMs and select **Save**.
3. Scroll up to **Forward calls**, and select **Between two SIMs**, **From SIM1 to SIM2**, or **From SIM2 to SIM1**.

 
## EXPLORE YOUR PHONE

See the apps and features of your phone



Select **Menu**.

Go to an app or feature

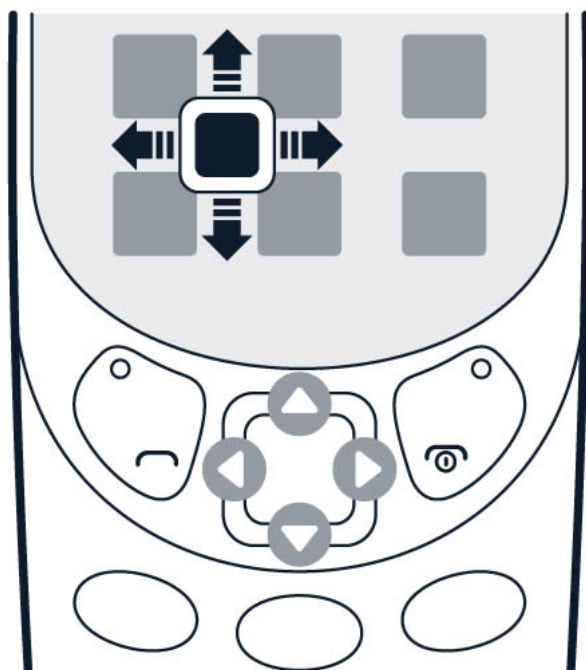


Press the scroll key up, down, left, or right.

**Open an app or select a feature**



 
Select **Select**.

**Go back to the previous view**

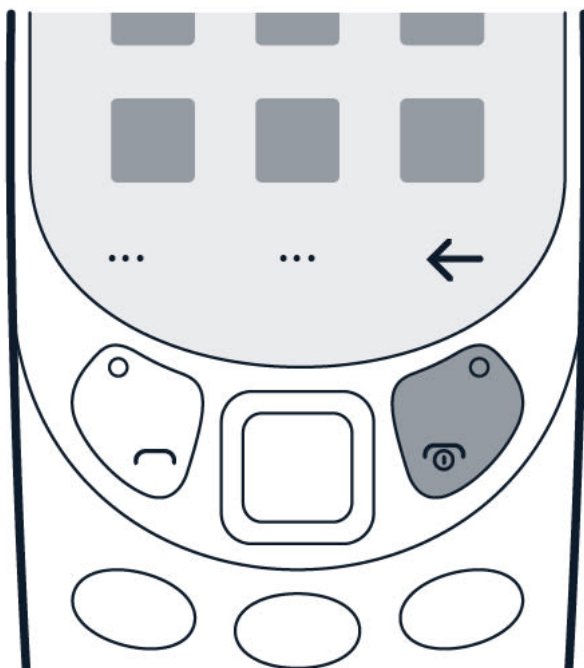

Press ←.

## Go back to the home screen

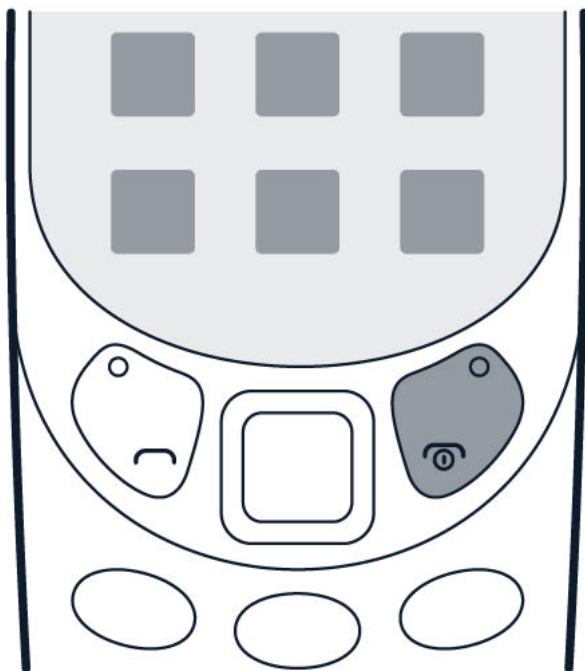 

Press the end key.


## Arrange the menu

 If you want to change the order of applications in the menu, you can rearrange them.

To rearrange the menu, select the application that you want to move. Select **Menu** > ≡ > **Move**, and use the scroll key to move the application. Press the scroll key to place the application to your desired location.

## CHANGE THE VOLUME

Turn the volume up or down

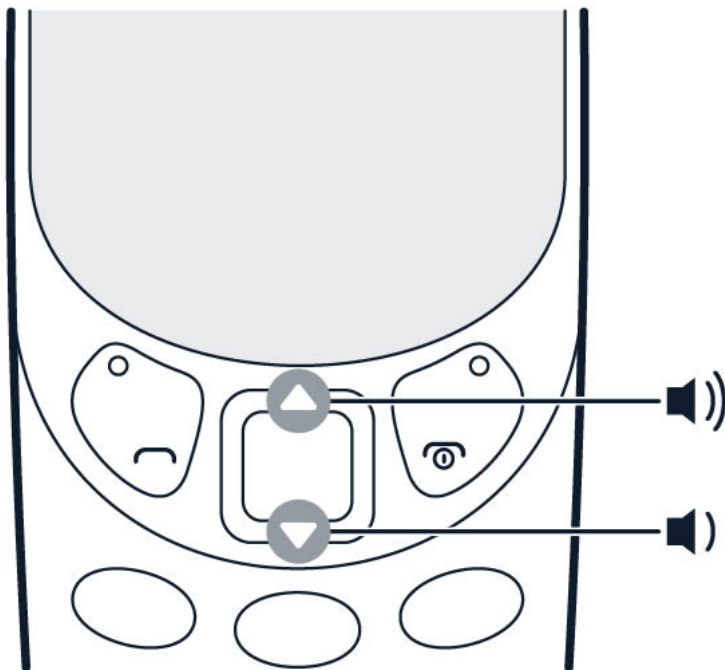

Trouble hearing your phone ringing in noisy environments, or calls too loud? You can change the volume to your liking.

Scroll up or down to change the volume during a call or when listening to the radio.

## WRITE TEXT

### Write using the keypad

Writing with the keypad is easy and fun.

Press a key repeatedly until the letter is shown.

To type in a space press **0**.

To type in a special character or punctuation mark, press **\***.



To switch between character cases, press **#** repeatedly.

To type in a number, press and hold a number key.



### Use predictive text

To speed up your writing, your phone can guess what you are starting to write. Predictive text is based on a built-in dictionary. This feature is not available for all languages.

## Nokia 3310 3G Gebruikersgids

To switch predictive text on, select **Menu** >  > . Scroll to **Predictive text** and select a language.

To switch between predictive and traditional text, press **#** repeatedly.

To switch predictive text off, select **Menu** >  > , scroll to **Predictive text**, and select **Predictive text off**.

## 4 Calls, contacts, and messages

### CALLS

#### Make a call


Learn how to make a call with your new phone.

1. Type in the phone number. To type in the + character, used for international calls, press \* twice.
2. Press the call key. If asked, select which SIM to use.
3. To end the call, press the end key.


#### Answer a call

Press .





**Tip:** To handle your calls hands-free, pair your phone with a compatible Bluetooth headset (sold separately). To switch Bluetooth on, select **Menu** >  > **Connectivity** > **Bluetooth**, and switch **Bluetooth** to **On**.




**Tip:** If you are in a situation where you cannot answer the phone and you need to silence it quickly, press .

#### Speed dial

You can call a contact quickly using speed dial.


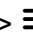
 
1. To add people to your speed dial list, select **Menu** > .
2. Select  > **Speed dial** and switch **Speed dial** on.
3. Select **Edit**.
4. Scroll to an available speed dial number, and select **Add**.
5. Select a contact.



You can select whether the phone calls or sends a text message when you press the speed dial key. By default, the phone calls. To change the call to a text message, select the speed dial and  > **Send message**.



## CONTACTS


 
### Add a contact

Save and organize your friends' phone numbers.

1. Select **Menu** >  >  > **Add new contact**.
2. Scroll up to add a photo for the contact.
3. Scroll down to write the name and number and to add any other information that you want to include. You can also select a specific ringtone for the contact.
4. Select  > **Save contact**.


 

 **Tip:** You can select which memory you want to use for storing contacts. Select **Options** >  > **Storage** > **Preferred storage** and select **Phone** or **Memory card**.

 **Tip:** To save a phone number in the dialer, type in the number, and select  > **Add to Contacts** and select whether to create a new contact or to update existing.

 **Tip:** To copy contacts between your phone and SIM cards, in **Contacts**, select  > **Copy contacts**.


### Save a contact from call log

You can save contacts from call log.

1. Select **Menu** > .
2. Highlight the number you want to save, and select  > **Add to Contacts** and select whether to create a new contact or to update existing.
3. Add the contact's information and select  > **Save contact**.




### Call a contact or send a message

You can call or send messages to a contact directly from the contacts list.

1. Select **Menu** >  and scroll to a contact.
2. Open the contact card, and select whether you want to call or to send a message.



## Create a contact group

You can create contact groups and use them, for example, for sending a message to multiple people at the same time.


1. Select **Menu** >  >  > **Groups**.
2. Select a group, and  > **Add member**.
3. Select a contact, and press **+**. The contact is added to the group.

## SEND AND RECEIVE MESSAGES


### Write and send messages

1. Select **Menu** >  > **+ New message**.
2. Add the recipients. You can enter a phone number directly or add press  to add a recipient from your contacts or groups.
3. Write a message.
4. Press **Send**.

### Writing options

You can find different options for writing a message from  when you are in the message field. You can insert smileys and symbols, or use ready-made templates. You can add images, sound or contact cards, discard messages, and save them as drafts.

### Message options

When you have received messages in your phone, select the message without opening it, and press .


You can, for example, call the sender, delete the conversation, and add the sender to **Contacts**. You can also access **Message settings**.

## 5 Personalize your phone

### CHANGE YOUR RING OR MESSAGE TONE

You can choose a new ringtone or message tone.


#### Change your ringtone

1. Select **Menu** >  > **Personalisation** > **Sounds**.
2. Select **Ringtone**.
3. Scroll to a ringtone.
4. Press **Select**.



**Tip:** Is your ringtone too loud or too silent? Select **Volume** and scroll left or right.

#### Change your message tones



1. Select **Menu** >  > **Personalisation** > **Sounds** > **Message alert**.
2. Scroll to a message tone.
3. Press **Select**.

### CHANGE THE LOOK OF YOUR HOME SCREEN

Change the look of your home screen with display settings.

#### Choose a new wallpaper


You can change the background of your home screen with wallpapers.

1. Select **Menu** >  > **Personalisation** > **Lock screen background** > **Wallpapers**.
2. Scroll to a wallpaper and press **Select** to see how it looks on the screen.
3. Press .


You can also select a wallpaper from the photos you have on your phone.

### Choose a new theme color

You can change the color that your phone uses for highlighting items such as menu options.

1. Select **Menu**  > **Personalisation** > **Theme**.
2. Scroll left or right to select a color.
3. Press **Select**.

### Select a shortcut for the left and right function key

1. Select **Menu** >  > **Personalisation** > **Keypad** > **Lock screen shortcuts**.
2. Select **Right key** or **Left key** and scroll to the application or function you want.
3. Press **Select**.



## 6 Kamera


### PHOTOS


You don't need a separate camera when your phone has all you need for capturing memories.

#### Take a photo

Capture the best moments with your phone camera.

1. To switch the camera on, select **Menu** > .
2. To zoom in or out, scroll up or down.
3. To take a photo, select .


Before you take a photo, you can change your settings in  > **Camera settings**. You can, for example, adjust the exposure and brightness of a photo.

If you want to add effects to your photo, change the photo quality, or use the timer to better position a photo, press  and select one of the available options.

 


**Tip:** To switch the flash on, in camera, select  > **Flash** and switch it on.

#### View a photo you have taken



To view the photo right after taking it, select  > **Gallery**. To view the photo later, select **Menu** > **Gallery**.




**Tip:** To set a photo you have taken as the lock screen photo, in **Gallery**, open the photo and select  > **Set as lock screen**.

#### Take several photos

 You can take several photos after each other with the burst mode.

1. In camera, select  > **Burst**.
2. Select how many photos you want the camera to take.
3. Go back to the viewfinder, and select . The camera takes several photos with short intervals.

To continue taking just one photo at a time, select  > **Burst** > **1**.

## Edit a photo you have taken

You can edit the photos that you have taken in **Gallery**.

1. Open a photo. scroll key to make the edits.
2. Select **≡** > **Edit**.
3. Select what you want to edit, and use the
4. Select **Apply**.
5. Press **✓**.





The edited photo is saved as a new photo.

## VIDEOS



You don't need a separate video camera - record video memories with your phone.

### Record a video


Besides taking photos, you can also record videos with your phone.


1. To switch the video camera on, select **Menu** >  and scroll to .
2. To start recording, select .
3. To stop recording, select .

Before you start recording, you can change your settings, add effects, or switch on the video light in **≡**.

 **Tip:** Need more space for your videos? Insert a memory card, and set **Menu** >  > **Storage** > **Preferred storage** to **Memory card**.

### Watch the recorded video

To view the video right after recording, select .

 **Tip:** To view the video later, select **Menu** > .

## 7 Internet en verbindingen

### BROWSE THE WEB

Learn how to browse the web with your phone.

#### Connect to internet

Catch up on the news, and visit your favorite websites on the go.

1. Select **Menu** > ●.

2. Write a web address, and press **OK**.



**Tip:** If you want to avoid data costs, switch mobile data off when you are not surfing the web. In your single SIM phone, select **Menu** > ⚙ > **Connectivity** > **Network settings** and switch **Mobile data** off.



**Tip:** If you want to avoid data costs, switch mobile data off when you are not surfing the web. In your dual SIM phone, select **Menu** > ⚙ > **Connectivity** > **Dual SIM** > **Mobile data connection**, and switch **Mobile data** off.




**Tip:** To open a web link from a message, scroll on top of the link and select **Go to**.

## 8 Music, audio and videos


### MUSIC PLAYER

You can listen to your MP3 music files with the music player.


#### Listen to music

1. Select **Menu** > .
2. Select whether you want to view your songs, artists, albums, or playlists.
3. Scroll to a song, and select **Play**.


 


**Tip:** To listen to music using wireless headphones, pair your phone with a compatible Bluetooth headset (sold separately). To switch Bluetooth on, select **Menu** >  > **Connectivity** > **Bluetooth**, and switch **Bluetooth** to **On**.





**Tip:** To set a song as ringtone, select **Songs**, scroll to the song you want, and select  > **Set as ringtone**.

#### Create a playlist

1. Select **Menu** >  > **Songs**.
2. Scroll to a song, and select  > **Add to playlist**.
3. Scroll up and select **+ New playlist**.
4. Give the playlist a name and select **OK**.
5. Select the playlist that you just created. The song is added to that playlist.

### VOICE RECORDER


#### Record a sound clip

1. Select **Menu** > **Voice recorder**.
2. To record, select .
3. To stop recording, select .

### VIDEO PLAYER

Watch your favorite videos wherever you are.

## Play a video

1. Select **Menu** > .
2. Select the video, and press **Open**.
3. Press the scroll key to pause and resume playback while watching the video.




**Tip:** Not all video formats are supported.

## 9 Radio

### FIND AND SAVE RADIO STATIONS

You need to connect a compatible headset to listen to the radio. The headset acts as an antenna. Troubleshooting tip: in case the radio does not work, make sure that the headset is properly connected.


#### Search for radio stations

Select **Menu** > . If you open the radio for the first time, it will automatically search for the available stations and start playing. To switch to another found station, scroll left or right.

To search for all available stations later, select  > **Auto tuning**.

#### Save a found station as a favorite

You can save a found station into your list of favorites.

1. To save a station as a favorite, when listening to that station, select  > **Add to favourites**.
2. Select a position, and select **Add**.
3. Give the channel a name, and select **OK**.

### LISTEN TO RADIO

Did you find a good radio station? Next, start listening to it!

#### Listen to your favorite radio stations on your phone


Select **Menu** > . The radio starts playing the last station you have listened.

To change the station, scroll left or right.

To change the volume, scroll up or down.

To close the radio, select  > **Close radio**.




**Tip:** To listen to a radio station using the phone's speakers, press  and switch **Speaker** on. Keep the headset connected.

## 10 Clock, calendar, and calculator

### SET THE TIME AND DATE MANUALLY

You can set your phone clock manually.

#### Change the time and date


1. Select **Menu** >  > **Time & language** > **Date and time**.
2. Switch **Auto update** to **Off**.
3. Scroll down, and use the number keys to set the time and date.

### ALARM CLOCK

Learn how to use the alarm clock to wake up and get to places on time.

#### Set an alarm

No clock around? Use your phone as an alarm clock.

1. Select **Menu** > .
2. Select **Add** to add an alarm.
3. Set the hour and minutes with the number keys.
4. Select whether the alarm repeats, and write a name for the alarm.
5. Select and alarm tone and snooze time.
6. Select **Save**.



To add another alarm, scroll up to **+ New alarm** and select **Add**.

To turn off an alarm, scroll to the alarm and select **Turn off**.

### CALENDAR

Need to remember an event? Add it to your calendar.

#### Add a calendar reminder

1. Select **Menu** > .
2. Select a date and  > **Add new event**.
3. Type in a name for the event.
4. Scroll down, and set the date and time with

the number keys.

reminder time and a ringtone.


5. Add any other information that you want to include in the event, including a


6. Select **Save**.

## CALCULATOR

Learn how to add, subtract, multiply and divide with your phone calculator.

### How to calculate

1. Select **Menu** > .
2. Enter the first factor of your calculation, use the scroll key to select the operation, and enter the second factor.
3. Press the scroll key to get the result of the calculation.


Press  to empty the number fields.

## 11 Bluetooth

### ACTIVATE BLUETOOTH

Connect your phone with Bluetooth to other devices.

#### Switch on Bluetooth

Select **Menu** >  > **Connectivity** > **Bluetooth** and switch **Bluetooth** on.

## 12 Copy, share and remove content

### COPY CONTENT

Copy photos, videos, music, and other content created by you between your phone and computer.

#### Copy content between your phone and computer

1. Connect your phone to a compatible computer with a compatible USB cable.
2. Select **Mass storage**.
3. On your computer, open a file manager, such as Windows Explorer, and browse to your phone. You can see the content stored on your phone and on the memory card, if inserted.
4. Drag and drop items between your phone and computer.

### SHARE CONTENT

Share your stuff, such as contacts, photos, videos and music easily with friends and family.

#### Share your content using Bluetooth

To share content with Bluetooth, make sure Bluetooth is switched on in both phones, and make sure the phones are visible to other phones.

1. To share, for example, a photo, select **Menu** > **Gallery**.
2. Open the photo that you want to share, and select **≡** > **Share**.
3. Select **Via Bluetooth**. Your phone searches for available Bluetooth devices. Press **X** once the receiving phone is found.
4. Select **Pair** and enter a passcode. The passcode can be, for example, a series of numbers that the recipient must enter on the receiving phone to confirm the connection.
5. The recipient may need to accept the files that you are sending on their phone.

Operating the device in hidden mode is a safer way to avoid malicious software. Do not accept Bluetooth connection requests from sources you do not trust. You can also switch the Bluetooth function off when you are not using it.

## Share your content using multimedia messages

To share content using multimedia messages, make sure both phones are on and send and receive them.

1. To share, for example, a contact card, select **Menu** > **Contacts**.
2. Open the contact card that you want to share, and select **≡** > **Share contact**.
3. Select **Via multimedia**. Your phone opens a new message.
4. Add the recipient of the message, and select **Send**.

## MEMORY

When needed, you can check how much used and how much free memory you have on your phone.

### Check the amount of used and free memory

Select **Menu** > **Files** > **≡** > **Details**. The phone shows the amount of available memory, the amount of used memory, and the amount of free memory.

## REMOVE PRIVATE CONTENT FROM YOUR PHONE

If you buy a new phone, or otherwise want to dispose of or recycle your phone, here's how you can remove your personal info and content.

### Remove content from your phone

When removing private content from your phone, pay attention to whether you are removing content from the phone memory or the SIM card.



1. To remove messages, select **Menu** > **☰** > **≡** > **Delete conversations**. Select the conversations that you want to delete, and select **🗑️**. You can also select **≡** > **Select all** to select all conversations at one go.
2. To remove contacts, select **Menu** > **👤** > **≡** > **Delete contacts**. Select the contacts that you want to delete, and select **🗑️**. You can also select **≡** > **Select all** to select all contacts at one go.
3. To remove your call info, select **Menu** > **📞** > **≡** < **Delete all**.
4. Check that all your personal content has been removed.

## 13 Backup and restore

### CREATE A BACKUP

Sometimes you need to create a backup of your phone data.


#### Create a backup

1. Select **Menu** >  > **Storage** > **Create backup** .
2. A list opens where you can select the data that you want to back up.
3. Press 
4. Your phone tells you that the backup will be saved to your memory card. You cannot use your phone until the backup is complete. Select **OK** to create the backup.

### RESTORE A BACKUP

To restore a backup of your data you need the created backup file on a memory card.

#### Restore a backup

1. Select **Menu** >  > **Storage** > **Restore backup** .
2. Select the backup, and select **OK** .
3. Your phone restarts after restoring the backup files.

## 14 Tools

### EXTRAS


#### Countdown timer

If you need an alarm but don't want to create one in the alarm clock, use the countdown timer. You can, for example, time something that's cooking in the kitchen.

1. Select **Menu** > **Extras** > **Countdown timer**.
2. Use the scroll keys and number keys to set the time and write a name for the timer.
3. Select **Start**.

After you have set a time in the countdown timer, return to **Menu** > **Extras**, scroll to **Countdown timer** and press the scroll key to edit or stop the timer.

#### Stopwatch

1. Select **Menu** > **Extras** > **Stopwatch**.
2. Select **Start**.
3. Press  when, for example, a lap has been completed.

To stop, select **Stop** and press .

#### Converter

1. Select **Menu** > **Extras** > **Converter**.
2. Select what you want to convert and how do you want to convert it.
3. Use the number keys to write both measurements. Converter converts the measurements automatically.

### TORCH

#### Use the flashlight

Select **Menu** > **Torch**. Press the scroll key once to switch the flashlight on, and press again to switch the flashlight off.

Do not shine the light in anyone's eyes.

## COUNTERS

### Check and clear counters

**Counters** keep track of the amount of mobile data used, the calls made and messages sent using your SIM card. If you have a dual SIM phone, both SIM cards are tracked separately.

To check the details of your SIM card usage, select **Menu** > **Counters**. Select the SIM card and press the scroll key.

To clear all counters, select **≡** > **Clear all counters**.

## 15 Settings

### SYSTEM SETTINGS

#### Available system settings

Select **Menu** >  > **System**.

In system settings, you can edit, for example:


- **Call settings**, including call forwarding, voicemail number, and cost settings
- Settings for **Messages**, including whether to send delivery reports for messages and whether to receive multimedia messages when roaming
- **Backlight** settings, including the brightness and timeout of your keypad backlight
- Settings for **Notifications**, including what notifications to see in your standby mode

#### Reset your phone

Accidents may happen and your phone may stop responding. You can restore the original factory settings, but be careful, since this reset removes all data you have saved in the phone memory and all your personalization.


If you are disposing your phone, note that you are responsible of removing all private content.

You may need to have the security code to restore the original settings. To reset your phone to its original settings and to remove all your data, on the home screen, type in \*#7370#.

1. Select **Menu** >  > **System** > **About** > **Restore factory settings**.
2. There is no more confirmation after you select **OK**, but the phone is reset and all data is removed.
3. The phone reboots.

#### Send feedback

You can send feedback on your phone directly from **Settings**.

1. Select **Menu** >  > **System** > **About** > **Send feedback**.
2. Give feedback to questions as instructed, and select **Send**.

## CONNECTIVITY SETTINGS

### Available connectivity settings

Select **Menu** >  > **Connectivity**.

In connectivity settings, you can edit, for example:

- **Bluetooth** settings, including the phone name and visibility
- **Dual SIM** settings, including the preferred SIM or calls and messages
- **Access point** settings, which change the way you connect to the internet
- Settings for **Network type**, which change the preferred network

### Flight mode


When you are flying or in other locations where phone use is restricted, use the flight mode.

To activate flight mode, select **Menu** >  > **Connectivity** and switch **Flight mode** on.

Flight mode closes connections to the cellular network and switches your device's wireless features off. Comply with the instructions and safety requirements given by, for example, an airline, and any applicable laws and regulations.


### Restrict mobile data usage with data roaming

If you want to avoid extra costs, you can change the data roaming settings.


Select **Menu** >  > **Connectivity** and switch **Data roaming** off.

## PERSONALIZATION SETTINGS

### Change your ringtone



1. Select **Menu** >  > **Personalisation** > **Sounds**.
2. Select **Ringtone**.
3. Scroll to a ringtone.
4. Press **Select**.

### Change your message tones

1. Select **Menu** >  > **Personalisation** > **Sounds** > **Message alert**.
2. Scroll to a message tone.
3. Press **Select**.

### Choose a new wallpaper


You can change the background of your home screen with wallpapers.

1. Select **Menu** >  > **Personalisation** > **Lock screen background** > **Wallpapers**.
2. Scroll to a wallpaper and press **Select** to see how it looks on the screen.
3. Press .


You can also select a wallpaper from the photos you have on your phone.

### Choose a new theme color

You can change the color that your phone uses for highlighting items such as menu options.


1. Select **Menu**  > **Personalisation** > **Theme**.
2. Scroll left or right to select a color.
3. Press **Select**.

### Select a shortcut for the left and right function key

1. Select **Menu** >  > **Personalisation** > **Keypad** > **Lock screen shortcuts**.
2. Select **Right key** or **Left key** and scroll to the application or function you want.
3. Press **Select**.

## TIME AND LANGUAGE SETTINGS


### Change the time and date

1. Select **Menu** >  > **Time & language** > **Date and time**.
2. Switch **Auto update** to **Off**.
3. Scroll down, and use the number keys to set the time and date.

## SECURITY SETTINGS


You can edit the available security settings.

### Lock the keypad

To lock the keys automatically, select **Menu** >  > **Security** > **Keyguard** > **Automatic keyguard** and select **On**.

### Use a security code

You can set the phone to ask for a security code. If there is a pre-set code, it is 12345. Change it to protect your privacy and personal data. Note, however, that when you change the code, you need to remember the new code, as HMD Global is not able to open or bypass it. This phone cannot be located or locked remotely if lost.

1. Select **Menu** >  > **Security** > **Keyguard** and switch **Security code** on.
2. Enter the security code and select **OK**.

## 16 Produk- en veiligheidsinligting

### FOR YOUR SAFETY

Read these simple guidelines. Not following them may be dangerous or against local laws and regulations. For further info, read the complete user guide.

#### SKAKEL AF BY INGEPERKTE AREAS



Skakel die toestel af wanneer jy nie die mobiele toestel mag gebruik nie of wanneer dit steuring of gevaar kan veroorsaak, byvoorbeeld in vliegtuie, hospitale of naby mediese toerusting, brandstof, chemikalieë of plekke waar plofstof gebruik word. Gehoorsaam alle instruksies by ingeperkte gebiede.

#### PADVEILIGHEID KOM EERSTE



Gehoorsaam alle plaaslike wette. Jou hande moet altyd beskikbaar wees om die voertuig te beheer wanneer jy bestuur. Padveiligheid is die belangrikste ding om in ag te neem terwyl jy bestuur.

#### STEURING



Alle draadlose toestelle kan steuring ondervind, wat die werking daarvan kan beïnvloed.

### **GEMAGTIGDE DIENS**



Slegs gemagtigde personeel mag hierdie produk installeer of herstel.

### **BATTERYE, HERLAAIERS, EN ANDER BYKOMSTIGHEDE**



Gebruik slegs batterye, herlaaiers en ander bykomstighede wat deur HMD Global Oy vir gebruik met hierdie toestel goedgekeur is. Moenie onversoenbare produkte daaraan koppel nie.

### **HOU JOU TOESTEL DROOG**



As jou toestel waterbestand is, sien sy IP-gradering in die tegniese spesifikasies van die toestel vir meer gedetailleerde leiding.

## BESKERM JOU GEHOOR



Om moontlike gehoorskade te voorkom, moenie vir lang tye teen hoë volume luister nie. Wees versigtig as jy die toestel naby jou oor hou terwyl die luidspreker aan is.

## SAR



Hierdie toestel voldoen aan RF-blootstellingsriglyne wanneer dit in die normale gebruiksposisie teen die oor gebruik word of wanneer dit minstens 1,5 sentimeter (5/8 duim) weg van die liggaam geplaas word. Die spesifieke maksimum SAR waardes staan in die sertifiseringsinligting (SAR) afdeling van hierdie gebruikergids. Vir meer inligting, sien die sertifiseringsinligting (SAR)-afdeling van hierdie gebruikergids of gaan na [www.sar-tick.com](http://www.sar-tick.com).

## NETWORK SERVICES AND COSTS

Using some features and services, or downloading content, including free items, require a network connection. This may cause the transfer of large amounts of data, which may result in data costs. You may also need to subscribe to some features.

You can only use your device on the GSM 900/1800 and WCDMA1 and 8 networks. You need a subscription with a service provider.

## EMERGENCY CALLS



**Belangrik:** Verbindings in alle toestande kan nie gewaarborg word nie. Moet nooit net op 'n draadlose foon staat maak vir noodsaaklike kommunikasie soos mediese noodgevalle nie.

Before making the call:

- Switch the phone on.
  - If the phone screen and keys are locked, unlock them.
  - Move to a place with adequate signal strength.
1. Press the end key repeatedly, until the home screen is shown.
  2. Type in the official emergency number for your present location. Emergency call numbers vary by location.
  3. Press the call key.
  4. Give the necessary info as accurately as possible. Do not end the call until given permission to do so.

You may also need to do the following:

- Put a SIM card in the phone.
- If your phone asks for a PIN code, type in the official emergency number for your present location, and press the call key.
- Switch the call restrictions off in your phone, such as call barring, fixed dialling, or closed user group.

## SIEN OM NA JOU TOESTEL

Hanteer jou toestel, battery, herlaai en bykomstighede versigtig. Die volgende voorstelle help jou toestel operasioneel help hou.

- Hou die toestel droog. Neerslag, humiditeit, en alle soorte vloeistowwe of vog kan minerale bevat wat elektroniese stroombane kan korrodeer.
- Moenie die toestel op stowwerige of vuil plekke gebruik of berg nie.
- Moenie die toestel teen hoë temperature berg nie. Hoë temperature kan dalk die toestel of battery beskadig.
- Moenie die toestel teen koue temperature berg nie. Wanneer die toestel weer na sy normale temperatuur terugkeer, kan vog binne-in die toestel vorm en dit beskadig.
- Moenie die toestel oopmaak behalwe soos in die gebruikersgids aangedui nie.
- Ongemagtigde wysiging kan dalk die toestel beskadig en kan dalk regulasies vir radio-toestelle skend.
- Moenie die toestel of die battery laat val, stamp of skud nie. Rowwe hantering kan dit laat breek.
- Gebruik slegs 'n sagte, skoon, droë lap om die oppervlak van die toestel skoon te maak.
- Moenie die toestel verf nie. Verf kan verhoed dat dit behoorlike werk.
- Hou die toestel weg van magnete of magnetiese velde.

- Om jou belangrike data veilig te hou, stoor dit op ten minste twee plekke, bv. jou toestel, geheuekaart, of rekenaar, of skryf belangrike inligting neer.

Wanneer jy die toestel lank gebruik, kan dit dalk warm voel. In die meeste gevalle is dit normaal. Om te voorkom dat die toestel te warm word, kan die toestel dalk outomaties stadiger raak, programme toemaak, ophou herlaai, en (indien nodig) vanself afskakel. As die toestel nie behoorlik werk nie, neem dit na die naaste gemagtigde diensfasiliteit.

## HERWIN



Bring altyd gebruikte elektroniese produkte, batterye en verpakkingsmateriaal na toegewyde versamelpunte. Só help jy om onbeheerde afvalverwydering te voorkom en om materiale te help herwin. Elektriese en elektroniese produkte bevat baie waardevolle materiale, insluitende metale (soos koper, aluminium, staal en magnesium) en edelmetale (soos goud, silwer en palladium). Alle materiale in die toestel kan as materiaal en energie herwin word.

## DEURGEHAALDE WIELDROM-SIMBOOL

### Deurgehaalde wieldrom-simbool



Die deurgehaalde wieldrom-simbool op jou produk, battery, literatuur of verpakking herinner jou daaraan dat alle elektriese en elektroniese produkte en batterye na afloop van hul leeftyd geskei moet word. Onthou om eers persoonlike data van die toestel af te verwyder. Moenie hierdie produkte as ongesorteerde munisipale afval weggooi nie: neem dit vir herwinning. Vir inligting oor jou naaste herwinningspunt, maak seker met jou plaaslike afvalowerheid, of lees oor HMD se terugneemprogram en die bekikbaarheid daarvan in jou land by [www.hmd.com/support/topics/recycle](http://www.hmd.com/support/topics/recycle).

## **BATTERY AND CHARGER INFORMATION**

### **Battery and charger**

Use your device only with an original BL-4UL rechargeable battery.

Charge your device with AC-18 charger. Charger plug type may vary.

HMD Global may make additional battery or charger models available for this device.

Battery type: BL-4UL

### **Battery and charger safety info**

To unplug a charger or an accessory, hold and pull the plug, not the cord.

When your charger is not in use, unplug it. If left unused, a fully charged battery will lose its charge over time.

Always keep the battery between 59°F and 77°F (15°C and 25°C) for optimal performance. Extreme temperatures reduce the capacity and lifetime of the battery. A device with a hot or cold battery may not work temporarily. Accidental short-circuiting can happen when a metallic object touches the metal strips on the battery. This may damage the battery or the other object.

Do not dispose of batteries in a fire as they may explode. Obey local regulations. Recycle when possible. Do not dispose as household waste.

Do not dismantle, cut, crush, bend, puncture, or otherwise damage the battery in any way. If a battery leaks, do not let liquid touch skin or eyes. If this happens, immediately flush the affected areas with water, or seek medical help. Do not modify, attempt to insert foreign objects into the battery, or immerse or expose it to water or other liquids. Batteries may explode if damaged.

Use the battery and charger for their intended purposes only. Improper use, or use of unapproved or incompatible batteries or chargers may present a risk of fire, explosion, or other hazard, and may invalidate any approval or warranty. If you believe the battery or charger is damaged, take it to a service centre or your phone dealer before continuing to use it. Never use a damaged battery or charger. Only use the charger indoors. Do not charge your device during a lightning storm.

## **KLEIN KINDERS**

Jou toestel en bykomstighede is nie speelgoed nie. Dit kan dalk klein dele bevat. Hou dit buite die bereik van klein kinders.

## MEDIESE TOESTELLE

Om radio-oordragtoerusting te gebruik (insluitend draadlose fone) kan steuring veroorsaak vir onvoldoende afskermdede mediese toestelle se werking. Raadpleeg 'n dokter of die mediese toestel se vervaardiger om te bepaal of dit voldoende afgeskerm is teen eksterne radio-energie.

## GEÏMPLANTEERDE MEDIESE TOESTELLE

Om moontlike obstruksie te vermy, stel vervaardigers van ingeplante mediese toestelle (soos pasaangeër, insulienpompe en neurostimulators), dat daar 'n minimum van 15.3 sentimetres (6 duim) tussen die draadlose toestel en die mediese toestel moet wees. Mense met sulke toestelle behoort:

- Hou die draadlose toestel altyd meer as 15,3 sentimeter (6 duim) van die mediese toestel af.
- Moenie die draadlose toestel in 'n borssak dra nie.
- Hou die draadlose toestel teen die oor oorkant die mediese toestel.
- Skakel die draadlose toestel af as daar enige rede is om te vermoed dat steuring plaasvind.
- Volg die vervaardiger se aanwysings vir die ingeplante mediese toestel.

Vir enige vrae daaroor om jou draadlose toestel saam met 'n ingeplante mediese toestel te gebruik, raadpleeg jou gesondheidsorgverskaffer.

## GEHOOR



**Waarskuwing:** Wanneer jy die koptelefoon gebruik, kan jou vermoë om klanke van buite te hoor beïnvloed word. Moenie oorfone gebruik as dit jou veiligheid in gevaar kan stel nie.

Sekere draadlose toestelle kan dalk steuring vir sekere gehoorapparate veroorsaak.

## BESKERM JOU TOESTEL TEEN SKADELIKE INHOUD

Jou toestel kan deur virusse en ander skadelike inhoud beskadig word. Neem die volgende voorsorgmaatreëls:

- Wees versigtig wanneer jy boodskappe oopmaak. Dit kan dalk skadelike sagteware bevat of andersins skadelik vir jou toestel of rekenaar wees.
- Wees versigtig wanneer jy konnektiwiteitsversoeke aanvaar, op die internet blaai of inhoud aflaai. Moenie Bluetooth-verbindings aanvaar van bronne wat jy nie vertrou nie.
- Installeer en gebruik slegs dienste en sagteware van bronne wat jy vertrou en wat voldoende sekuriteit en beskerming

bied.

- Installeer antivirus- en ander sekuriteitsagteware op jou toestel en enige gekoppelde rekenaar. Gebruik net een antivirusprogram op 'n slag. As jy meer as een gebruik, kan dit die werking van die toestel en/of rekenaar affekteer.
- As jy toegang kry tot voorafgeïnstalleerde boekmerke en skakels na derdeparty-webwerwe, neem die toepaslike voorsorgmaatreëls. HMD Global onderskryf nie sulke werwe nie en aanvaar geen aanspreeklikheid daarvoor nie.

## VOERTUIE

Radioseine kan onbehoorlik geïnstalleerde of onvoldoende afgeskermdde elektroniese stelsels in voertuie affekteer. Kontak jou voertuig of sy toerusting se vervaardiger vir meer inligting. Slegs gemagtigde personeel behoort hierdie toestel in 'n voertuig te installeer. As dit verkeerd geïnstalleer word, kan dit gevaarlik wees en jou waarborg ongeldig maak. Kontroleer gereeld dat alle draadlose toerusting in jou voertuig behoorlik geïnstalleer is en goed werk. Moenie vlbare of plofbare materiale in dieselfde kompartement as die toestel, sy onderdele of bykomstighede berg of dra nie. Moenie jou toestel of bykomstighede op die plek waar die lugsak is, sit nie.

## PLEKKE MET POTENSIAAL VIR ONTPLOFFING

Skakel jou toestel af op plekke met potensiaal vir ontploffing, bv. naby petrolpompe. Vonke kan dalk 'n ontploffing of brand veroorsaak, wat kan lei tot beserings of die dood. Kyk uit vir inperkings op plekke met brandstof, chemiese aanlegte, of waar plofstof gebruik word. Plekke waar daar 'n potensiaal is vir ontploffings, is nie altyd duidelik gemerk nie. Dit is gewoonlik plekke waar jy aangeraai word om jou enjin af te skakel, onder die dek op bote, chemieseoordrag- of -berging-fasiliteite, en waar die lug chemikalieë of deeltjies bevat. Vind by vervaardigers van voertuie wat vloeibare petroleumgas gebruik (bv. propaan of butaan) uit of hierdie toestel veilig daarmee saam gebruik kan word.

## SERTIFISERINGS INFORMASIE

### **Hierdie mobiele toestel voldoen aan riglyne vir blootstelling aan radiogolwe.**

Jou mobiele toestel is 'n radiosender en -ontvanger. Dit is só ontwerp dat dit nie die limiete vir blootstelling aan radiogolwe (radiofrekwensie elektromagnetiese velde) sal oorskry wat deur internasionale riglyne van die onafhanklike wetenskaplike organisasie ICNIRP aanbeveel word nie. Hierdie riglyne bevat aansienlike veiligheidsmarges wat probeer verseker dat alle mense beskerm word ongeag hul ouderdom en gesondheid. Die blootstellingsriglyne is gegrond op die spesifieke absorpsiekoers (SAR), dit is 'n uitdrukking van hoeveel radiofrekwensie (RF) krag na die kop of liggaam oorgedra word wanneer die toestel seine oordra. ICNIRP se SAR-limiet vir mobiele toestelle is 2,0 W/kg gemiddeld oor 10 gram weefsel.

SAR-toetse word uitgevoer terwyl die toestel in posisies gehou word waarin dit gewoonlik gebruik sal word, terwyl dit seine in al sy frekwensiebande teen sy hoogste gesertifiseerde kragvlak oordra.

Hierdie toestel voldoen aan RF-blootstellingsriglyne wanneer dit teen die kop gebruik word of wanneer dit ten minste 1,5 cm (5/8 duim) van die liggaam af geposisioneer word. As jy die toestel in 'n tassie, gordelknip of ander soort houer wat aan jou lyf gedra word, sit, moet dit nie metaal bevat nie en moet dit ten minste die bogenoemde afstand van die liggaam af gehou word.

Om data of boodskappe te stuur, word 'n goeie netwerkverbinding vereis. Dinge kan dalk nie dadelik gestuur word totdat sodanige verbinding beskikbaar is nie. Volg die skeidingsafstand-aanwysings totdat die toestel klaar gestuur het.

Tydens algemene gebruik is die SAR-waardes gewoonlik ver onder die waardes wat hier bo genoem word. Dit is omdat die gebruikskrag van jou selfoon ter wille van stelseldoeltreffendheid en om steuring op die netwerk te minimaliseer, outomaties verminder word wanneer volle krag nie vir die oproep nodig is nie. Hoe laer die kraguitset, hoe laer is die SAR-waarde.

Toestelmodelle kan dalk verskillende weergawes hê en kan dalk meer as een waarde hê. Komponent- en ontwerpveranderinge kan dalk mettertyd voorkom, en sekere veranderings kan dalk 'n uitwerking op die SAR-waardes hê.

Vir meer inligting, gaan na [www.sar-tick.com](http://www.sar-tick.com). Let op dat mobiele toestelle dalk data kan oordra selfs al maak jy nie 'n stemoproep nie.

Volgens die Wêreldgesondheidsorganisasie (WGO) dui huidige wetenskaplike inligting nie daarop dat spesiale voorsorgmaatreëls tydens die gebruik van mobiele toestelle geneem hoef word nie. Indien jy graag jou blootstelling wil verminder, beveel hulle aan dat jy jou gebruik beperk, of 'n handevry-stel gebruik om die toestel ver van jou lyf en kop te hou. Vir meer inligting oor, en verduidelikings van en besprekings oor RF-blootstelling, besoek die WGO se webwerf by [www.who.int/health-topics/electromagnetic-fields#tab=tab\\_1](http://www.who.int/health-topics/electromagnetic-fields#tab=tab_1).

Verwys asseblief na [www.hmd.com/sar](http://www.hmd.com/sar) vir die toestel se maksimum SAR-waarde.

## COPYRIGHTS AND OTHER NOTICES

### Declaration of Conformity

Hereby, HMD Global Oy (Ltd.) declares that this product is in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EC. A copy of the Declaration of Conformity can be found at [www.hmd.com/declaration-of-conformity](http://www.hmd.com/declaration-of-conformity).

The availability of products, features, apps and services may vary by region. For more info, contact your dealer or your service provider.

This device may contain commodities, technology or software subject to export laws and regulations from the US and other countries. Diversion contrary to law is prohibited.

The contents of this document are provided "as is". Except as required by applicable law, no warranties of any kind, either express or implied, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose, are made in relation to the accuracy, reliability or contents of this document. HMD Global reserves the right to revise this document or withdraw it at any time without prior notice.

To the maximum extent permitted by applicable law, under no circumstances shall HMD Global or any of its licensors be responsible for any loss of data or income or any special, incidental, consequential or indirect damages howsoever caused.

Reproduction, transfer or distribution of part or all of the contents in this document in any form without the prior written permission of HMD Global is prohibited. HMD Global operates a policy of continuous development. HMD Global reserves the right to make changes and improvements to any of the products described in this document without prior notice.

HMD Global does not make any representations, provide a warranty, or take any responsibility for the functionality, content, or end-user support of third-party apps provided with your device. By using an app, you acknowledge that the app is provided as is.

Downloading of maps, games, music and videos and uploading of images and videos may involve transferring large amounts of data. Your service provider may charge for the data transmission. The availability of particular products, services and features may vary by region. Please check with your local dealer for further details and availability of language options.

Certain features, functionality and product specifications may be network dependent and subject to additional terms, conditions, and charges. All are subject to change without notice.

Manufacturer and/or importer in EU: HMD Global Oy, Bertel Jungin aukio 9, 02600 Espoo, Finland.

HMD Global Privacy Policy, available at [www.hmd.com/privacy](http://www.hmd.com/privacy), applies to your use of the device.

© 2017 HMD Global. All rights reserved. HMD Global Oy is the exclusive licensee of the Nokia brand for phones & tablets. Nokia is a registered trademark of Nokia Corporation.

The Bluetooth word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by HMD Global is under license.

This product includes open source software. For applicable copyright and other notices, permissions, and acknowledgements, select \*#6774# on the home screen.

## **OOR DIGITALE REGTEBESTUUR**

Wanneer jy hierdie toestel gebruik, gehoorsaam alle wette en plaaslike gebruike, privaatheid- en wettige regte van ander mense, insluitend kopiereg. Kopieregbeskerming kan dalk verhoed dat jy foto's, musiek en ander inhoud kopieer, wysig of oordra.