

NOKIA

Nokia 1

사용자 가이드

차례

1 사용자 가이드 정보	5
2 Get started	6
Keep your phone up to date	6
Keys and parts	6
Insert or remove SIM and memory card	7
Charge your phone	8
Switch on and set up your phone	8
Dual SIM settings	9
Lock or unlock your phone	10
Use the touch screen	10
3 기본 사항	14
Personalize your phone	14
Open and close an app	14
Notifications	14
Control volume	15
Screenshots	16
Battery life	16
Save on data roaming costs	17
Write text	17
Date and time	19
Clock and alarm	20
Calculator	21
Accessibility	21
4 Connect with your friends and family	22
Calls	22
Contacts	22
Send and receive messages	23
Mail	24
Get social	25

5 Camera	26
Camera basics	26
Your photos and videos	26
6 Internet and connections	28
Activate Wi-Fi	28
Use a mobile data connection	28
Browse the web	29
Bluetooth®	30
VPN	32
7 Music and videos	33
Music	33
Videos	33
FM Radio	34
8 Organize your day	36
Calendar	36
9 Maps	37
Find places and get directions	37
Use location services	37
10 Apps and services	39
Google Play	39
11 Software updates and backups	41
Update your phone software	41
Back up your data	41
Restore original settings and remove private content from your phone	41
Storage	42

12 Protect your phone	44
Protect your phone with a screen lock	44
Change your SIM PIN code	44
Access codes	44
13 제품 및 안전 정보	47
안전을 위해	47
Network services and costs	49
Emergency calls	50
기기 관리	50
재활용	51
WEEE 마크	52
Battery and charger information	52
어린이	53
의료 기기	53
삽입형 의료 기기	54
청력	54
유해한 콘텐츠로부터 기기 보호	54
차량	54
폭발할 수 있는 환경	55
인증 정보 (SAR)	55
디지털 권한 관리 소개	56
Copyrights and notices	56

1 사용자 가이드 정보



중요: 기기를 사용하기 전에 사용자 가이드 인쇄본의 '안전을 위해'와 '제품 안전' 정보 또는 www.nokia.com/support 에서 기기 및 배터리의 안전한 사용에 대한 중요한 정보를 확인하시기 바랍니다. 새 기기를 사용하는 방법은 사용자 가이드 인쇄본을 참조하십시오.

2 Get started

KEEP YOUR PHONE UP TO DATE


Your phone software

Keep your phone up to date and accept available software updates to get new and enhanced features for your phone. Updating the software may also improve your phone's performance.

KEYS AND PARTS

Explore your new phone.

Your phone

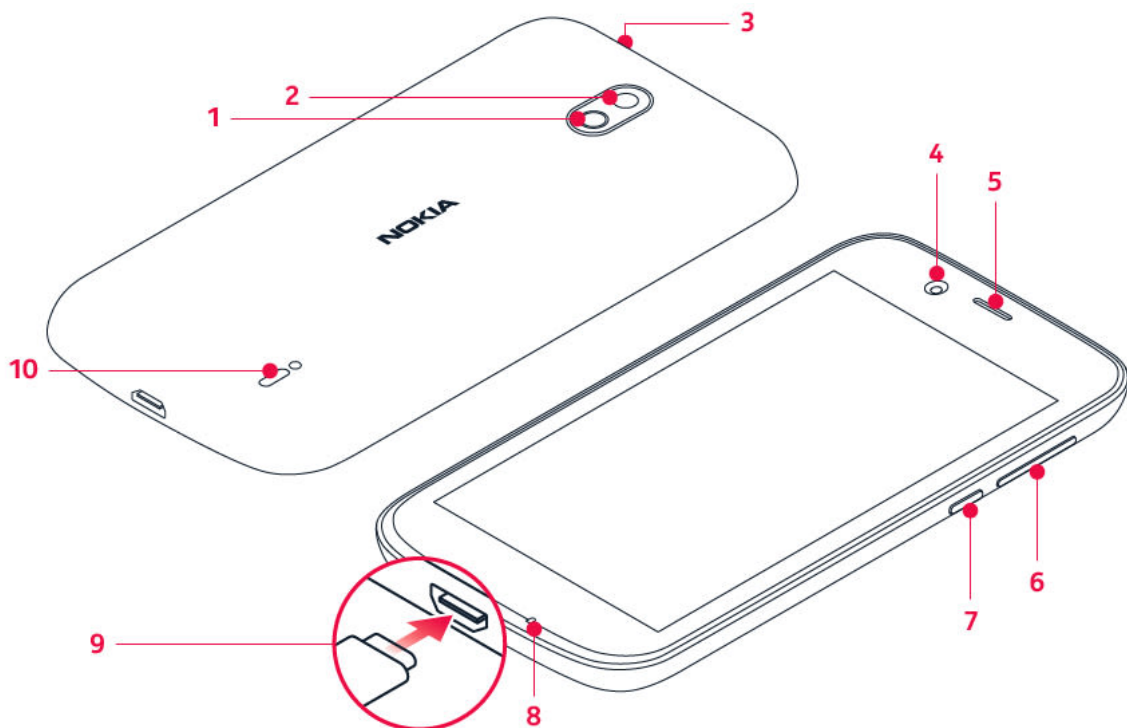

This user guide applies to the following models: TA-1047, TA-1060, TA-1056, TA-1079, and TA-1066.

- | | |
|----------------------|-------------------|
| 1. Flash | 5. Earpiece |
| 2. Camera | 6. Volume keys |
| 3. Headset connector | 7. Power/Lock key |
| 4. Front camera | 8. Microphone |

- 9. USB connector
- 10. Loudspeaker Some of the accessories mentioned in this user guide, such as

charger, headset or data cable, may be sold separately.


Parts and connectors, magnetism

Do not connect to products that create an output signal, as this may damage the device. Do not connect any voltage source to the audio connector. If you connect an external device or headset, other than those approved for use with this device, to the audio connector, pay special attention to volume levels.

Parts of the device are magnetic. Metallic materials may be attracted to the device. Do not place credit cards or other magnetic stripe cards near the device for extended periods of time, since the cards may be damaged.

INSERT OR REMOVE SIM AND MEMORY CARD

Insert SIM and memory card

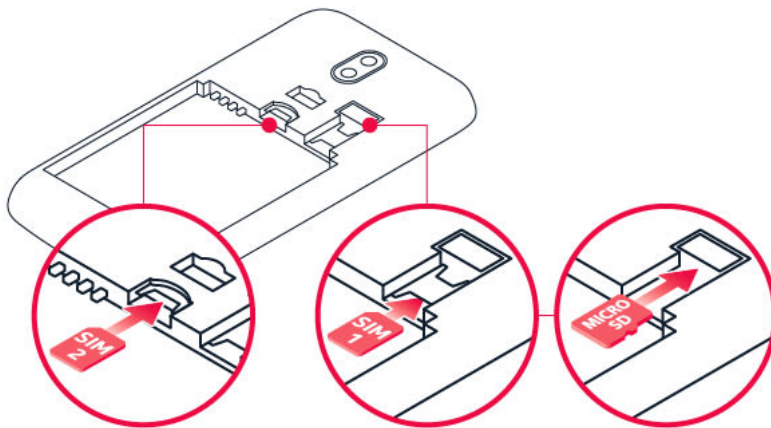

1. Open the back cover: insert your fingernails in the seam between the cover and display, and bend the cover open.
2. If the battery is in the phone, lift it out.
3. Slide the nano-SIM in the SIM slot face down. If you have a dual SIM phone, slide the second SIM in the SIM2 slot.¹
4. Slide the memory card in the memory card slot face down.

Use only compatible memory cards approved for use with this device. Incompatible cards may damage the card and the device and corrupt data stored on the card.



Note: On dual SIM capable devices, both SIM1 and SIM2 slots support 4G networks. However, if your SIM1 and SIM2 are both LTE SIM cards, the primary SIM supports 4G/3G/2G networks, while the secondary SIM can only support 2G. For more information on your SIM cards, contact your service provider.

Remove SIM and memory card

Remove the back cover, lift the battery out, and slide the cards out of their slots.



Note: Switch the device off and disconnect the charger and any other device before removing any covers. Avoid touching electronic components while changing any covers. Always store and use the device with any covers attached. ¹

Use only original nano-SIM cards. Use of incompatible SIM cards may damage the card or the device, and may corrupt data stored on the card.

CHARGE YOUR PHONE

Charge the battery



1. Plug a compatible charger into a wall outlet.
2. Connect the cable to your phone.

Your phone supports the USB micro-B cable. You can also charge your phone from a computer with a USB cable, but it may take a longer time.

If the battery is completely discharged, it may take several minutes before the charging indicator is displayed.

SWITCH ON AND SET UP YOUR PHONE

When you switch your phone on for the first time, your phone guides you to set up your network connections and phone settings.

Switch on your phone

1. To switch on your phone, press and hold the power key until the phone vibrates.
2. When the phone is switched on, choose your language and region.
3. Follow the instructions shown on your phone.

Transfer data from your previous phone

You can transfer data from an old phone to your new phone using your Google account.

To back up data on your old phone to your Google account, refer to your old phone's user guide.

1. Tap **Settings** > **Users & accounts** > **Add account** > **Google**.
2. Select which data you want to restore on your new phone. The sync starts automatically once your phone is connected to the internet.

Restore app settings from your previous Android™ phone

If your previous phone was an Android, and back up to Google account is enabled on it, you can restore your app settings and Wi-Fi passwords.

1. Tap **Settings** > **System** > **Backup**.
2. Switch **Backup to Google Drive** to **On**.

DUAL SIM SETTINGS

If you have a dual SIM variant, you can have 2 SIMs in your phone, for example, one for your work and one for your personal use.



Note: On dual SIM capable devices, both SIM1 and SIM2 slots support 4G networks. However, if your SIM1 and SIM2 are both LTE SIM cards, the primary SIM supports 4G/3G/2G networks, while the secondary SIM can only support 2G. For more information on your SIM cards, contact your service provider.

Choose which SIM to use

When, for example, making a call, you can choose which SIM to use by tapping the corresponding SIM 1 or SIM 2 button after you dial the number.

Your phone shows the network status for both SIMs separately. Both SIM cards are available at the same time when the device is not being used, but while one SIM card is active, when, for example, making a call, the other may be unavailable.

Manage your SIMs

Don't want work to interfere with your free time? Or do you have a cheaper data connection on one SIM? You can decide which SIM you want to use.

Tap **Settings** > **Network & Internet** > **SIM Cards**.

Rename a SIM card

Tap the SIM you want to rename, and type in the name you want.

Select which SIM to use for calls or data connection

Under **Preferred SIM for**, tap the setting you want to change and select the SIM.

LOCK OR UNLOCK YOUR PHONE

Lock your phone

If you want to avoid accidentally making a call when your phone is in your pocket or bag, you can lock your keys and screen.

To lock your keys and screen, press the power key.

Unlock the keys and screen

Press the power key, and swipe up across the screen. If asked, provide additional credentials.

USE THE TOUCH SCREEN


Important: Avoid scratching the touch screen. Never use an actual pen, pencil, or other sharp object on the touch screen.

Tap and hold to drag an item




Place your finger on the item for a couple of seconds, and slide your finger across the screen.

Swipe

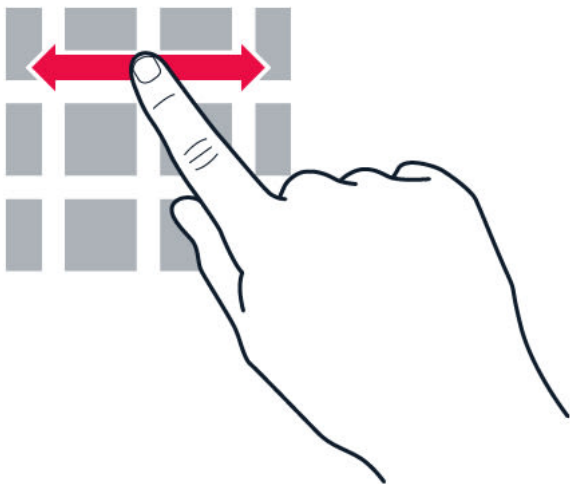


Place your finger on the screen, and slide your finger in the direction you want.

Scroll through a long list or menu

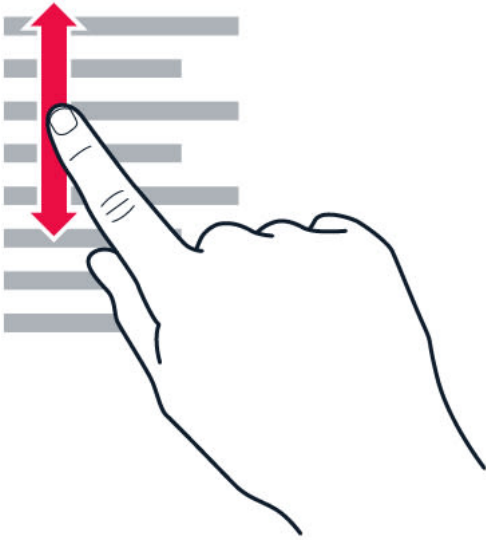

Slide your finger quickly in a flicking motion up or down the screen, and lift your finger. To stop the scrolling, tap the screen.

Zoom in or out

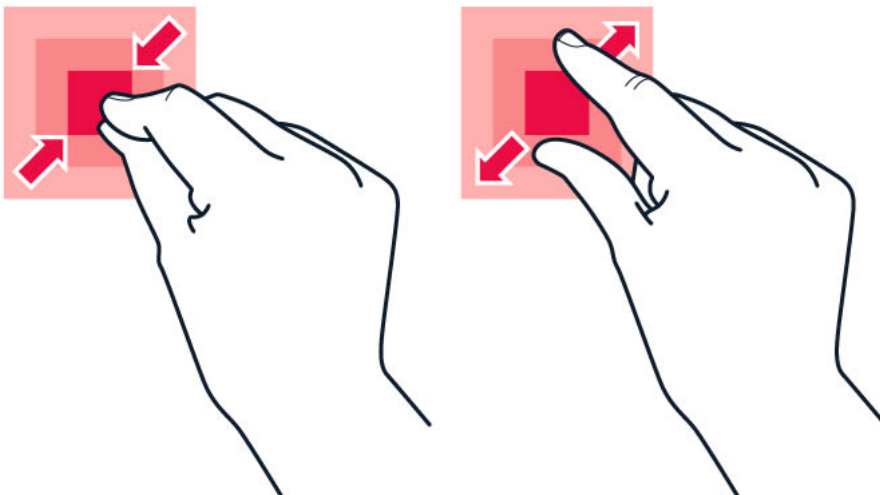


Place 2 fingers on an item, such as a map, photo, or web page, and slide your fingers apart or together.


Lock the screen orientation


The screen rotates automatically when you turn the phone 90 degrees.


To lock the screen in portrait mode, swipe down from the top of the screen, and tap **Auto-rotate** to switch to **Portrait**.

Use the navigation keys

To see which apps you have open, tap the overview key .

To switch to another app, tap the app you want. To close an app, tap the  icon next to it.

To go back to the previous screen you were in, tap the back key . Your phone remembers all the apps and websites you've visited since the last time your screen was locked.

To go to the home screen, tap the home key . The app you were in stays open in the background.

3 기본 사항

PERSONALIZE YOUR PHONE

Learn how to personalize the home screen and how to change ringtones.

Change your wallpaper

Tap **Settings** > **Display** > **Wallpaper**.

Change your phone ringtone


Tap **Settings** > **Sound** > **Phone ringtone (SIM1)** or **Phone ringtone (SIM2)** and select the ringtone.

Change your message notification tone

Tap **Settings** > **Sound** > **Advanced** > **Default notification sound**.

OPEN AND CLOSE AN APP

Open an app

On the home screen, tap an app icon to open it. To open one of the apps running in the background, tap , and select the app.

Close an app

Tap , and tap  on the app you want to close.

Find your apps

On the home screen, swipe up from the bottom of the screen to see all your apps.

NOTIFICATIONS

Stay in touch with what's happening on your phone with notifications.


Use the notification panel

When you receive new notifications, such as messages or missed calls, indicator icons appear on the status bar at the top of the screen. To see more information about the notifications, drag the status bar down. To close the view, swipe up on the screen.


To open the notification panel, drag the status bar down. To close the notification panel, swipe up on the screen.

To change the notification settings of an app, tap **Settings** > **Apps & notifications** > **Notifications** > **App notifications** and tap the app name to open the app settings.

Use the quick setting icons

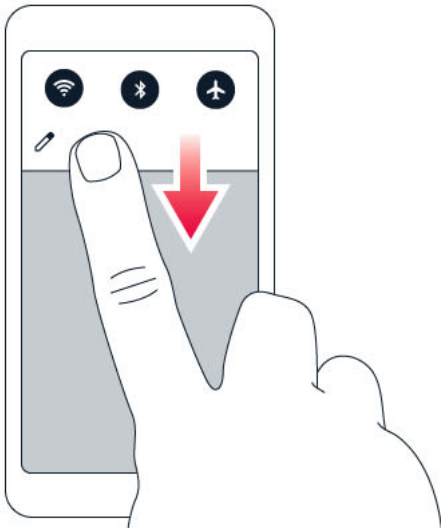

To activate features, tap the quick settings icons on the notification panel. To see more icons, drag the menu down.

To rearrange the icons, tap , tap and hold an icon, and then drag it to another location.

CONTROL VOLUME

Change the volume

If you have trouble hearing your phone ringing in noisy environments, or calls are too loud, you can change the volume to your liking by using the volume keys on the side of your phone.

Do not connect to products that create an output signal, as this may damage the device. Do not connect any voltage source to the audio connector. If you connect an external device or headset, other than those approved for use with this device, to the audio connector, pay special attention to volume levels.

Change the volume for media and apps

Press a volume key on the side of your phone to see the volume status bar, tap \vee , and drag the sliders on the volume bars left or right.

SCREENSHOTS

Take a screenshot

To take a screenshot, open the notification panel, and drag the status bar downwards. Tap **Screenshot**. You can view captured images in **Photos**.

It is not possible to capture a screenshot while using some apps and features.

BATTERY LIFE

Extend battery life

To save power:

1. Always charge the battery fully.
2. Mute unnecessary sounds, such as touch sounds. Tap **Settings** > **Sound** > **Advanced**, and under **Other sounds and vibrations**, select which sounds to keep.
3. Use a wired headset, rather than the loudspeaker.
4. Set the phone screen to switch off after a short time. Tap **Settings** > **Display** > **Sleep** and select the time.
5. Tap **Settings** > **Display** > **Brightness level**. Make sure that **Adaptive brightness** is off. To adjust the brightness, drag the brightness level slider.
6. Stop apps from running in the background: tap \square , and close the apps you don't need.
7. Switch on the power saver: tap **Settings** > **Battery** > **Battery saver**, and switch to **On**.
8. Switch location services off when you don't need them: tap **Settings** > **Security & location** and switch **Location** to **Off**.
9. Use network connections selectively: Switch Bluetooth on only when needed. Use a Wi-Fi connection to connect to the internet, rather than a mobile data connection. Stop your phone scanning for available wireless networks. Tap **Settings** > **Network & Internet** > **Wi-Fi**, and switch to **Off**. If you're listening to music or otherwise using your phone, but don't want to make or receive calls, switch the airplane mode on. Tap **Settings** > **Network & Internet** > **Airplane mode**. Airplane mode closes connections to the mobile network and switches your device's wireless features off.

SAVE ON DATA ROAMING COSTS

You can cut data roaming costs and save on your phone bills by changing mobile data settings. To use the optimal connection method, change the Wi-Fi and mobile networks settings.

Data roaming means using your phone to receive data over networks that your network service provider doesn't own or operate. Connecting to the internet when roaming, especially when abroad, can increase data costs substantially.

Using a Wi-Fi connection is generally faster and less expensive than using a mobile data connection. If both Wi-Fi and mobile data connections are available, your phone uses the Wi-Fi connection.

Connect to a Wi-Fi network

1. Tap **Settings** > **Network & Internet** > **Wi-Fi**.
2. Make sure Wi-Fi networking is switched to **On**.
3. Select the connection you want to use.

Close the mobile data connection

Swipe down from the top of the screen, tap  **Mobile data** and switch **Mobile data** off.



Tip: To follow your data usage, tap **Settings** > **Network & Internet** > **Data usage**.

Stop data roaming

Tap **Settings** > **Network & Internet** > **Mobile network**, and switch **Roaming** off.

WRITE TEXT

Learn how to write text quickly and efficiently using your phone's keyboard.

Use the on-screen keyboard

Writing with the on-screen keyboard is easy. You can use the keyboard when holding your phone in portrait or landscape mode. The keyboard layout can vary in different apps and languages.

To open the on-screen keyboard, tap a text box.

Switch between upper and lower case characters

Tap the shift key. To switch caps lock mode on, double-tap the key. To return to normal mode, tap the shift key again.

Type in a number or special character

Tap the numbers and symbols key. Some special character keys bring up more symbols. To see more symbols, tap and hold a symbol or special character.

Insert emojis

Tap the emoji key, and select the emoji.

Copy or paste text

Tap and hold a word, drag the markers before and after the word to highlight the section you want to copy, and tap **COPY**. To paste the text, tap where you want to paste the text and select **PASTE**.

Add an accent to a character

Tap and hold the character, and tap the accent or the accented character, if supported by your keyboard.

Delete a character

Tap the backspace key.

Move the cursor

To edit a word you just wrote, tap the word, and drag the cursor to the place you want.

Use keyboard word suggestions

Your phone suggests words as you write, to help you write quickly and more accurately. Word suggestions may not be available in all languages.

When you start writing a word, your phone suggests possible words. When the word you want is shown in the suggestion bar, select the word. To see more suggestions, tap and hold the suggestion.



Tip: If the suggested word is marked in bold, your phone automatically uses it to replace the word you wrote. If the word is wrong, tap and hold it to see a few other suggestions. If you do not want the keyboard to suggest words while typing, turn off the text corrections. Tap **Settings** > **System** > **Languages & input** > **Virtual keyboard**. Select the keyboard you normally use. Tap **Text correction** and switch off the text correction methods you do not want to use.

Correct a word

If you notice that you have misspelled a word, tap it to see suggestions for correcting the word.

Switch spell checker off

Tap **Settings** > **System** > **Languages & input** > **Advanced** > **Spell checker**, and switch **Spell checker** to **Off**.

DATE AND TIME

Keep track of time – learn how to use your phone as a clock, as well as an alarm clock, and how to keep your appointments, tasks, and schedules up to date.

Set date and time

Tap **Settings** > **System** > **Date & time**.

Update the time and date automatically

You can set your phone to update the time, date, and time zone automatically. Automatic update is a network service and may not be available depending on your region or network service provider.

1. Tap **Settings** > **System** > **Date & time**.
2. Set **Automatic date & time** to **Use network-provided time** or **Use GPS-provided time**.
3. Switch **Automatic time zone** on.

Change the clock to the 24-hour format

Tap **Settings** > **System** > **Date & time**, and switch **Use 24-hour format** on.

CLOCK AND ALARM

Your clock is not just for alarms – learn what else you can do.

Use the countdown timer

No more overcooking – use the countdown timer to measure your cooking times.

1. Tap **Clock** > ⌘.
2. Set the duration of the timer.

Use the stopwatch

Use the stopwatch to see how you improve on the running track.

Tap **Clock** > ⌚.

Set an alarm

You can use your phone as an alarm clock.

1. Tap **Clock** > ⌚.
2. To add an alarm, tap **+**.
3. To modify an alarm, tap it. To set the alarm to repeat on specific dates, check **Repeat** and highlight the days of the week.

Snooze an alarm

If you don't want to get up just yet, when the alarm sounds, swipe the alarm left. To adjust the snooze length, tap **Clock** > ⋮ > **Settings** > **Snooze length** and select the length to your liking.

Switch an alarm off

When the alarm sounds, swipe the alarm right.

Delete an alarm

Tap **Clock** > ⌚. Select the alarm, and tap **Delete**.

CALCULATOR

Forget your pocket calculator – there's a calculator in your phone.

Use the calculator

Tap **Calculator**.

To use the advanced calculator, swipe the bar from the right edge of the screen to the left.

ACCESSIBILITY

You can change various settings to make using your phone easier.

Increase or decrease the font size

Do you want to have larger fonts on your phone?

1. Tap **Settings** > **Accessibility**.
2. Tap **Font size**. To increase or decrease the font size, drag the font size level slider.

Increase or decrease the display size





Do you want to make the items on your screen smaller or larger?

1. Tap **Settings** > **Accessibility**.
2. Tap **Display size** and to adjust the display size, drag the display size level slider.

4 Connect with your friends and family

CALLS

Make a call

1. Tap .
2. Tap  and type in a number, or tap  and select a contact you want to call.
3. Tap . If you have a second SIM card inserted, tap the corresponding icon to make a call from that SIM.

Answer a call

When the phone rings, swipe up to answer.


Reject a call

To reject a call, swipe down.


CONTACTS

Save and organize your friends' and family members' phone numbers.


Save a contact from call history

1. In **Phone**, tap  to see call history.
2. Tap the number you want to save.
3. Select if you want to **Create new contact** or **Add to a contact**.
4. Type in the contact information, and tap **Save**.


Add a contact

1. Tap **Contacts** > .
2. Fill out the information.
3. Tap **Save**.


Edit a contact

1. Tap **Contacts** and tap the contact you want to edit.
2. Tap .
3. Edit the information.
4. Tap **Save**.

Search for a contact

1. Tap **Contacts**.
2. Tap .




Import or export contacts

1. Tap **Contacts**.
2. Tap .
3. Tap **Settings** > **Import** or **Export**.


SEND AND RECEIVE MESSAGES

Keep in touch with your friends and family members through text messages.

Send a message

1. Tap **Messages**.
2. Tap .
3. To add a recipient, type their number in a recipient box. To add a contact, start typing their name and tap the contact.
4. After choosing all the recipients, tap .
5. Write your message in the text box.
6. Tap .



Tip: If you want to send a photo in a message, tap **Photos**, tap the photo you want to share, and tap . Select **Messages**.

Read a message

1. Tap **Messages**.
2. Tap the message you want to read. You can also read a message from the notification panel. Slide down from the top of the screen and tap the message.

Reply to a message

1. Tap **Messages**.
2. Tap the message you want to reply to.
3. Write your reply in the text box below the message and tap ➤.

MAIL

You can use your phone to read and reply to mail when you're on the go.

Add a mail account

When you use the Gmail app for the first time, you are asked to set up your email account.

1. Tap **Gmail**.
2. You can select the address connected with your Google account or tap **Add an email address**.
3. After adding all the accounts, tap **TAKE ME TO GMAIL**.

Delete a mail account

1. Tap **Settings** > **Users & accounts**.
2. Tap the account you want to delete and tap **REMOVE ACCOUNT**.



Send mail

1. Tap **Gmail**. ⋮ > **Add from Contacts**.
2. Tap ✎.
3. In the **To** box, type in an address, or tap **+**.
4. Type in the message subject and the mail.
5. Tap ➤.

Read and reply to mail

1. Tap **Gmail**.
2. Tap the message you want to read.
3. To reply the message, tap ↩, or tap ⋮ > **Reply all**.

Delete mail

1. Tap [Gmail](#).
2. Tap the message you want to delete and tap .
3. To delete multiple messages, tap the circle with the recipient's initial to select messages and tap .

GET SOCIAL

Want to connect and share stuff with the people in your life? With social apps, you can stay up to date with what's happening with your friends.

Social apps

To keep in touch with your friends and family, sign in to your instant messaging, sharing, and social networking services. Select the service you want to use from your Home screen. Social apps are available in the [Google Play Store](#). The available services may vary.

5 Camera

CAMERA BASICS

Why carry a separate camera if your phone has all you need for capturing memories? With your phone's camera, you can easily take photos or record videos.

Take a photo

Shoot sharp and vibrant photos – capture the best moments in your photo album.

1. Tap **Camera**.
2. Take aim and focus.
3. Tap ○.

Record a video


To switch to the video recording mode, swipe right.

Take panoramas

1. Tap **Camera** > ≡ > **Panorama**.
2. Tap ○ and follow the instructions on your phone.

Take photos with a timer

Want to have time to get in the shot too? Try out the timer.

1. Tap **Camera** > .
2. Select the time and tap ○.

YOUR PHOTOS AND VIDEOS

View photos and videos on your phone

Want to relive those important moments? View photos and videos on your phone.

Tap **Photos**.

Copy your photos and videos to your computer


Do you want to view your photos or videos on a larger screen? Move them to your computer.

You can use your computer's file manager to copy or move your photos and videos to the computer.

Connect your phone to the computer with a compatible USB cable. To set the USB connection type, open the notification panel, and tap the USB notification.

Share your photos and videos

You can share your photos and videos quickly and easily for your friends and family to see.

1. In **Photos**, tap the photo you want to share and tap .
2. Select how you want to share the photo or video.

6 Internet and connections

ACTIVATE WI-FI

Using a Wi-Fi connection is generally faster and less expensive than using a mobile data connection. If both Wi-Fi and mobile data connections are available, your phone uses the Wi-Fi connection.

Turn on Wi-Fi

1. Tap **Settings** > **Network & Internet** > **Wi-Fi**.
2. Switch Wi-Fi to **On**.
3. Select the connection you want to use.

Your Wi-Fi connection is active when  is shown on the status bar at the top of the screen.



Important: Use encryption to increase the security of your Wi-Fi connection. Using encryption reduces the risk of others accessing your data.



Tip: If you want to track locations when satellite signals are not available, for example when you're indoors or between tall buildings, switch Wi-Fi on to improve positioning accuracy.

USE A MOBILE DATA CONNECTION

Close the mobile data connection

Swipe down from the top of the screen, tap  **Mobile data** and tap **TURN OFF**. To switch the connection back on, tap  **Mobile data** again.

Use a mobile data connection when roaming

Tap **Settings** > **Network & Internet** > **Mobile network**, and switch **Roaming** to **On**.¹



Tip: To follow your data usage, tap **Settings** > **Network & Internet** > **Data usage**.¹

Connecting to the internet when roaming, especially when abroad, can raise data costs substantially.

BROWSE THE WEB

Use your phone to connect your computer to the web

It's simple to use the internet on your laptop on the go. Turn your phone into a Wi-Fi hotspot, and use your mobile data connection to access the internet with your laptop or other device.

1. Tap **Settings** > **Network & Internet** > **Hotspot & tethering**.
2. Switch on the **Wi-Fi hotspot** to share your mobile data connection over Wi-Fi, **USB tethering** to use a USB connection, or **Bluetooth tethering** to use Bluetooth.

The other device uses data from your data plan, which may result in data traffic costs. For info on availability and costs, contact your network service provider.

Start browsing

No need for a computer – you can easily browse the internet on your phone. Catch up on the news, and visit your favorite websites. You can use the browser on your phone to view web pages on the internet.

1. Tap **Chrome**.
2. Type a web address and tap →.



Tip: If your network service provider doesn't charge you a fixed fee for data transfer, to save on data costs, use a Wi-Fi network to connect to the internet.

Open a new tab

When you want to visit several websites at the same time, you can open new browser tabs and switch between them.

In Chrome,

1. Tap the box next to the address bar.
2. Tap **+**.

Switch between tabs

In Chrome,

1. Tap the box next to the address bar.
2. Tap the tab you want.

Close a tab

In Chrome,

1. Tap the box next to the address bar.
2. Tap **X** on the tab you want to close.

Search the web

Explore the web and the outside world with Google Search. You can use the keyboard to write your search words.

In Chrome,

1. Tap the search bar.
2. Write your search word in the search box.
3. Tap →.

You can also select a search word from the proposed matches.

Use your data plan efficiently

If you're worried about your data usage costs, your phone helps you prevent some apps from sending or receiving data when running in the background.

1. Tap **Settings** > **Network & Internet** > **Data usage** > **Data saver**.
2. Switch **Data saver** to **On**.

BLUETOOTH®

You can connect wirelessly to other compatible devices, such as phones, computers, headsets, and car kits. You can also send your photos to compatible phones or to your computer.

Connect to a Bluetooth accessory

You can connect your phone with many useful Bluetooth devices. For example, with a wireless headset (sold separately), you can speak on the phone hands-free – you can continue what you're doing, such as working at your computer, during a call. Connecting a phone to a Bluetooth device is called pairing.

1. Tap **Settings** > **Connected devices** > **Bluetooth**.
2. Switch **Bluetooth** to **On**.
3. Make sure the other device is switched on. You may need to start the pairing process from the other device. For details, see the user guide for the other device.
4. To pair your phone and the device, tap the device on the list of discovered Bluetooth devices.
5. You may need to type in a passcode. For details, see the user guide for the other device.


Since devices with Bluetooth wireless technology communicate using radio waves, they do not need to be in direct line-of-sight. Bluetooth devices must, however, be within 10 meters (33 feet) of each other, although the connection may be subject to interference from obstructions such as walls or from other electronic devices.

Paired devices can connect to your phone when Bluetooth is switched on. Other devices can detect your phone only if the Bluetooth settings view is open.

Do not pair with or accept connection requests from an unknown device. This helps to protect your phone from harmful content.

Remove a pairing

If you no longer have the device with which you paired your phone, you can remove the pairing.

1. Tap **Settings** > **Connected devices** > **Bluetooth**.
2. Tap  next to a device name.
3. Tap **FORGET**.

Connect to your friend's phone with Bluetooth

You can use Bluetooth to wirelessly connect to your friend's phone, to share photos, and much more.


1. Tap **Settings** > **Connected devices** > **Bluetooth**.
2. Make sure Bluetooth is switched on in both phones.
3. Make sure the phones are visible to each other. You need to be in the Bluetooth settings view for your phone to be visible to other phones.
4. You can see the Bluetooth phones within range. Tap the phone you want to connect to.
5. If the other phone needs a passcode, type in or accept the passcode, and tap **Pair**.

The passcode is only used when you connect to something for the first time.

Send your content using Bluetooth

When you want to share your content or send photos you've taken to a friend, use Bluetooth to send them to compatible devices.

You can use more than one Bluetooth connection at a time. For example, while using a Bluetooth headset, you can still send things to another device.

1. Tap **Settings** > **Connected devices** > **Bluetooth**.
the Bluetooth devices within range.
2. Switch **Bluetooth** to **On**.
3. Go to the content you want to send, and tap  > **Bluetooth**.
4. Tap the device to connect to. You can see
5. If the other device needs a passcode, type in the passcode. The passcode, which you can make up, must be typed in on both devices. The passcode in some devices is fixed. For details, see the user guide of the other device.

The location of the received files depends on the other device. For details, see the user guide for the other device.

VPN


You may need a virtual private network (VPN) connection to access your company resources, such as intranet or corporate mail, or you may use a VPN service for personal purposes.

Contact your company IT administrator for details of your VPN configuration, or check your VPN service's website for additional info.


Use a secure VPN connection

1. Tap **Settings** > **Network & Internet** > **VPN**.
2. To add a VPN profile, tap **+**.
3. Type in the profile info as instructed by your company IT administrator or VPN service.

Edit a VPN profile

1. Tap  next to a profile name.
2. Change the info as required.

Delete a VPN profile

1. Tap  next to a profile name.
2. Tap **FORGET**.

7 Music and videos

MUSIC

Listen to your favorite music wherever you are.

Play music

1. Tap **Play Music** > ≡ > **Music library**.
2. Tap the artist, album, song, genre, or playlist you want to play.

Pause or resume playback

Tap **||** to pause and **▶** to resume.



Tip: To play songs in random order, tap **⌘**.

Create a playlist

Organise your songs into playlists, so you can listen to music that fits your mood.

1. When playing a song, tap **:** > **Add to playlist**.
2. To add a song to your new playlist, tap **NEW PLAYLIST**, or, to add a song to an existing playlist, select the playlist from the list.

Add songs to your phone

If you have music or videos stored on your computer, but want to access them on your phone, use a USB cable to sync the media between your phone and computer.

1. Connect your phone to a compatible computer with a USB cable.
2. In your computer's file manager, drag and drop your songs and videos to your phone.

VIDEOS

Have your favourite media with you while on the move – watch videos wherever you are.

Play a video

Tap **Photos** and tap the video you want to play.



Tip: To pause playback, tap **⏸**. To resume, tap **▶**.

Fast forward or rewind a video

To fast forward or rewind a video, drag the slider at the bottom of the screen right or left.

FM RADIO

Listen to FM Radio

Enjoy your favourite radio stations on the go.

1. To listen to the radio, you need to connect a compatible headset to the phone. The headset acts as an antenna.¹
2. After you have connected the headset, tap **FM Radio**.
3. To turn the radio on or off, tap **⏻**.



Troubleshooting tip: If the radio doesn't work, make sure the headset is connected properly.

Go to the next or previous station

Tap **⏪** or **⏩**.

Save a radio station

Want to listen to a radio station later? Save the station.

To save the station that you are listening to, tap **☆**.


View your saved stations list

Tap **☰ >** **Favorite List**.

Remove a station from favorites

Tap ☆ when listening to a station.



Tip: To listen to a radio station using the phone's speakers, tap  **Speaker on**. Keep the

headset connected.

1

The headset may be sold separately.

8 Organize your day

CALENDAR

Keep track of time – learn how to keep your appointments, tasks, and schedules up to date.

Manage calendars

Tap **Calendar** > ≡, and select what type of calendar you want to see.

Calendars are added automatically when you add an account to your phone. To add a new account with a calendar, go to the apps menu and tap **Settings** > **Users & accounts** > **Add account**.

Add an event

To remember an appointment or an event, add it to your calendar.

1. Tap **Calendar** > +.
2. Add the event details.
3. To make the event repeat on certain days, tap **More options** > **Does not repeat**, and select how often the event should repeat.
4. Tap **SAVE**.



Tip: To edit an event, tap the event and , and edit the details.

Delete an appointment

1. Tap the event.
2. Tap **:** > **Delete**.

9 Maps

FIND PLACES AND GET DIRECTIONS


Find a spot

Maps Go helps you find specific locations and businesses.

1. Tap **Maps Go**.
2. Write search words, such as a street address or place name, in the search bar.
3. Select an item from the list of proposed matches as you write, or tap → on the keyboard to search.


The location is shown on the map. If no search results are found, make sure the spelling of your search words is correct.

See your current location

Tap **Maps Go** > .

Get directions to a place

Get directions for walking, cycling, driving, or using public transport – use your current location or any other place as the start point.

1. Tap **Maps Go** and enter your destination in the search bar.
2. Tap **DIRECTIONS**. The highlighted icon shows the mode of transportation, for example . To change the mode, select the new mode under the search bar.
3. If you don't want the starting point to be your current location, tap **Your location**, and search for a new starting point.

The route is shown on the map, along with an estimate of how long it takes to get there. To see detailed directions, tap **ROUTE INFO**.

USE LOCATION SERVICES

Use Maps to find out where you are, attach your location to the photos you take. Location info can be attached to a photo or video, if your location can be determined using satellite or network technology. If you share a photo or video that contains location info, the location info may be shown to those who view the photo or video. Some apps can use your location info to offer you a wider variety of services.

Switch on location services

Your phone shows your location on the map using a satellite positioning system, Wi-Fi, or network (Cell ID) based positioning.

The availability, accuracy and completeness of the location info depend on, for example, your location, surroundings, and third party sources, and may be limited. Location info may not be available, for example, inside buildings or underground. For privacy info related to positioning methods, see the HMD Global Privacy Policy, available at <http://www.hmd.com/privacy>.

Some satellite positioning systems may require transferring small amounts of data over the mobile network. If you want to avoid data costs, for example when traveling, you can switch the mobile data connection off in your phone settings.

Wi-Fi positioning improves positioning accuracy when satellite signals are not available, especially when you are indoors or between tall buildings. If you're in a place where the use of Wi-Fi is restricted, you can switch Wi-Fi off in your phone settings.

Tap **Settings** > **Security & location**, and switch **Location** on.

10 Apps and services

GOOGLE PLAY

Your Android phone can live up to its full potential with Google Play – apps and music are all readily available for your entertainment. All you need is a Google account.

Add a Google account to your phone

1. Tap **Settings** > **Users & accounts** > **Add account** > **Google**. If asked, confirm your device lock method.
2. Type in your Google account credentials and tap **Next**, or, to create a new account, tap **Create account**.
3. Follow the instructions on your phone.

Download apps

Unleash your phone's potential – there are thousands of apps waiting in the Google Play Store to help you with this.¹

1. Tap **Play Store**.
2. Tap the search bar to look for apps, or select apps from your recommendations.
3. In the app description, tap **INSTALL** to download and install the app.

To see your apps, go to the home screen and swipe up from the bottom of the screen.

Update apps

Update your **Play Store** apps to get all the latest features and bug fixes.

1. Tap **Play store** > ≡ > **My apps & games** to see available updates.
2. Tap the app with an update available and **UPDATE**.

You can also update all apps at once. In **My apps & games**, tap **UPDATE ALL**.

Remove downloaded apps

Tap **Play Store** > ☰ > **My apps & games**, choose an app you want to remove, and tap **UNINSTALL**.

¹ You need to have a Google account added to your phone to use Google Play services. Charges may apply to some of the content available in Google Play. To add a payment method, tap **Play Store** > **Menu** > **Account** > **Payment methods**. Always be sure to have a permission from the payment method owner when buying content from Google Play.

11 Software updates and backups

UPDATE YOUR PHONE SOFTWARE

Stay in step with the beat – update your phone software and apps wirelessly to get new and enhanced features for your phone. Updating the software may also improve your phone performance.

Install available updates

Tap **Settings** > **System** > **System update** > **Check for update** to check if updates are available.

When your phone notifies you that an update is available, just follow the instructions shown on your phone. If your phone is low on memory, you may need to move your photos and other stuff to the memory card.

Warning: If you install a software update, you cannot use the device, even to make emergency calls, until the installation is completed and the device is restarted.

Before starting the update, connect a charger or make sure the device battery has enough power, and connect to Wi-Fi, as the update packages may use up a lot of mobile data.

BACK UP YOUR DATA

To ensure your data is safe, use the backup feature in your phone. Your device data (such as Wi-Fi passwords and call history) and app data (such as settings and files stored by apps) will be backed up remotely.

Switch on automatic backup

Tap **Settings** > **System** > **Backup**, and switch back up on.

RESTORE ORIGINAL SETTINGS AND REMOVE PRIVATE CONTENT FROM YOUR PHONE

Accidents can happen – if your phone is not working properly, you can restore its settings. Or, if you buy a new phone, or otherwise want to dispose of or recycle your phone, here's how you can remove your personal info and content. Note that it is your responsibility to remove all private content.

Reset your phone

1. Tap **Settings** > **System** > **Reset options** > **Erase all data**.
2. Follow the instructions shown on your phone.

STORAGE

To check how much memory you have available, tap **Settings** > **Storage**.

Remove downloaded apps

Tap **Play Store** > ≡ > **My apps & games**, choose an app you want to remove, and tap **UNINSTALL**.

Disable an app

You can't delete some apps that were pre-installed on your device. But you can disable them and they will be hidden from the list of apps on your device. If you disable an app, you can add it back to your device.

1. Tap **Settings** > **Apps & notifications**.
2. Tap **App info**.
3. Tap the app name.
4. Tap **DISABLE**. You may not be able to disable all apps.

If an installed app depends on a removed app, the installed app may stop working. For details, see the user documentation of the installed app.

Add back a disabled app

You can add a disabled app back to the list of apps.

1. Tap **Settings** > **Apps & notifications**.
2. Tap **App info**.
3. Tap **All apps** > **Disabled apps**.
4. Tap the app name.
5. Tap **ENABLE**.

Copy content between your phone and computer

You can copy photos, videos, and other content created by you between your phone and computer to show or store them.

1. Connect your phone to a compatible computer with a compatible USB cable.
2. On your computer, open a file manager, and browse to your phone.
3. Drag and drop items from your phone to the computer, or from your computer to the phone.

Make sure you put the files in the right folders on your phone, or you may not be able to see them.

12 Protect your phone

PROTECT YOUR PHONE WITH A SCREEN LOCK

You can set your phone to require authentication when unlocking the screen.

Set a screen lock

1. Tap **Settings** > **Security & location** > **Screen lock**.
2. Choose the type of lock and follow the instructions on your phone.

CHANGE YOUR SIM PIN CODE

If your SIM card came with a default SIM PIN code, you can change it to something more secure. Not all network service providers support this.

Select your SIM PIN

You can choose which digits to use for the SIM PIN. The SIM PIN code can be 4-8 digits.

1. Tap **Settings** > **Security & Location** > **SIM card lock**.
2. Under the selected SIM card, tap **Change SIM PIN**.



Tip: If you don't want to protect your SIM with a PIN code, switch **Lock SIM card** to **Off**, and type in your current PIN.

ACCESS CODES

Learn what the different codes on your phone are for.

PIN or PIN2 code

PIN or PIN2 codes have 4-8 digits.

These codes protect your SIM card against unauthorized use or are required to access some features. You can set your phone to ask for the PIN code when you switch it on.

If you forget the codes or they aren't supplied with your card, contact your network service provider.

If you type in the code incorrectly 3 times in a row, you need to unblock the code with the PUK or PUK2 code.

PUK or PUK2 codes

PUK or PUK2 codes are required to unblock a PIN or PIN2 code.

If the codes are not supplied with your SIM card, contact your network service provider.

Lock code

Lock code is also known as security code or password.

The lock code helps you protect your phone against unauthorized use. You can set your phone to ask for the lock code that you define. Keep the code secret and in a safe place, separate from your phone.

If you forget the code and your phone is locked, your phone will require service. Additional charges may apply, and all the personal data on your phone may be deleted. For more info, contact the nearest authorized service facility for your phone, or your phone dealer.

IMEI code

The IMEI code is used to identify phones in the network. You may also need to give the number to your authorized service facility services or phone dealer.

To view your IMEI number, dial ***#06#**.

Your phone's IMEI code is also printed either on your phone or on the SIM tray depending on your phone model. If your phone has a removable back cover, you can find the IMEI code under the cover.

The IMEI is also visible on the original sales box.

Locate or lock your phone

If you lose your phone, you may be able to find, lock, or erase it remotely if you have signed in to a Google Account. Find My Device is on by default for phones associated with a Google Account.

To use Find My Device, your lost phone must be:

- Turned on
- Signed in to a Google Account
- Connected to mobile data or Wi-Fi
- Visible on Google Play
- Location turned on
- Find My Device turned on

When Find My Device connects with your phone, you see the phone's location, and the phone gets a notification.

1. Open android.com/find on a computer, tablet or phone connected to the internet and sign in to your Google Account.
2. If you have more than one phone, click the lost phone at the top of the screen.
3. On the map, see about where the phone is. The location is approximate and may not be accurate.

If your device can't be found, Find My Device will show its last known location, if available. To lock or erase your phone, follow the instructions on the web site.

13 제품 및 안전 정보

안전을 위해

본 가이드라인을 확인하십시오. 가이드라인을 준수하지 않으면 위험해 질 수 있으며 현지 법률 및 규정에 저촉될 수 있습니다. 자세한 내용은 전체 사용자 가이드를 참조하십시오.

제한 지역 내 전원 끄기



휴대전화 사용이 허가되지 않거나 전파 방해 또는 위험을 유발할 수 있는 경우 (예: 기내, 병원 안, 의료 장비 근처, 휘발유, 화학 물질, 폭발 위험 지역 인근) 기기의 전원을 끄고 제한 지역의 지침을 모두 준수하십시오.

안전 운전 우선



현지 법률을 모두 준수하십시오. 운전 중에는 손으로 다른 것을 다루지 말고 차량 운행에만 집중해야 합니다. 운전할 때 가장 우선 시해야 할 것은 안전 운전입니다.

전파 방해



모든 무선 기기는 전파 방해에 민감할 수 있으며, 전파 방해로 인해 성능이 저하될 수 있습니다.

공인 서비스 이용



공인된 서비스 인력만이 본 제품을 설치 또는 수리할 수 있습니다.

배터리, 충전기 및 기타 액세서리



HMD Global Oy 에서 본 기기에 사용을 승인한 배터리, 충전기 및 기타 액세서리만 사용하십시오. 호환되지 않는 제품을 연결하지 마십시오.

기기가 젖지 않도록 주의



기기에 방수 성능이 없는 경우 IP 등급을 참조하여 자세한 지침을 확인하십시오.

유리 부분



기기 뒷/또는 기기 화면은 유리로 되어 있습니다. 기기를 단단한 표면에 떨어뜨리거나 기기에 상당한 충격이 가해지면 유리가 깨질 수 있습니다. 유리가 깨진 경우 기기의 유리 부분을 손으로 만지거나 기기에서 깨진 유리를 제거하지 마십시오. 공인 서비스 인력이 깨진 유리를 교체할 때까지 기기를 사용하지 마십시오.

청력 보호



볼륨을 높게 설정한 상태로 장시간 듣지 마십시오. 청각 손상의 위험이 있습니다. 스피커 사용 시 기기를 귀에 가까이 가져갈 경우에는 주의 사항을 준수하십시오.

SAR(Specific Absorption Rate, 전자파 흡수율)



본 기기는 일반적인 귀 부위 위치에서 사용하거나 인체에서 5mm 이상 떨어진 곳에 둔 상태에서 RF 노출 지침을 충족합니다. 구체적인 최대 SAR 값은 본 사용자 가이드의 인증 정보 (SAR) 섹션을 참조하십시오. 자세한 내용은 www.sar-tick.com 에서 확인할 수 있습니다.

휴대용 케이스, 벨트 클립 또는 기타 형태의 기기 홀더를 인체에 착용하여 사용하는 경우, 재질에 메탈이 포함되어서는 안 되며 앞서 설명한 인체와 기기 간 분리 거리 이상을 충족해야 합니다. 음성 통화를 하지 않을 때에도 휴대전화에서 전기, 전파 등의 전도가 일어날 수 있다는 점에 유의하십시오.

NETWORK SERVICES AND COSTS

일부 기능 및 서비스를 이용하거나 무료 항목을 비롯한 콘텐츠를 다운로드하려면 네트워크 연결이 필요합니다. 이 경우 대용량 데이터 전송으로 인해 데이터 요금이 발생할 수 있습니다. 또한, 일부 기능의 경우 별도의 요금제에 등록해야 할 수 있습니다.


- Important:** 4G/LTE might not be supported by your network service provider or by the service provider you are using when traveling. In these cases, you may not be able to make or receive calls, send or receive messages or use mobile data connections. To make sure your device works seamlessly when full 4G/LTE service is not available, it is recommended that you change the highest connection speed from 4G to 3G. To do this, on the home screen, tap **Settings** > **Network & Internet** > **Mobile network**, and switch **Preferred network type** to **3G**. For more info, contact your network service provider.
- Note:** Using Wi-Fi may be restricted in some countries. For example, in the EU, you are only allowed to use 5150 – 5350 MHz Wi-Fi indoors, and in the USA and Canada, you are only allowed to use 5.15 – 5.25 GHz Wi-Fi indoors. For more info, contact your local authorities.



EMERGENCY CALLS

- 중요:** 모든 조건에서 연결이 보장되지는 않습니다. 긴급 의료 전화 등과 같은 긴급한 통신은 무선 전화에만 의존해서는 안 됩니다.

Before making the call:

- Switch the phone on.
- If the phone screen and keys are locked, unlock them.
- Move to a place with adequate signal strength.

On the home screen, tap 

1. Tap  and type in the official emergency number for your present location. Emergency call numbers vary by location.
2. Tap .
3. Give the necessary info as accurately as possible. Do not end the call until given permission to do so.

You may also need to do the following:

- Put a SIM card in the phone. If you don't have a SIM, on the lock screen, tap **Emergency**.
- If your phone asks for a PIN code, tap **Emergency**.
- Switch the call restrictions off in your phone, such as call barring, fixed dialling, or closed user group.
- If the mobile network is not available, you may also try making an internet call, if you can access the internet.

기기 관리

기기와 배터리, 충전기 및 액세서리를 조심스럽게 다루십시오. 다음 제안 사항을 참고해 원활하게 기기를 사용하십시오.

- 기기가 젖지 않도록 합니다. 침수, 습기 및 모든 유형의 액체나 수분에는 전기 회로를 부식시키는 광물질이 포함될 수 있습니다.
- 먼지나 이물질이 많은 지역에서 기기를 사용하거나 그러한 곳에 기기를 보관하지 마십시오.
- 고온에서 기기를 보관하지 마십시오. 온도가 높을 경우 기기나 배터리가 손상될 수 있습니다.
- 저온에서 기기를 보관하지 마십시오. 기기의 온도가 일반적인 상태로 올라가면 기기 내부에 수분이 형성되어 기기가 손상될 수 있습니다.
- 기기를 열 때에는 사용자 가이드의 지침을 따르십시오.
- 비공인 인력이 기기를 수리하거나 변경하면 기기가 손상될 수 있으며 무선 전파 기기 관리 규정을 위반할 수 있습니다.
- 기기나 배터리를 떨어뜨리거나 두드리거나 흔들지 마십시오. 거칠게 다루면 망가질 수 있습니다.
- 부드럽고 깨끗한 상태의 마른 헝겂으로만 기기 표면을 닦으십시오.
- 기기를 도색하지 마십시오. 기기에 색을 칠하면 기기가 제대로 작동되지 않을 수 있습니다.
- 기기를 자석 또는 자기장 가까이에 두지 마십시오.
- 중요한 데이터의 안전을 유지하려면 데이터를 기기, 메모리 카드, 컴퓨터 등의 장소 중 두 곳 이상에 저장하거나 중요한 정보를 기록해 두십시오.

지나치게 오래 사용하면 기기가 뜨거워질 수 있습니다. 대부분의 경우에는 정상적인 상태입니다. 과열되는 것을 방지하기 위해 기기가 자동으로 느려지고 앱이 닫히며 충전이 중단될 수 있습니다. 필요 시 기기 전원이 자동으로 꺼질 수도 있습니다. 기기가 제대로 작동하지 않는 경우 가까운 공인 서비스 센터로 가지고 가십시오.

재활용



사용하던 전자 제품, 배터리, 포장재를 항상 전담 수거지에 반납하십시오. 그러면 무분별한 쓰레기 배출을 방지하고 자원을 재활용하는 데 도움이 됩니다. 전기 및 전자 제품에는 구리, 알루미늄, 철, 마그네슘 등의 가치 있는 자원과 금, 은, 팔라듐과 같은 귀금속이 다량 포함되어 있습니다. 기기의 모든 재료는 자원 및 에너지로 복원될 수 있습니다.

WEEE 마크

WEEE 마크



제품이나 배터리, 인쇄물 또는 포장에 있는 WEEE 마크는 전기 및 전자 제품과 배터리는 모두 사용 종료 시 별도로 수거해야 한다는 것을 의미합니다. 이러한 제품을 별도로 분류하지 않고 폐기하지 마십시오. 재활용할 수 있도록 분리 수거하십시오. 가까운 재활용품 수거지 정보는 현지 쓰레기 관리 당국에서 확인하시기 바랍니다.

BATTERY AND CHARGER INFORMATION

Battery and charger info

To check if your phone has a removable or non-removable battery, see the printed guide.

Devices with a removable battery Use your device only with an original rechargeable battery. The battery can be charged and discharged hundreds of times, but it will eventually wear out. When the talk and standby times are noticeably shorter than normal, replace the battery.

Devices with a non-removable battery Do not attempt to remove the battery, as you may damage the device. The battery can be charged and discharged hundreds of times, but it will eventually wear out. When the talk and standby times are noticeably shorter than normal, to replace the battery, take the device to the nearest authorized service facility.

Charge your device with a compatible charger. Charger plug type may vary. Charging time can vary depending on device capability.

Battery and charger safety info

Once charging of your device is complete, unplug the charger from the device and electrical outlet. Please note that continuous charging should not exceed 12 hours. If left unused, a fully charged battery will lose its charge over time.

Extreme temperatures reduce the capacity and lifetime of the battery. Always keep the battery between 15°C and 25°C (59°F and 77°F) for optimal performance. A device with a hot or cold battery may not work temporarily. Note that the battery may drain quickly in cold temperatures and lose enough power to switch off the phone within minutes. When you are outdoors in cold temperatures, keep your phone warm.

Obey local regulations. Recycle when possible. Do not dispose as household waste.

Do not expose the battery to extremely low air pressure or leave it to extremely high temperature, for example dispose it in a fire, as that may cause the battery to explode or leak flammable liquid or gas.

Do not dismantle, cut, crush, bend, puncture, or otherwise damage the battery in any way. If a battery leaks, do not let liquid touch skin or eyes. If this happens, immediately flush the affected areas with water, or seek medical help. Do not modify, attempt to insert foreign objects into the battery, or immerse or expose it to water or other liquids. Batteries may explode if damaged.

Use the battery and charger for their intended purposes only. Improper use, or use of unapproved or incompatible batteries or chargers may present a risk of fire, explosion, or other hazard, and may invalidate any approval or warranty. If you believe the battery or charger is damaged, take it to a service centre or your phone dealer before continuing to use it. Never use a damaged battery or charger. Only use the charger indoors. Do not charge your device during a lightning storm. When charger is not included in the sales pack, charge your device using the data cable (included) and a USB power adaptor (may be sold separately). You can charge your device with third-party cables and power adaptors that are compliant with USB 2.0 or later and with applicable country regulations and international and regional safety standards. Other adaptors may not meet applicable safety standards, and charging with such adaptors could pose a risk of property loss or personal injury.

To unplug a charger or an accessory, hold and pull the plug, not the cord.

Additionally, the following applies if your device has a removable battery:

- Always switch the device off and unplug the charger before removing any covers or the battery.
- Accidental short-circuiting can happen when a metallic object touches the metal strips on the battery. This may damage the battery or the other object.

어린이

기기와 액세서리는 장난감이 아닙니다. 기기와 액세서리에는 작은 부품이 포함될 수 있습니다. 어린이의 손이 닿지 않는 곳에 보관하십시오.

의료 기기

무선 전화 등의 무선 송신 장비 사용 시 전파 방해로 인해 의료 기기의 기능이 오작동할 수 있습니다. 외부 무선 에너지가 제대로 차단되는 기기인지 여부를 확인하려면 의사나 해당 의료 기기 제조사에 문의하십시오.

삽입형 의료 기기

전파 방해 방지를 위해 삽입형 의료 기기 (예: 심장 박동기, 인슐린 펌프 및 신경 자극 기기) 제조 업체에서 무선 기기와 해당 의료 기기 간의 최소 분리 거리 15.3cm 를 유지하라고 권장합니다. 그러한 기기를 삽입한 사람의 경우 다음을 준수해야 합니다.

- 항상 무선 기기와 의료 기기 간의 거리를 15.3cm 이상으로 유지합니다.
- 무선 기기를 가슴 쪽 주머니에 넣지 않습니다.
- 무선 기기를 의료 기기가 삽입된 방향과 반대 방향의 귀에 대고 사용합니다.
- 전파 방해가 있는 것으로 의심되는 모든 경우에 무선 기기의 전원을 끕니다.
- 삽입형 의료 기기에 대한 제조 업체의 지침을 따릅니다.

삽입형 의료 기기와 무선 기기 사용에 대해 더 궁금한 점이 있을 경우 담당 의료 기관에 문의하십시오.

청력



경고: 헤드셋을 사용할 경우 외부 소리를 듣는 능력에 영향을 미칠 수 있습니다. 안전을 위협하는 장소에서는 헤드셋을 사용하지 마세요.

일부 무선 기기는 보청기에 장애를 유발할 수 있습니다.

유해한 콘텐츠로부터 기기 보호

기기가 바이러스와 기타 유해 콘텐츠에 노출될 수 있습니다. 다음 주의 사항을 준수하십시오.

- 메시지를 열 때 주의하십시오. 악성 소프트웨어가 포함되어 있거나 기기 및 컴퓨터에 해를 끼칠 수 있습니다.
- 연결 요청을 수락하거나 인터넷을 탐색하거나 콘텐츠를 다운로드할 때 주의하십시오. 신뢰할 수 없는 출처의 블루투스 연결을 수락하지 마십시오.
- 신뢰할 수 있고 적절한 안전 및 보호를 제공하는 소스에서만 서비스와 소프트웨어를 설치하고 사용하십시오.
- 기기 및 연결된 컴퓨터에 안티바이러스를 비롯한 기타 보안 소프트웨어를 설치하십시오. 한 번에 한 가지 안티바이러스 앱만 사용하십시오. 두 개 이상 사용 시 기기 및/또는 컴퓨터 성능과 작동에 영향을 미칠 수 있습니다.
- 사전 설치된 타사 인터넷 사이트 북마크 및 링크를 사용할 경우 적절한 주의 조치를 수행하십시오. HMD Global 은 그러한 사이트의 안전을 보증하거나 그러한 사이트를 신뢰할 수 있는 것으로 추정하지 않습니다.

차량

무선 신호는 차량 내에 부적절하게 설치되었거나 제대로 보호 기능을 갖추지 못한 전자 시스템에 영향을 미칠 수 있습니다. 자세한 내용은 차량 또는 해당 장비 제조사에 문의하십시오. 공인된 서비스 인력만이 차량에 기기를 설치해야 합니다. 잘못된 설치 위험할 수 있으며 이로 인해 보증이 무효화될 수 있습니다. 차량 내 모든 무선 기기 장치의 설치 및 작동 상태를 정기적으로 확인하십시오. 기기나 기기 부품 또는 액세서리와 같은 공간에 인화성 또는 폭발성 물질을 보관하거나 담지 마십시오. 기기나 액세서리를 에어백 작동 위치에 놓지 마십시오.

폭발할 수 있는 환경

가스관 등이 있는 폭발할 수 있는 환경에서는 기기 전원을 끄십시오. 불꽃이 튀면 폭발 또는 화재가 일어나 상해 또는 사망 사고가 일어날 수 있습니다. 휘발유, 화학 설비, 폭발 작업이 진행되는 곳이 있는 지역에서의 제한 사항을 숙지하십시오. 폭발할 수 있는 환경이 존재하는 지역이 명확하게 표시되지 않을 수 있습니다. 주로 엔진을 끄도록 권장되는 곳, 선박 하단 덱, 화학물 이송 또는 저장 설비, 대기 중에 화학 물질이나 입자가 포함되는 곳 등이 해당됩니다. 액화 석유 가스 (프로판, 부탄 등) 를 사용하는 차량의 경우 본 기기를 차량 인근에서 사용해도 안전한지 여부를 차량 제조 업체에 확인하십시오.

인증 정보 (SAR)

이 휴대 전화는 무선 전파 노출에 대한 지침을 충족합니다.

본 휴대 전화는 무선 송수신기입니다. 독립적인 과학 기관 ICNIRP 의 국제 지침에서 권장하는 무선 전파 (무선 주파수 전자기장) 노출 제한을 초과하지 않도록 설계되어 있습니다. 이 지침은 연령 및 건강 상태에 상관없이 모든 사람의 안전을 보호하도록 설계된 안전 마진을 광범위하게 다루고 있습니다. 노출 지침은 기기 송신 시 머리카나 인체에 축적되는 RF (무선 주파수) 총량을 나타내는 SAR 을 토대로 작성됩니다. 모바일 기기에 대한 ICNIRP SAR 제한은 티슈 10g 당 평균 2.0W/kg 입니다.

SAR 테스트는 표준 작동 위치에서 주파수 대역 전체의 최대 정격 전원 수준으로 송신하는 기기로 수행합니다.

기기의 최대 SAR 값은 www.hmd.com/sar 를 참조하시기 바랍니다.

본 기기는 머리 쪽에서 사용하거나 인체에서 1.5cm 이상 떨어진 곳에 둔 상태에서 RF 노출 지침을 충족합니다. 휴대용 케이스, 벨트 클립 또는 기타 형태의 기기 홀더를 인체에 착용하여 사용하는 경우, 재질에 메탈이 포함되어서는 안 되며 앞서 설명한 인체와 기기 간 분리 거리 이상을 충족해야 합니다.

데이터나 메시지를 전송하려면 양호한 네트워크 연결이 필요합니다. 연결이 양호하지 못하면 양호한 연결을 사용할 수 있을 때까지 전송이 지연될 수 있습니다. 전송이 완료될 때까지 별도의 거리 지침을 따르십시오.

일반적인 사용 시 SAR 값은 대체로 위에서 설명한 값 아래로 유지됩니다. 이는 시스템 효율성 목적 및 네트워크상의 전파 방해를 최소화하기 위한 목적으로 통화에 풀 전력이 필요 없을 때에는 휴대전화의 작동 전원이 자동으로 감소되기 때문입니다. 전원 출력이 낮을 수록 SAR 값이 낮아집니다.

기기 모델별로 다양한 버전이 있어 SAR 값이 상이할 수 있습니다. 부품 및 디자인 변경이 진행될 수 있으며 일부 변경 항목이 SAR 값에 영향을 미칠 수 있습니다.

자세한 내용은 www.sar-tick.com 에서 확인할 수 있습니다. 음성 통화를 하지 않을 때에도 휴대전화에서 전기, 전파 등의 전도가 일어날 수 있다는 점에 유의하십시오.

WHO (세계 보건 기구) 에서는 현 과학 정보상 모바일 기기 사용 시 별도의 주의 사항은 필요하지 않은 것으로 나타난다고 발표했습니다. SAR 노출 감소에 관심이 있는 경우 모바일 기기를 제한적으로 사용하거나 머리와 인체와 기기 간 거리를 유지하기 위해 핸드프리 도구를 사용할 것을 권장합니다. 자세한 정보와 RF 노출 관련 설명 및 논의는 WHO 웹 사이트 www.who.int/peh-emf/en 를 참조하시기 바랍니다.

디지털 권한 관리 소개

본 기기를 사용할 때에는 모든 법률 및 지역 관례는 물론 타인의 저작권 등의 합법적인 권한과 개인 정보 규정을 준수하십시오. 저작권 보호를 위해 사진, 음악 및 기타 콘텐츠의 복사, 수정 또는 전송이 금지될 수 있습니다.

COPYRIGHTS AND NOTICES

Copyrights and other notices

The availability of products, features, apps and services may vary by region. For more info, contact your dealer or your service provider. This device may contain commodities, technology or software subject to export laws and regulations from the US and other countries. Diversion contrary to law is prohibited.

The contents of this document are provided "as is". Except as required by applicable law, no warranties of any kind, either express or implied, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose, are made in relation to the accuracy, reliability or contents of this document. HMD Global reserves the right to revise this document or withdraw it at any time without prior notice.

To the maximum extent permitted by applicable law, under no circumstances shall HMD Global or any of its licensors be responsible for any loss of data or income or any special, incidental, consequential or indirect damages howsoever caused.

Reproduction, transfer or distribution of part or all of the contents in this document in any form without the prior written permission of HMD Global is prohibited. HMD Global operates a policy of continuous development. HMD Global reserves the right to make changes and improvements to any of the products described in this document without prior notice.

HMD Global does not make any representations, provide a warranty, or take any responsibility for the functionality, content, or end-user support of third-party apps provided with your device. By using an app, you acknowledge that the app is provided as is.

Downloading of maps, games, music and videos and uploading of images and videos may involve transferring large amounts of data. Your service provider may charge for the data transmission. The availability of particular products, services and features may vary by region. Please check with your local dealer for further details and availability of language options.

Certain features, functionality and product specifications may be network dependent and subject to additional terms, conditions, and charges.

All are subject to change without notice.

HMD Global Oy is the exclusive licensee of the Nokia brand for phones & tablets. Nokia is a registered trademark of Nokia Corporation.

HMD Global Privacy Policy, available at <http://www.hmd.com/privacy>, applies to your use of the device.

Android, Google and Google Play are trademarks of Google LLC.

The Bluetooth word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by HMD Global is under license.

All other trademarks are the property of their respective owners.