

**NOKIA**

# **Nokia 2660 Flip**

## **User Guide**

## Table of Contents

<b>1</b>	<b>About this user guide</b>	<b>4</b>
<b>2</b>	<b>Get started</b>	<b>5</b>
	Keys and parts . . . . .	5
	Set up and switch on your phone . . . . .	6
	پاںے نو ف وک چاچ وک نو ف نو پاںے . . . . .	9
	Keypad . . . . .	9
<b>3</b>	<b>تام اعی پ روا طب اور، سی لاک</b>	<b>11</b>
	Calls . . . . .	11
	Contacts . . . . .	11
	Send messages . . . . .	12
<b>4</b>	<b>سی ئان ب ی تا ذ وک نو ف نو پاںے</b>	<b>13</b>
	Change tones . . . . .	13
	Change the look of your home screen . . . . .	13
	Accessibility . . . . .	13
<b>5</b>	<b>Camera</b>	<b>15</b>
	Photos and videos . . . . .	15
<b>6</b>	<b>Bluetooth</b>	<b>16</b>
	Bluetooth® connections . . . . .	16
<b>7</b>	<b>رٹ ی لوک لی ک روا رڈن لی ک، ی ژھگ</b>	<b>17</b>
	Alarm clock . . . . .	17
	Calendar . . . . .	17
	Calculator . . . . .	17
<b>8</b>	<b>Erase your phone's data</b>	<b>18</b>
	Restore factory settings . . . . .	18

<b>9 Product and safety information</b>	<b>19</b>
آپ کی حفاظت کی لکھی گئی ہے . . . . .	19
لیکھی گئی ہے کہ اس سے بچیں . . . . .	22
لیکھی گئی ہے کہ اس سے بچیں . . . . .	22
لیکھی گئی ہے کہ اس سے بچیں . . . . .	23
لیکھی گئی ہے کہ اس سے بچیں . . . . .	24
Battery and charger information . . . . .	24
لیکھی گئی ہے کہ اس سے بچیں . . . . .	25
لیکھی گئی ہے کہ اس سے بچیں . . . . .	26
لیکھی گئی ہے کہ اس سے بچیں . . . . .	26
لیکھی گئی ہے کہ اس سے بچیں . . . . .	26
Protect your device from harmful content . . . . .	27
لیکھی گئی ہے کہ اس سے بچیں . . . . .	27
لیکھی گئی ہے کہ اس سے بچیں . . . . .	27
لیکھی گئی ہے کہ اس سے بچیں . . . . .	28
لیکھی گئی ہے کہ اس سے بچیں . . . . .	29
Copyrights and other notices . . . . .	29
Online safety . . . . .	30

# 1 About this user guide




**Important:** For important information on the safe use of your device and battery, read “Product and safety information” before you take the device into use. To find out how to get started with your new device, read the user guide.

## 2 Get started

### KEYS AND PARTS

#### Your phone

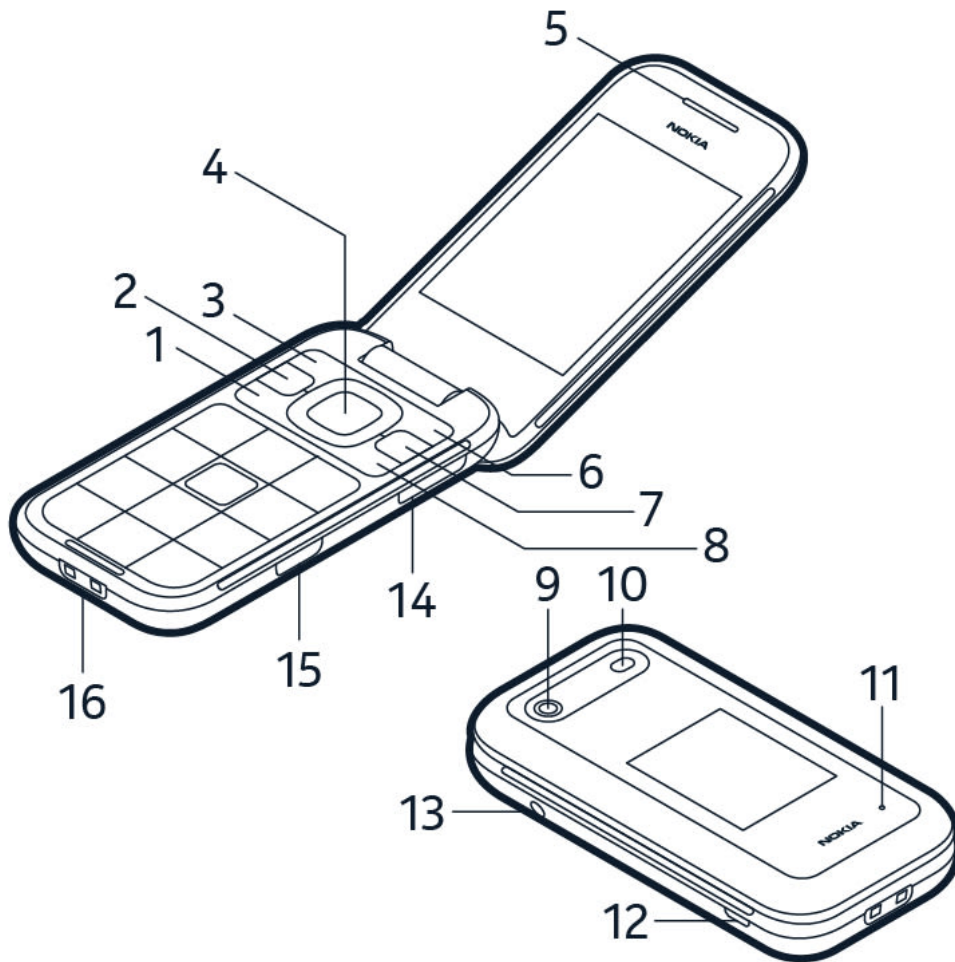

This user guide applies to the following models: TA-1469, TA-1474, TA-1480, TA-1478, TA-1491.

- |                        |                               |
|------------------------|-------------------------------|
| 1. Call key            | 9. Camera                     |
| 2. Shortcut key        | 10. Flash                     |
| 3. Left selection key  | 11. Microphone                |
| 4. Scroll key          | 12. USB connector             |
| 5. Earpiece            | 13. Headset connector         |
| 6. Right selection key | 14. Volume keys               |
| 7. Back key            | 15. SOS call key              |
| 8. Power/End key       | 16. Charging cradle connector |

Do not connect to products that create an output signal, as this may damage the device. Do not connect any voltage source to the audio connector. If you connect an external device or headset, other than those approved for use with this device, to the audio connector, pay special attention to volume levels. Parts of the device are magnetic. Metallic materials may be attracted to the device. Do not place credit cards or other magnetic storage media near the device, because information stored on them may be erased.

Some of the accessories mentioned in this user guide, such as chargers, headsets, or data cables, may be sold separately.



**Note:** You can set the phone to ask for a security code to protect your privacy and personal data. Select **Menu** > **Settings** > **Security** > **Keyguard** > **Security code** and enter a code. Note, however, that you need to remember the code, as HMD Global is not able to open or bypass it.

## SET UP AND SWITCH ON YOUR PHONE

### SIM ورکئام




هت اس ےک (سئامرف هظحال م ری وصت) ڈراک SIM ورکئام فرص وک ےل آسا **مہا** لامعتسا اک ڈراک SIM ری ذپ تقباطم ریغ۔ ےہ ایگ ایان ب ےئلیک ےنرک لامعتسا اتکسرک عئاض اٹي ڈھدرک ھرئخ ذرپ ڈراک روا ےہ اتکس اچنہ پ ناصقن وک ھل آ ای ڈراک ےم ےراب ےک لامعتسا ےک ڈراک SIM ےل او ٹؤا ٹک UICC ونین ینابرم ےئارب۔ ےہ ےرک ھروش م ےس رٹیرپ آ لئابوم ےنپا




روا رچراچ روا ےرک دن ب وک ےل ھشيمہ لبق ےس ےنلاکن روک ےھب ےئوک **ٹون** ازجا کنارٹکيل نارود ےک ےنرک ليدبت روک۔ ےرک عطقنم وک ےل ےرسود ےسک ےرک لامعتسا اي ےرک ررک اگل روک ھشيمہ وک ھل آ۔ ےرک زيهرپ ےس ےنوهچ وک

## Open the back cover

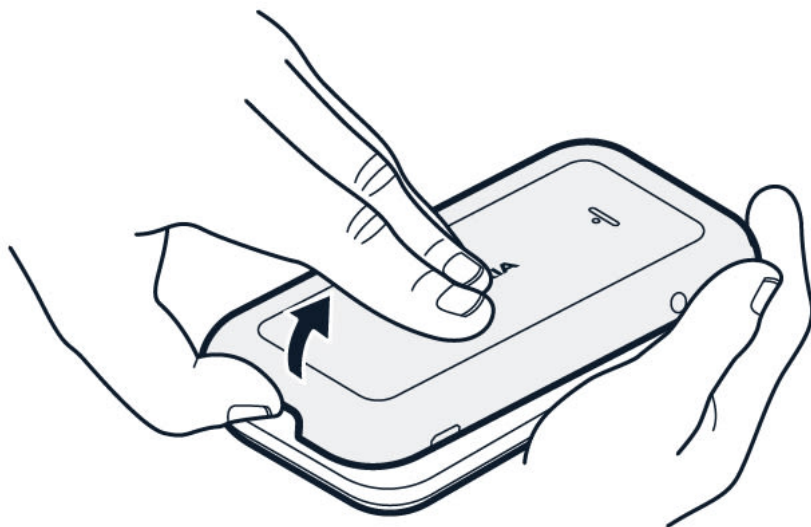


1. Put your fingernail in the small slot at the top of the phone, then lift and remove the cover.
2. If the battery is in the phone, lift it out.

## Insert the SIM card

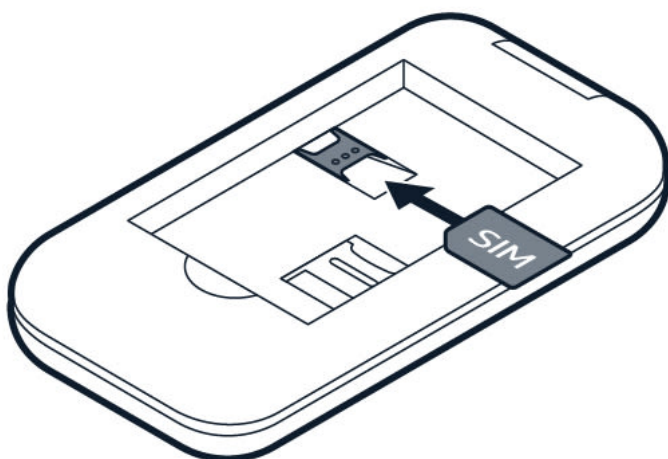

Slide the SIM card in the SIM card slot with the contact area face down.

## Insert the second SIM

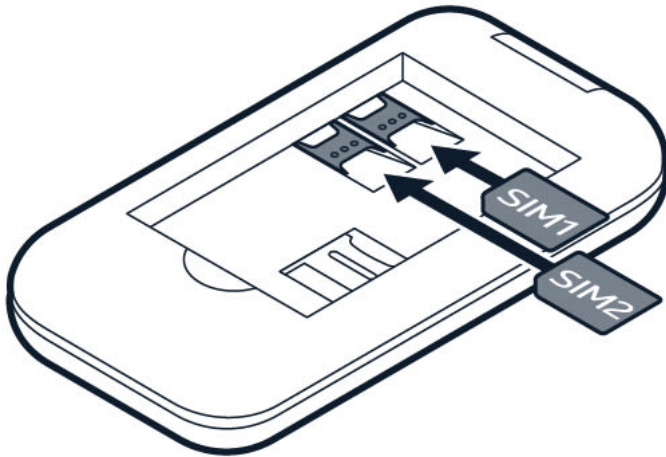


If you have a dual-SIM phone, slide your SIM card in the SIM1 slot and the second SIM in the SIM2 slot. Both SIM cards are available at the same time when the device is not being used, but while one SIM card is active, for example, when making a call, the other may be unavailable.



**Tip:** To find out if your phone can use 2 SIM cards, see the label on the sales box. If there are 2 IMEI codes on the label, you have a dual-SIM phone.

## Insert the memory card

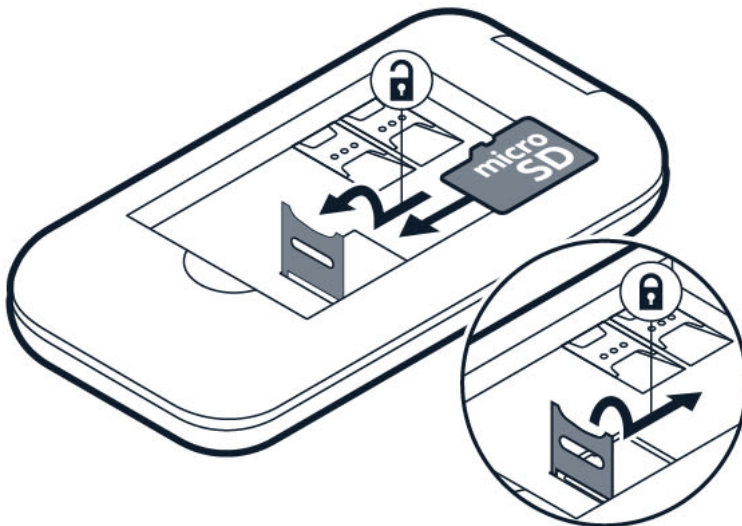

1. Slide the memory card holder down and open it up.
2. Place the memory card in the slot.
3. Close down the holder and slide it up to lock it in place.
4. Put back the battery.
5. Put back the back cover.



**Tip:** Use a fast, up to 32 GB microSD memory card from a well-known manufacturer.

## سیرک ولچ نوف انپا

سیرک ولچ نوف انپا رو ایئابد نٹب اک

## سیرک چراچ وک نوف نپا

نوف انپا رگم هه ایگ ایگ چراچ سیرک ولچ نپا رپ روط یوزج وک سیرک ولچ نپا رپ آ  
سیرک ولچ نپا رپ روط یوزج وک سیرک ولچ نپا رپ آ سیرک ولچ نپا رپ آ سیرک ولچ نپا رپ آ

## سیرک چراچ سیرک ولچ نپا

1. سیرک ولچ نپا رپ روط یوزج وک سیرک ولچ نپا رپ آ
2. رپ روط یوزج وک سیرک ولچ نپا رپ آ سیرک ولچ نپا رپ آ سیرک ولچ نپا رپ آ

سیرک ولچ نپا رپ روط یوزج وک سیرک ولچ نپا رپ آ سیرک ولچ نپا رپ آ سیرک ولچ نپا رپ آ



**نوٹ:** سیرک ولچ نپا رپ روط یوزج وک سیرک ولچ نپا رپ آ سیرک ولچ نپا رپ آ سیرک ولچ نپا رپ آ

## KEYPAD

### Use the phone keys

- To see your phone's apps and features, select **Menu** on the home screen.
- To go to an app or feature, press the scroll key up, down, left, or right. To open an app or feature, press the scroll key.
- To go back to the home screen, press the end key —.
- To change the volume of your phone during a call or when listening to the radio, press the volume keys.

## Lock the keypad

To lock the keys, close the fold. To unlock the keys, press the scroll key and select **Unlock** > **\***.

## Type with the keypad

Press a key repeatedly until the letter is shown.

To type in a space press the 0 key.

To type in a special character or punctuation mark, press the asterisk key.

To switch between character cases, press # repeatedly.

To type a number, press and hold a number key.

To remove a character, select .

## 3 تمام اغی پ روا ط باور، سی لاک

### CALLS

#### سی لاک

سی لاک ہق یرط اک سے نرک لاک سے عیرذ کے نو ف سے ئے ن سے پ-

1. کے سے نرک چرد وک رٹ کی رکی + سے ئے ل کے سول لاک می م اوق ال ا نی ب - سی لاک چرد رب من نو ف سے ئے ل سے - سی لاک \* ہ ع ف د و د سے ئے ل سے -
2. سی لاک بخت نم ڈراک SIM ال او سے ناک سے ئے ل م عت سا رپ سے نھ چوپ - سی لاک ب د -
3. سی لاک ب د سے ئے ل سے کے سے نرک م تخ لاک -

#### سی لاک باوچ لاک

سی لاک ب د -

### CONTACTS

#### Add a contact

1. Select **Menu** > **Contacts** > ≡ > **Add new contact** .
2. Select where to save the contact.
3. Enter the name and the number.
4. Choose **Save** .

#### Save a contact from the call log

1. Select **Menu** > **Call history** , and scroll left to **Missed calls** , **Dialled calls** , **Received calls** or **Rejected calls** , depending on from where you want to save the contact.
2. Scroll to the number you want to save, select ≡ > **Add to Contacts** and select whether this is a new or an existing contact.
3. Select where you want to save the contact.
4. Add the contact's name, check that the phone number is correct, and choose **Save** .


## Call a contact

You can call a contact directly from the contact list.

1. Select **Menu** > **Contacts**.
2. Scroll to the contact you want to call.
3. Press the call key.

## SEND MESSAGES

### Write and send messages

1. Select **Menu** > **Messaging** > **+ New message**.
2. Type in a phone number or select  > **Contacts**, and select a recipient from your contacts list.
3. Scroll down and write your message.
4. Choose **Send**. If asked, select which SIM to use.

## 4 سیئان ب ی تا ذ وک نو ف ے ن پ ا

### CHANGE TONES

#### Set new tones

1. Select **Menu** > **Settings** > **Personalisation** > **Sounds**.
2. Scroll to the tone that you want and select **OK**.

### CHANGE THE LOOK OF YOUR HOME SCREEN

#### Choose a new wallpaper

You can change the background of your home screen.

1. Select **Menu** > **Settings** > **Personalisation** > **Lock screen background** > **Wallpapers**.
2. Select the wallpaper you want.

### ACCESSIBILITY

#### Change the menu view


To select how the apps menu is shown on the screen, select **Menu** > **Settings** > **System** > **Main menu view** and select **3x3** to see 9 apps in the menu at the same time or **1x1** to see 1 app at a time. If you select **1x1**, scroll up or down to move between the apps.

#### Add your ICE details

To be able to make SOS calls, you need to add your ICE (In Case of Emergency) details.

1. Add your personal details: select **Menu** > **Settings** > **Device** > **ICE information** > **Basic info** and **Important Information**.
2. Select the contacts to whom the SOS call is made: select **Menu** > **Settings** > **Device** > **SOS** > **ICE contacts**, and select the ICE contacts from your contacts list. Note that you cannot use official emergency call numbers as your ICE contacts.
3. Before you can make SOS calls, you need to enable them. Select **Menu** > **Settings** > **Device** > **SOS** > **SOS settings**, and switch **SOS call** on.

## **Make an SOS call**

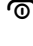Press and hold the SOS call key for a few seconds. The phone calls your first ICE contact. If the contact doesn't answer in 25 seconds, the phone calls the next contact, and keeps calling your contacts until one of them answers the call, or you press . Note: When the SOS call is answered, the phone goes to handsfree mode. Do not hold the phone close to your ear, as the volume may be very loud.

## 5 Camera



### PHOTOS AND VIDEOS

#### Take a photo

1. Select **Menu** > **Camera**.
2. To zoom in or out, scroll up or down.
3. To take a photo, press the scroll key.

To see the photo you just took, on the home screen, select **Menu** > **Gallery**.

#### Record a video

1. To switch the video camera on, select **Menu** > **Camera** and scroll to .
2. To start recording, press the scroll key.
3. To stop recording, select .

To see the video you just recorded, on the home screen, select **Menu** > **Video**.

## 6 Bluetooth

### BLUETOOTH® CONNECTIONS

#### Switch on Bluetooth

1. Select **Menu** > **Settings** > **Connectivity** > **Bluetooth**.
2. Switch **Bluetooth** on.
3. Select **Devices found** > **Add new device**.
4. Scroll to the found device and select **Pair**. If asked, confirm the passcode.

## 7 رٹیلوکی ک روا رڈنلی ک، یڑھگ

### ALARM CLOCK

#### Set an alarm

1. Select **Menu** > **Alarm clock**.
2. Select **+New alarm**.
3. Use the number keys to set the time.
4. Set the details for the alarm, if needed.
5. Choose **Save**.

### CALENDAR

#### Add a calendar event

1. Select **Menu** > **Calendar**.
2. Scroll to a date, and select **Options** > **Add new schedule**.
3. Enter the event details and select **Save**.

### CALCULATOR

#### Use the calculator

1. Select **Menu** > **Calculator**.
2. Enter the first factor of your calculation, use the scroll key to select the operation, and enter the second factor.
3. Press the scroll key to get the result of the calculation.

Select  to empty the number fields.

## 8 Erase your phone's data

### RESTORE FACTORY SETTINGS

#### سیری ٹیسی ر وک نوف ے نپا

پا تق و سا۔ ے ات کسرک دنب انید باوج نوف اک پآ روا سی ے تکسوہ عقا و تا تاداح  
ی رہی ہک ے ہر دای رگم، سی ے تکسرک لاجب وک تا بی ترتی رٹکی فی لصا کی نوف  
عئاض وک تا بی ترتی تا ذروا اٹی ڈمامت ہظوف حم سی م ہظفاح نوف کے پآ ٹیسی  
ے ے تی تدرک۔

ی جن مامت ہک سی ئامرف ہظحال م وت سی ے ہررک سی ساکن کی نوف ے نپا پآ رگا  
ے ے یراد ہمذ کی پآ انرک فذح وک تا لومشم۔

ے ے ہاچ ان وہ ڈوک تی ظافح ساپ کے پآ ے لکی کے نرک لاجب وک تا بی ترتی لصا

1. سیری بختنم سیری لاجب تا بی ترتی رٹکی فی > > > ویسی م۔
2. ے سی ہن قی دصت دی زم دعب کے ے نرک بختنم کی ہٹ۔ سیری جرد ڈوک تی ظافح  
ے ے اتاج ای د اٹم وک اٹی ڈمامت روا ے اتاج ای کی ٹیسی ر وک نوف۔



## تلخادم



ی ک س ج، ی ہ ے ت ک س و ہ س اس ح ے ل ے ک تلخادم ی ے ت ے ن پ ا ت ال آ س ی ل ر ی ا و م ا م ت  
ے۔ ے ی ت ک س و ہ ر ث ا ت م ی گ د ر ک ر ا ک ی ک ن ا ے س ہ ج و

## دارفالاہا کے تمدخ



۔ ی ہ ے ت ک س ر ک ت م ر م ا ی ب ی ص ن ت ی ک ہ ع و ن ص م س ا ی ہ دارفالاہا ر و ا د ن ت س م ف ر ص

## تالآی فاضا روا زجراچ، ای ر ی ب



ہ د ر ک ر و ظ ن م ی ک HMD Global Oy ف ر ص ے ل ی ک ف ر ص م ہ ت ا س ے ک ے ل آ ص و ص خ م س ا  
ت ا ع و ن ص م ی ل ا و ے ن ہ ک ر ہ ن ت ق ب ا ط م ۔ ی ر ک ل ا م ع ت س ا ت ال آ ی ف ا ض ا ر و ا ر ج ر ا چ ا ی ر ی ب  
۔ ی ر ک ہ ن ن ش ک ن ک ہ ت ا س ے ک





- سی ہک رک کش وک لے آ نپا  
کی ماسقا مامت روا می من، فیثکت  
تای ندعم سی تب و طرای تا عیام  
کنارٹ کی ل وچ سی تی تکس و ل ماش  
لی لحت ای دول آ گ نزوک سوٹ کرس  
سی ہ تے تی درک
- دن گ ای رپ سے دن هد وک لے آ  
سی رکن ل ماعت سا می س و قالع
- ہن سی م سوہ گ ج مرگ ہدای ز وک لے آ  
ای ہل آ سے ترارح ہ ج رد ی لعا۔ سی ہک  
ہے تی تکس و ہراکان ری رٹی ب
- سی م ترارح ہ ج رد ی ڈنھٹ ہدای ز وک لے آ  
نپا ہل آ ہی بج۔ سی رکن ظوف ح  
وت، ہ ات آ س پا و رپ ترارح ہ ج رد لمران  
تی تکس و ہ ادی پی می ر دن ا کے لے آ سا  
ہے تی تکس اچن ہ ناصقن وک سا روا ہے
- شش وک کی کے نل وھک وک لے آ سا  
ہک اسی ج کے سا سے اوس سی رکن ہن  
ہے یئی گ ی دی تادیادہ سی م ڈیئی اگ فراص
- می مرت سی م نا، انی ٹنی ا زاجم ریغ

ناصرقن وک نونو ف تال آ ی فاضا ای  
کے تال آ وی ڈی ر روا سی ہ تے تکس اچن ہ پ  
نی نونو قلع تم سے نرک لورٹن ک  
ہے تی تکس و ہ ی ہب ی زرو فالخی کی

- ان سی ئارگ ان وک لے آ ای ری رٹی ب  
سی ئال ہ سی ہن روا سی ئاگل برض  
اتکس ژوت سے سا و اترب ہ تسی ئاشان  
ہے
- لے لے کے نرک فاص حطس کی کے لے آ  
لامعت سا اڑپک کش وک روا، فاص، مرن  
سی رکن
- انرک ٹنی پ۔ سی رکن تم گنر رپ لے آ  
زیرگ سے سے نرک ماک رپ روط بسانم  
ہے اتکس رکن
- سی سی طانقم ای سی سی طانقم وک لے آ  
سی ہک ر رود سے س و عطق
- نھک ر ظوف ح م ائی ڈی مہا انپا  
ہدح ی ل ع و د م ک ز م ک وک سا، سے لے لے کی  
پا سے سی ج، سی رکن ظوف ح م سی م سوہ گ ج  
مہا ای ری وی پ م کی ای ڈراک ہ ظفاح، ہل آ اک  
سی لھکل تامولعم

مرگ تی اہن۔ سے ماع ہی سی م سوت روص رثکا۔ ہے اتکس و ہ مرگ ہل آ نارود کے لمع بمل  
ہے اتگل لے نرک ماک سے ہتس ہ آ دوخ ب دوخ ہل آ، سے لے لے کی کے نرک زیرگ سے سے نونو  
ہل آ۔ ہے اتاج و ہ دن ب رپ سے نرپ ترورض روا ہے اتکور گن ج راج، ہے اترکن دن ب زمارگ ورپ  
تلوہس کی س ورس دن تسم نی رت بیرق سے سا وت، ہے اہرکن سی ہن ماک رپ روط بسانم  
سی ئی اچ لے رپ

## ل کی ئی اس یر



وک داوم گنجی کی پی روا سی ری رٹی ب، تا عون صم کنارٹ کی ل ا ہدش لامعت سا نپا  
لباقان پآ سے حرط سا۔ سی رکن س پا و رپ سوہ گ ج کی کے نرک اٹھکا صوصخم ہشی مہ

اک لامعتسا رھپ بسانم کے لئ اس و روا یی ہ ے ترک ماہت کوری ک عایض لورٹنک کنارٹکی ل روا لکی رٹکی ل۔ یی ہ ے ترک یی ازا فل صوح ی کے نرک تسب و دن ب (می شینگ می روا، لی ٹس، مینی مولی، ابنا تے سی ج) داوم ی تمیق ی م تاع و ن صم۔ یی ہ لاماش ی ہب (می ڈی لی پ روا، ی دن اچ، انوس ے سی ج) یی تاہدی گنہم ہوالع کے۔ ے اتک ساچ ای ک ل احب رپ روط کے یی ان اوت روا داوم وک داوم مات کے کے ل آ

## تمالعی کی رکوٹ رادی ہی ہدش سارک

### Crossed-out wheelie bin symbol



پآ وچ تمالعی رکوٹ ی دری گل سارک سی م گنکی پ ای بدای رٹی ب، ہ ع و ن صم کے پآ کے نرک متخ ماکس ای رٹی ب روا تاع و ن صم کنارٹکی ل مات ہک ے ہی تال دای وک ے گے ٹناہچ ریغب وک تاع و ن صم نا۔ ے یی ہاچ ے ناچ ے کی کے ہٹکا ہدحیلع دعب ے یی کی گنکی یی اس ی ر وک نا: یی اگل ہن ے نا کھٹ رپ روط کے کے ل ضف یی ت ای دل ب تامولعم قلعتم کے ٹناؤپ گنکی یی اس ی رنی رت ب یرق کے پآ۔ یی اچ لے ل۔ یی رکوٹ عوجر ے س یٹراہٹا ہل ضف یی ماقم ے نپا ے یی کی

## BATTERY AND CHARGER INFORMATION

### Battery and charger information

To check if your phone has a removable or non-removable battery, see the printed guide.

**Devices with a removable battery** Only use your device with its original rechargeable battery. The battery can be charged and discharged hundreds of times, but it will eventually wear out. When the talk and standby times are noticeably shorter than normal, replace the battery.

**Devices with a non-removable battery** Do not attempt to remove the battery, as you may damage the device. The battery can be charged and discharged hundreds of times, but it will eventually wear out. When the talk and standby times are noticeably shorter than normal, take the device to the nearest authorised service facility to have the battery replaced.

Charge your device with a compatible charger. Charger plug type may vary. Charging time can vary depending on device capability.

## Battery and charger safety information

Once your device is fully charged, unplug the charger from the device and electrical outlet. Please note that continuous charging should not exceed 12 hours. If left unused, a fully charged battery will lose its charge over time.

Extreme temperatures reduce the capacity and lifetime of the battery. Always keep the battery between 15°C and 25°C (59°F and 77°F) for optimal performance. A device with a hot or cold battery may not work temporarily. Note that the battery may drain quickly in cold temperatures and lose enough power to switch off the phone within minutes. When you are outdoors in cold temperatures, keep your phone warm.

Obey local regulations. Recycle when possible. Do not dispose as household waste.

Do not expose the battery to extremely low air pressure or extremely high temperature, such as disposing of it in a fire, as that may cause the battery to explode or leak flammable liquid or gas.

Do not dismantle, cut, crush, bend, puncture, or otherwise damage the battery in any way. If a battery leaks, do not let the liquid touch the skin or eyes. If this happens, immediately flush the affected areas with water or seek medical help. Do not modify, attempt to insert foreign objects into the battery, or immerse or expose it to water or other liquids. Batteries may explode if damaged.

Use the battery and charger for their intended purposes only. Improper use or use of unapproved or incompatible batteries or chargers may present a risk of fire, explosion, or other hazard, and may invalidate any approval or warranty. If you believe the battery or charger is damaged, take it to a service centre or your phone dealer before continuing to use it. Never use a damaged battery or charger. Only use the charger indoors. Do not charge your device during a lightning storm. When charger is not included in the sales pack, charge your device using the data cable (included) and a USB power adaptor (may be sold separately). You can charge your device with third-party cables and power adaptors that are compliant with USB 2.0 or later and with applicable country regulations and international and regional safety standards. Other adaptors may not meet applicable safety standards, and charging with such adaptors could pose a risk of property loss or personal injury.

To unplug a charger or an accessory, hold and pull the plug, not the cord.

Additionally, the following applies if your device has a removable battery:

- Always switch the device off and unplug the charger before removing any covers or the battery.
- Accidental short-circuiting can happen when a metallic object touches the metal strips on the battery. This may damage the battery or the other object.

## چے ٹوہچ

لماح کے کے زرپے ٹوہچ ہی۔ ہی ہن نے نولھک تالآی فاضا کے سا روا ہلآ اک پآ  
ہی۔ ہی ہک ررود سے سچنہ پ کی کی وچب ٹوہچ ہی ہن۔ ہی ہتک س وہ

## تال آى ب ط

ک نورٹکی ل ا ہدرک م ہارف ڈلیش ی فاک ان ای ہدرک ب ص ن ر پ روط ب سانم ری غ ی م س وی ژاگ ہل آى ب ط ای نی ش ی ز ف ی سک ۔ ہ ی ہ ت ک س ر ک ر ث ا ت م ز ل ن گ س ی ئ ای ڈی ر و ک ز م ٹ س س ی ن و ر ی ب ہ ی ای ا ہ ک ی ل ی ک ن ر ک ن ی ع ت ا ک ر م ا س ا ی ر ک ہ ر و ش م س ر ا ک ت ع ن ص ک ی ۔ ہ ی ہ ت ہ ک ر ت ی ح ا ل ص ی ف ا ک ی ک گ ن ڈ ل ی ش ای و ا چ ب س ی ئ ا ن ا و ت و ی ڈی ر

## تال آ ل کی ڈیم ی گ ی ل خ ا د ی م مس ج

ش ر ا ف س ر ا ک ت ا ع و ن ص م ک تال آى ب ط ی ل ی ک ن ر ک ز ی ر گ س ت ل خ ا د م ی ن ا ک م م ک ن ی ب ا م ک ہ ل آى ب ط ای گ ای ک ل خ ا د ی م مس ج ر و ا ہ ل آ س ی ل ر ی ا و ہ ک ی ہ ت ر ک س ا پ ک ن ج ص ا خ ش ا ۔ ہ ی ر و ر و ض ا ن و ہ ہ ل ص ا ف ا ک (ر ٹ ی م ی ٹ ن ی س 15.3) چ ن ا 6 م ک ز ا ی ئ ہ ا چ و ک و ہ تال آ س ی :

ی ک ہ د ا ی ز س (ر ٹ ی م ی ٹ ن ی س 15.3) چ ن ا 6 س ہ ل آى ب ط و ک ہ ل آ س ی ل ر ی ا و ہ ش ی م ہ ی ۔ ہ ی ہ ک ر ر پ ی ر و د

- ی ر ک ز ی ر گ س ن ہ ک ر ہ ل آ س ی ل ر ی ا و ی م ب ی ج ی ل ا و ن ی س ۔
- ی م ا ہ ت ہ ت ا س ک ن ا ک ف ل ا خ م ک ل آى ب ط و ک ہ ل آ س ی ل ر ی ا و ۔
- ی ہ ر و ہ ع ق ا و ت ل خ ا د م ہ ک و ہ ک ش ی ہ ب ا س ا ر ز و ک پ آ س ا ر گ ا ی د ر ک د ن ب ہ ل آ س ی ل ر ی ا و ہ ۔
- ی ک ت ا ی ا د ہ ی ک ر ا ک ع و ن ص م ق ل ع ت م ک تال آى ب ط ی ل ی گ ی ل خ ا د ی م مس ج ۔ ی ر ک ی و ر ی پ ۔

ی س ک ی م س ر ا ب ک ی گ د و ج و م ی ک ہ ل آ س ی ل ر ی ا و ہ ت ا س ک ہ ل آ ل ک ی ڈی م و ک پ آ ر گ ا ہ ر و ش م س ر ا ک ای ہ م ت ح ص ی ت ظ ا ف ح ن پ ا و ت و ہ ت ر و ر و ض ی ک ت ح ا ض و ی ک م س ق ی ر ک ۔

## ت ع ا م س



ی ک ن ن س و ک و ز ا و ا ی ن و ر ی ب ی ک پ آ ن ا ر و د ک ن ر ک ل ا م ع ت س ا ٹ ی س ڈی ہ : ہ ی ب ن ت ی ت م ا ل س ی ک پ آ ا ہ ج ی ر ک ن ہ ل ا م ع ت س ا ٹ ی س ڈی ہ ۔ ہ ی ت ک س و ہ ر ث ا ت م ت ی ح ا ل ص ۔ و ہ ا ت ک س و ہ ق ح ا ل ہ ر ط خ و ک

۔ ہ ی ہ ت ک س ر ک ت ل خ ا د م ہ ت ا س ک تال آ ی ل خ ا د ی م مس ج ، تال آ س ی ل ر ی ا و ض ع ب

## PROTECT YOUR DEVICE FROM HARMFUL CONTENT

Your device may be exposed to viruses and other harmful content. Take the following precautions:

- Be cautious when opening messages. They may contain malicious software or otherwise be harmful to your device or computer.
- Be cautious when accepting connectivity requests or browsing the internet. Do not accept Bluetooth® connections from sources you do not trust.
- Install antivirus and other security software on any connected computer.
- If you access preinstalled bookmarks and links to third party internet sites, take the appropriate precautions. HMD Global does not endorse or assume liability for such sites.

## سایٹاگ

ظوفحم رپ روط بس انمان ای بصن سے سے قی رطت سردری غ می سویٹاگ لن گس ویڈی رینی پائے لیلی کتامول عم دی زم۔ یہ سے تک سرک رثا تم وک تاماظن کنارٹکی لاد رکلے لآ یہ دارفا لہا فرص۔ ریرکی کی چھت اس کے سول او سے انب تال آ کے یٹاگ ای یٹاگ وک پآ روا سے یہ تکس وہ کانرطخ بیصنت صقان۔ یہ سے تک سرک بصن می یٹاگ وک چناج کی تاب سا ہت اس کے کی گدعاق اب۔ سے یہ تکس رک رثوم ریغ وکی ٹنراوی کی سے حیح ص روا یہ سے یئی گے یئی اگل تال آ سی لرئی او مامت می یٹاگ کی پآ ہک سی رک سچ سی ہکر ہن می سے ناخی سا وک داوم زیخ ہکام ہد ای ریگ شت آ۔ یہ سے ہررک ما کے کوالی پھپ کے گی ب کے او۔ وہ تامل زاول/تال آ فیاضا ای سے ص کے سا، ہل آ می سے۔ ہکر ہن یی ہبک تال آ فیاضا ای ہل آ ان پآ می سے قالع

## لوحام زیخ ہکام ہد رپ روط یناکم

کراپ سا۔ پمپ لورٹ پی سے سی ج، ریرک دن ب ہل آ ان پآ می لوحام زیخ ہکام ہد ہن کمم، تیح ای ناصقن ینام سچ می ہج تی تن کے سچ سے اتکس وہ ببس اک گآ ای ہکام ہد ون اخی راک کے داوم یوای می کی، سوقالع لے او نھدن یا۔ سے یہ سے تکس وہ عق او یی ہب توم ہک ہکام ہد سے ردق۔ ریرک لمع رپ سوی دن باپ، وہ ریرک ہکام ہد ساہج ای می سے۔ سے ت وہ ہدز نا شن رپ روط حضا و رثکا رگم سی ہن ہشی مہ سے قالع کے لوحام زیخ اتاج اہک وک سے نرک دن ب نچنا ان پآ سے پآ ساہج سی یہ سے ت وہ سی ہگ ج ہو ہی رپ روط ماع ہری خذ ای لی سرت کی داوم یوای می کی، کی ڈ کے سے ص لچن سی سوی ت شک؛ سے سویٹاگ نا۔ وہ تارڈ ای داوم یوای می کی سی او ساہج سی ہگ ج کی سی او سے نرک سی گ می لورٹ پی عیام سی م نچ سے یئی ہاچ انرک کی چھت اس کے ناگ دننک رایت کے ای آ ہک سے لیلی کے سے نناج ای (نیٹ وی ب ای نی پورپ ہک آسی ج) سے اتاج ای کی لامعت سا سے۔ اتکس اج ای کی لامعت سا رطخ و فوخ بے کی دزن کے نا ہل آ ہی

## (SAR) تاملولعم ی کی قی دصت

تایادھ امنهری موقالانی ب ی کی وچب سے سررض کے سورهل یئی ای ڈیر لڈام هی اک نوف  
-هے قباطم نی ع کے-

هے ای گ ای انب حرطسا هی -هے روی سیر روا رٹی مسنارٹ وی ڈیر کی اهل آ لئی ابوم اک پآ  
نی ب قلعتم سے سهروهظ کے (سوبعش ی قریب ی سنئی وکی رف وی ڈیر) سورهل یئی ای ڈیر هک  
رزوپس کی اهدرک شرافس کے ICNIRP می ظنت ی سنئی اس دازا سولوصا امنهری موقالانی  
ی شئی اجنگ ی تظافح هدا ی زی فاک ی می تایادھ امنه رنا -هرک هن زواجت سے س دودح ی  
انانب ی نی قی تظافح ی صاخشا مامت، تححص روا رمع ظاحل ال ب، دصقم اک نج سی ه  
کے SAR ای، هبذاج حرش صوصخم وج هه هبذاج حرش صوصخم لوصا امنهر هی -هے  
ی لاولی م مسج ای رس نارود کے لی سرت ی کے له آ هک وج، سی ه ی نبم رپ سورای عم  
سی م تایادھ امنهر ICNIRP -هے حالطصا اک رادقم ی کی تقاط ی کی سنئی وکی رف وی ڈیر  
کے سویلخی نامسج مارگ سد دح ی کی SAR لئی لئی ابوم کے لامعتسا ی موع  
-هے مارگ ولک/ٹ او ۲،۰ رپ بسانت

سے بس نارود کے تایرشن ی کے له آ سا سی م لامعتسا تلاح ی کی تایلمع یرای عم  
رپ سوڈنی ب ی سنئی وکی رف هدومزا مامت رپ حطس ی کی توق هدرک قی دصت هدا ی ز  
-سی هی ی گ ی کی تاشئی امزا ی کی SAR هبذاج حرش نارود کے لامعتسا

سے مسج وک سا ب ج هے اتوه قباطم کے تایادھ امنه ر ی کی رزوپس کی RF له آ هی  
، روک یئی وک لئی لئی کے اج ی ل ب ج -هے ای ا هکر رود (رٹی م ی ٹن س 1.5) چنا 5/8 م ک زامک  
، هے ای کی لامعتسا رڈلوه اک مسق هرسود لئی لئی کے نه انگل رپ مسج ای پلک ٹلی ب  
نای ب رپوا سے مسج کے پآ له آ روا هے ای هچ ی نو هی نه لماش تاهد یئی وک سی م سا وت  
-هے ای هچ انوه رپ له ل صاف هدرک

کے یئی وک ی هچا کی ا سے کرو ٹنی لئی لئی کے نه جی هب تاملو پی پی ای ای ٹی ڈی  
اسی اکت ب ج هے ی تکسوه ریخات سی م نه جی هب -هے ی توه ترورض ی کی نشکنک  
یوری پی کی تایادھ هقلعتم سے سول صاف ی لاصفنا -هے ای هچ وه نه با ی تسد نشکنک  
-هے ای هچ وه نه لمکم انجی هب کت ب ج ی رکی

مک سے ویلی وی یئی گ ی کی نایب ال اب جرد رپ روط ماع ویلی و SAR، نارود کے لامعتسا ماع  
ٹی ن روا لئی لئی کے دصاقم کے ی گدرک راک ی کی ماضن، هک هے هی هج وکی سا -هے ی توه  
کی نه رکی ماک کے لئی ابوم کے پآ، لئی لئی کے نه رکی ماک وک تلخادم رپ کرو  
هن ترورض ی کی تقاط ی روپی لئی لئی کے نه رکی لاک ب ج هے ی تاجوه مک دوخ بدوخ تقاط  
-هے ی توه مک ی هب ویلی و SAR، هی ی توه مک تقاط ی کی ٹپ ٹوآ ب ج -وه

بی بی کرت -هی هے ی تکسوه ویلی و هدا ی ز سے کی ا روا زنژرو فل تخم ی کی زلڈام کے له آ  
کے SAR راهبکی هبکی روا هی هے ی تکس لذب هتاس هتاس کے تقو نی ازی ڈ روا ازا ج  
-هی هے ی تکسوه زادنا رثا رپ ویلی و

سی م تال آ لئی ابوم لکی رکی ٹون -هی ای ا ج رپ [www.sar-tick.com](http://www.sar-tick.com) لئی لئی کی تاملولعم دی زم  
-هے ی تهه ری راج ی هب ریغب کے لاک ی توص لی سرت

تاملولعم ی سنئی اس هدوجوم هک هے ای کی نایب نه (WHO) نشی زئی انگرآ هتله ی ه ڈلرو  
ری بادت ی طای ح صاخ یئی وک نارود کے نه رکی لامعتسا تال آ لئی ابوم قباطم کے

وت ہی ہتھکری پس چلدی میں نے نرک مک رزو پس کی اپا رگا۔ ہے ہی ہن ترورض کی مک لامعتسا اپا لے لے لے آسے رس روا مسج ہک ہے زی وچت کی نا تامول عم دی زم میں ہے راب کے رزو پس کی RF۔ میں رک لامعتسا ٹکی ر ف زڈنی ہ ای میں رک ٹی اس بی و اک WHO رپ [www.who.int/peh-emf/en](http://www.who.int/peh-emf/en) لے لے لے کو ت حاضو روا تاحی رشت روا میں رک ہظ حال۔

## میں ہے راب کے ماظتنا کے قوقح لٹی جی ڈ

زئاج کے سورسود روا تعاطا کی نی ن اوق مامت وت، وہ ہے ہررک لامعتسا ہل آ ہی پآ بج وک پآ تاظفحت ٹیاری پاک۔ میں رک مارتحا اک ٹیاری پاک لوم ش ب یرادزار روا قوقح نے لقتنم ای، نے نرک می مرت، نے انب ل قن کی اجا ہے رسود روا، یقی سوم، ری واصلت میں ہے تے کس کور سے۔

## COPYRIGHTS AND OTHER NOTICES

### Copyright

The availability of products, features, apps, and services may vary by region. For more information, contact your dealer or your service provider. This device may contain commodities, technology, or software subject to export laws and regulations from the US and other countries. Diversion contrary to law is prohibited.

The contents of this document are provided "as is". Except as required by applicable law, no warranties of any kind, either express or implied, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose, are made in relation to the accuracy, reliability, or contents of this document. HMD Global reserves the right to revise this document or withdraw it at any time without prior notice.

To the maximum extent permitted by applicable law, under no circumstances shall HMD Global or any of its licensors be responsible for any loss of data or income or any special, incidental, consequential, or indirect damages howsoever caused.

Reproduction, transfer, or distribution of part or all of the contents in this document in any form without the prior written permission of HMD Global is prohibited. HMD Global operates a policy of continuous development. HMD Global reserves the right to make changes and improvements to any of the products described in this document without prior notice.

HMD Global does not make any representations, provide a warranty, or take any responsibility for the functionality, content, or end-user support of third-party apps provided with your device. By using an app, you acknowledge that the app is provided as is.

Downloading of maps, games, music, and videos and uploading of images and videos may involve transferring large amounts of data. Your service provider may charge for the data transmission. The availability of particular products, services, and features may vary by region. Please check with your local dealer for further details and availability of language options.

Certain features, functions, and product specifications may be network dependent and subject to additional terms, conditions, and charges.

All information about specifications, features, and products is subject to change without notice.

The HMD Global Privacy Policy, available at <http://www.hmd.com/privacy>, applies to your use of the device.

HMD Global Oy is the exclusive licensee of the Nokia brand for phones & tablets. Nokia is a registered trademark of Nokia Corporation.

The Bluetooth word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by HMD Global is under licence.

This product includes open source software. For applicable copyright and other notices, permissions, and acknowledgements, select **\*#6774#** on the home screen.

## **ONLINE SAFETY**

### **Securing Multimedia Access**

Your phone can access multimedia content online using the Browser application built in. Your phone can also receive multimedia content using Bluetooth™ and MMS. You can restrict access to multimedia content using the “Parental Controls” feature.

[Enable Parental controls](#)